

# **Cognex Designer Release Notes 4.4.2**

2023 February 02 Revision: 4.4.2.41

# **Table of Contents**

Table of Contents	2
Release Information	3
Security Requirements for VisionPro	3
About this Release	3
PC Requirements	4
Operating System Requirements	4
Plugin Development Requirements	4
Cognex Vision Controller Requirements	
Web Browser HMI Requirements	
About the Cognex ViDi Suite of Tools	
Migrating to this Release	
Resolved Issues	
Behavior Changes and Known Issues	
Product and Upgrade Codes	
Supported Hardware	
Supported Acquisition Platforms and Communication Cards	
Supported Cameras and Sensors	
Designer Sample Projects	
Release History	
Cognex Designer 4.3 Release	
Cognex Designer 4.4 RP3 Release	
Cogney Designer 4.0 Polesce	
Cogney Designer 3.7 Polesce	
Cognex Designer 2.7 Release	
Release Migration History Previous Product and Upgrade Codes	
Cognex Designer 4.3	
Cognex Designer 4.2	19
Cognex Designer 4.1 PR2	19
Cognex Designer 4.0	20
Cognex Designer 2.7	20
Legal Notices	21

## **Release Information**

This section contains information about the current release of Cognex Designer and its release history.

## **Security Requirements for VisionPro**

VisionPro and Designer software require a USB security key attached to your computer to ensure the software is properly authorized for use. Refer to VisionPro documentation for the latest information on the minimum firmware required for this release.

If you are using a security key with a previous version of firmware, contact Cognex Support for assistance in upgrading to the latest version. Keep your security key firmware up to date to take advantage of the latest features and improvements to Cognex software security.

## About this Release

Cognex Designer 4.4.1 is a minor release to add the following features:

- Tested against VisionPro 9.8
- The ProjectDiff utility for comparing two projects side-by-side

See the topic How To...Identify Changes Between Projects on page 1.

· Project settings designed to reduce the time required to load your project

See the topic How To...Speed Up Project Loading on page 1.

• Command-line arguments providing various options for starting your deployed application or the Designer IDE.

See the topic How To ... Properties Shortcuts on page 1.

· Various enhancements to TCP devices.

See the topics TCP/IP Server on page 1 and TCP/IP Client on page 1.

New parameters for configuring a TwinCAT device

See the topic Configure a TwinCAT Device on page 1.

· SoftEvents to use as a Trigger for executing a Task

See the topic SoftEvents on page 1.

· Details on how to add entries to an Audit Trail

See the topic How To Add Entries to an Audit Trail Database on page 1.

· Updated XAML sample code for a page plugin

See the topic XAML Sample Code for a Page Plugin on page 1.

· Updated C# sample code for a page plugin

See the topic C# Sample Code for a Page Plugin on page 1.

Updated sample code to illustrate how to export data from a query to a CSV file.

See the topic Export Query Data to a CSV File on page 1.

Scripting functions for Tasks and SoftEvents

See the topics \$ Functions: Tasks on page 1 and \$ Functions: SoftEvents on page 1.

See the section Resolved Issues on page 5 for a full list of bug fixes in this release.

Note: See the Release History on page 13 for a complete list of all functionality introduced in the previous releases of Cognex Designer.

## PC Requirements

Your computer must meet minimum requirements to use Cognex VisionPro and Cognex Designer. Refer to the VisionPro Quick Reference, installed with your VisionPro software, for minimum hardware and OS requirements. Find the VisionPro Quick Reference from the Windows Start menu (**Cognex->VisionPro** ® **Quick Reference**).

Note: Be aware that VisionPro 9.8 requires Microsoft .NET Framework 4.7.2 but this Designer release depends on Microsoft .NET Framework 4.8.

Visit the <u>Cognex Designer Support</u> website for a complete list of compatible versions of Cognex VisionPro and Cognex Designer.

## **Operating System Requirements**

Microsoft Windows Operating System	Service Pack	English	German	Spanish	French	Japanese	Korean	Simplified Chinese
Windows 10 (64-bit)		1	1	1	1	✓	1	✓

## **Plugin Development Requirements**

The following requirements are necessary for developing plugins for Cognex Designer 4.4.1:

- Microsoft Visual Studio 2019 (16.8)
- Microsoft .NET Framework 4.7.2

Note: Microsoft Visual Studio 2013 is **NOT** supported on the Windows Embedded 8.0 OS used on Cognex Vision Controllers.

For detailed information about working with plug-ins, see the How To... Plugins topic.

## **Cognex Vision Controller Requirements**

For information regarding the Cognex Vision Controller requirements, please consult the <u>Cognex Designer Support</u> <u>Website</u>. The Technical Bulletins contain additional information about updating the Vision Controller to the latest release of both Cognex Designer and VisionPro.

## **Web Browser HMI Requirements**

Cognex recommends opening Web Pages developed in Cognex Designer with the following browsers:

- Google Chrome<sup>™</sup> browser, version 54 or greater
- Internet Explorer version 11

#### Note:

• For the best performance, Cognex recommends using Google Chrome version 54 or greater to view and interact with your Web-based HMI.



Due to issues in Internet Explorer and Google Chrome, displaying HMIs in Web Browsers for a long period
of time (multiple days) can result in the browser window being non-responsive or the browser crashing.
 Cognex recommends periodically restarting the Web Browser in this scenario.

## **About the Cognex ViDi Suite of Tools**

Cognex ViDi Suite uses deep learning to accomplish tasks not previously possible using traditional machine vision software libraries.

The Cognex ViDi Suite tools share a common engine, but each tool has a distinct focus:

- Localization (Blue Locate tool)
- · Cosmetic inspection (Red Analyze tool),
- · Classification (Green Classify tool)
- Hard-to-read OCR (Blue Read tool)

By using the ViDi plug-in, you enable deep learning integration capabilities with Cognex Designer.

See the ViDi documentation for complete information about the ViDi and Cognex Designer integration.

## Migrating to this Release

This topic contains information about changes that may affect existing projects when migrating projects from the previous release of Cognex Designer (Cognex Designer 4.3) to the current release of Cognex Designer (4.4.1).

Obsolete API

#### Change from:

void CSharpScriptDefinition.RefeshObjectNames()

to

int CSharpScriptDefinition.RefreshObjectNames()

Plugin should be recompiled and have the signature updated.

(i) Note: For more information about migrating from earlier releases, see Release History on page 13.

## **Resolved Issues**

A list of open issues in previous Designer releases that are fixed in this release.

Note: Change Request numbers (CR#) have been included (where applicable) to improve the tracking of issues reported to Cognex Technical Support.

CR#	Issue
CDVP-344	Added TCP Client events (OnConnected / OnDisconnected). OnDataReceived includes raw
	binary.
	See the topic TCP/IP Client on page 1 for details.

CDVP-1165	Fixed the ExampleElement plugin to be able to resize control. See the topic Sample Code for a Page Plugin on page 1 for details.
CDVP-1427	Ability to configure message format for TCP and Serial devices. See the topic RS232 on page 1 for details.
CDVP-1537	Add a project comparison tool to display differences between project versions. See the topic How ToIdentify Changes Between Projects on page 1 for details.
CDVP-1652	Fix a crash when starting the Web Server due to Intel CPUs with Performance and Efficiency cores.
CDVP-1660	Added missing Designer ImageFileCamera API to documentation
CDVP-1664	Added warning to log for any Toolblock script errors found on startup
CDVP-1666	Add support for configuring TCP KeepAlive messages through the user interface. See the topic TCP/IP Client on page 1 for details.
CDVP-1668	Added function \$System.Restart() to restart a deployed application.
CDVP-1670	Added a command-line argument, "/delay=###" to delay the start-up of Designer. See the topic How To Properties Shortcuts on page 1 for details.
CDVP-1672	Provide functionality to trigger soft events with an associated object. See the topic SoftEvents on page 1 for details.
CDVP-1673	Fixed a bug that would cause Designer to crash when opening the advanced data type editor with the Deep Learning plugin.
CDVP-1675	Fixed a bug that prevented the upgrading of a 2.6 project that contained a binary object.
CDVP-1678	Improved error message when OPC UA server certificate expires and fails to auto renew
CDVP-1680	Speed up Designer IDE loading. See the topic How ToSpeed Up Project Loading on page 1 for details.
CDVP-1683	Expose the ability to set the thread priority level of different threads.
CDVP-1686	Fix broken device paths. See the topic <u>Device Paths on page 1</u> for details.
CDVP-1691	Correctly escape characters when using the \$Databases.DB.Table.Query.DataSet.GetDataCsv (). See the topic <a href="Export Query Data">Export Query Data to a CSV File on page 1</a> for details.
CDVP-1718	Fixed Designer's Installer version of the ProcessorAffinityTool
CDVP-1722	Added VisionPro user guide link to the start page
RUT-526	Prevented TwinCat client device from loading large PLC variables, and instead warn the user before adding that symbol to a black list
RUT-527	Fixed issue with Performance Profiler GC0 and OnCompleted columns being swapped
L	

## **Behavior Changes and Known Issues**

Cognex Designer 4.4.1 introduces multiple new or changed capabilities since 4.4.

The following tables describe all known issues and notable changes in Cognex Designer behavior.

### **Changes in Behavior**

Behavior	Description
----------	-------------

Continuous task triggers are deprecated	As of release 4.4.2, the Continuous task trigger mode is deprecated.  Existing projects that used this task trigger will be automatically				
Warning when task trigger queue is full	converted to a default Timer Interval task trigger.  As of release 4.4.2, task trigger queues have a size limit. A warning is displayed when a task trigger fires while the task queue is full.				
	Tasks that use a Timer Interval task trigger with an interval that is shorter than its execution time, will quickly fill up the queue and result in a lot of warnings in the Designer log.				
Rounding used by the touchscreen	As of release 4.4.1, the rounding at midpoints used by the <u>touch keypad</u> has been changed from <u>Bankers' rounding / half</u> to <u>Round-away-from-zero</u> . Some examples:				
	Input	4.4.0	4.4.1		
	1.4	1	1		
	1.5	2	2		
	1.6	2	2		
	2.4	2	2		
	2.5	2	3		
	2.6	3	3		
OPC UA Server certificates expiration dates			-	Designer OPC UA Server certificate n one year to 10 years.	
Saving Images with the Image Recorder Block	As of release 4.4.1, Recording to a remote CDB file is no longer supported as an option on the Image Recorder Block when storing files remotely.				
Warning if AVX2 instruction set is not supported on PC	As of release 4.3.1, once a project is loaded, the Output window shows the following warning if the CPU of the computer running Cognex Designer does not support the Advanced Vector Extensions 2 (AVX2) instruction set:  AVX2 instruction set is not supported on this machine:  VisionPro 3D functionality will not be available.  In such cases, the 3D features of VisionPro will not be supported, and using them in the project can result in crashes or errors.				
Warning appears when license is about to time out	As of release 4.3.1, when using a Development License, Cognex Designer provides a warning 30 minutes before license expiration, allowing users to properly test and save their project in time.				
Updated .NET Framework version for Plugin development	As of release 4.3, developing plugins for Cognex Designer requires Microsoft .NET Framework 4.7.2 to be installed.				
Change in the default behavior of the VisionPro Display element	As of release 4.3, the VisionPro Display control element has been enhanced to auto-fit the images and graphics appearing on it.				
Changed image format shown on WebHMI	As of release 4.3, Cognex Designer sends 8-bit grayscale images to Web Pages instead of 24-bit grayscale images to improve performance.				

New Garbage Collection Method	As of release 4.1, Cognex Designer employs a background Garbage Collection technique by default for all new projects. This may result in longer task execution time in Test Mode than in earlier versions, such as 2.x. Therefore, always benchmark using a deployed application. See the Scheduling Garbage Collection topic for more information.
New Garbage Collection Method	As of release 4.1, Cognex Designer employs a background Garbage Collection technique by default for all new projects. This may result in longer task execution time in Test Mode than in earlier versions, such as 2.x. Therefore, always benchmark using a deployed application. See the Scheduling Garbage Collection topic for more information.
Legacy project sequences replaced with Sub Tasks	As of release 4.0, legacy Cognex Designer 2.x project sequences are replaced with a Sub Task.

### **Known Issues**

Issue	Description
Designer projects cannot be opened by multiple users on a shared drive	Designer project file permissions do not allow access by other user accounts. To work around this issue, choose either of the following actions:
	Make a copy of the project file and replace it in the same directory and replace it in the same directory from the user account attempting to access it
	Explicitly add a suitable user group to the file permissions with Full Control.
Designer crashes after 1 hour when using a DSMax camera with Web HMI enabled	Using a DSMax in a Designer project will crash after one hour if the Web HMI is enabled. To work around this issue, choose either of the following actions:
	Disable the WebHMI.
	Add the environment variable COGNEX_LOG_APG_FG1_DLL_ LEVEL and set the value to 5.
Unsupported ports when accessing the WebHMI with Google Chrome or Mozilla Firefox	The Enable Web Server setting (available through <b>Project &gt; Settings &gt; Web HMI</b> ) does not work with Google Chrome and Mozilla Firefox if the port is set to 79. Configure a different port number to solve this problem.
WebHMI Inactivity Timeout does not work in Test Mode	The Inactivity Timeout setting (available through <b>Project &gt; Settings &gt; Web HMI</b> ) currently only works when accessing a deployed project through a web browser, and does not work in Test Mode.
Handling Database files while creating, importing or deleting Databases	When creating, importing or deleting Databases in Cognex Designer, the following limitations apply:
	Removing a Database from a Cognex Designer project does not remove the underlying Database file.
	When you create or import a new Database, using the name that matches an existing *.db3 file will result in having the new Database loaded with the table structure of the previous database.

Auto-Camera detection limitation	Auto-Camera Detection only functions when Creating a New Project with Project Types.
Errors when handling large recipe configurations	In Recipes, when loading a large configuration (for example, the file size of the corresponding .json file is greater than 550M), an error such as Array dimensions exceeded supported range results.
Anti-Virus software	If anti-virus software is enabled for real-time protection it may also perform disk scans at a user-specified time. The disk scans may interfere with busy vision software applications. If so, consider disabling anti-virus software, or managing behavior in a manner appropriate for the application.
Expression Builder function does not get updated.	When an ItemAt (\$index, \$array) function is constructed in the Expression Builder, it will only update the returned value when the value of the \$index tag changes, or a new array is assigned to the \$array tag.  The following C# script statements illustrate how to trigger a value change event:
	<pre>\$index++; \$array = { "one", "two", "three" };</pre>
	The following C# script statement will not trigger a value change event:
	<pre>\$array[1] = "new value";</pre>
Test Mode changes on Pages persist in Program Mode	If an element on a Page (e.g. CheckBox, TextBox, etc.) is modified while in Test Mode, after exiting Test Mode, the element will not return to its state prior to entering Test Mode. To do so, the Designer OnStartup Script must be used to explicitly set the default values of Page elements. For example, if a Page contained a TextBox which should be blank at startup, the script would be:  \$Pages.Page.TextBox.Text = string.Empty;
Uninstalling/Reinstalling software on a Cognex vision controller	In the event that the default installations of VisionPro or Designer need to be uninstalled and then newer versions installed, if a black desktop (no Cognex wallpaper) and a blank, blue Taskbar is encountered after the initial reboot after uninstalling/reinstalling, press the Windows Logo key to return to the Start screen, and then select the Desktop tile/icon to return to the correct Desktop.
Changing the primary language of the operating system on a Cognex vision controller	If the primary language of the Operating System on a Cognex Vision Controller is changed (e.g. from English, the default language, to Simplified Chinese), the Vision Controller will need to be restarted. In the event that the desktop appears without the Cognex wallpaper and a blank, blue Taskbar is encountered after the reboot, press the Windows Logo key on your keyboard to return to the Start screen. Next, select the Desktop tile/icon to return to the correct Desktop.

	T
Startup Issue resulting in incorrectly firing Precision I/O Events	A startup issue incorrectly firing Precision I/O Events can occur in Industrial Communications if the following conditions are met:
	The output mapping of the configured industrial communications connection is set to falling-edge trigger.
	The bit state is low.
	Another signal transition causes the industrial communications protocol to push an update through the logic.
	In such cases, the mapping will false-trigger one time and incorrectly fires the discrete event.
	This only occurs when the bit state starts low, and the mapping is set to falling-edge trigger, or the bit state starts high, and the mapping is set to rising-edge trigger.
Modifying VisionPro and Tool Block Editor Page Controls while a Task is running	If a Page contains a VisionPro Tool Editor or VisionPro ToolBlock Editor element, they should be configured to not allow user interaction while the application sequence is running. Changes to these two types of controls can be made when the application is being modified at design time in the development environment, or in a deployed application, but only when the sequence using the tools is not running.
Unsupported database data types	Cognex Designer does not support the decimal, geography, hirachyid, image, money, numeric, smallmoney, sql_variant, time, timestamp and xml data type parameters. When creating a database, ensure that these types are not used for columns, otherwise Designer will be unable to connect to the database.
	Cognex Designer only supports a sub-set of data types: bigint, binarybit, char, date, datetime, datetime2, datetimeoffset, float, int, nchar, ntext, nvarchar, real, smalldatetime, smallint, text, tinyint, uniqueidentifier, varbinary, varchar. Use Microsoft® SQL Server® 2008 Management Studio or later to create and edit SQL Server databases.
Return statements in Script Editor	When wanting to use a return statement to exit a script function, use the return null; statement, instead of the return; statement. In the Script Editor, scripts must always return an object, even though the signature of the script function returns void.
FFP Offline requested Task Triggers for "Online" and "Offline" status	When implementing industrial communications protocols, consider that within Cognex Designer, the OfflineRequested event is mapped into both a scriptable point called FFP Offline Requested and a Task Trigger called Devices.{CommCardName}.FfpOffineRequested. During execution, if the OfflineRequested event is fired, it will run the script registered to the scriptable point called FFP Offline Requested.
	At this point, the user can access the <i>ReturnToPreviousState</i> member of the argument, and determine the state of the device (False = Offline and True = Online). After this has occurred, the event triggers the <i>FfpOfflineRequested</i> Task Trigger. However, in this case, there is no way to determine the requested state, so any Task registered to run as a result of this trigger will be executed, regardless of the state.

OPC UA Plugin compatibility with older Windows versions	If Cognex Designer 4.4.1 is used on a machine running <i>Windows</i> 7 or <i>Windows Embedded</i> 8, the OPC UA Plugin works only if the . <u>NET</u> Framework 4.7.2. Runtime package has been installed for the operating system. This limitation does not impact machines running on <i>Windows</i> 10.
Updating property page for Tags inside the Tag Editor	When a row is selected in the <b>Tag Manager</b> and the user changes the state of properties in the <b>Property Editor</b> , the change in state will be lost if the user clicks on a different row within the <b>Tag Manager</b> and then clicks back into the row for which the property was changed.
DateTime Entry element can crash on increment/decrement	When the comma is highlighted in the DateTime Entry text (for example, Monday, 27 February 2023 12:00:00 am), Designer will crash if the user clicks the increment or decrement button.

# **Product and Upgrade Codes**

Designer	API	Product Code	VisionPro	.NET	Deep Learning	Comments
4.4.2	4.4.2	A0E01B0D-1583-4CDE- 9CA2-1EF62C2CE0AA	9.8	4.8	VPDL 3.0	Comms plugins upgraded to Modbus (1.2.1), TwinCAT (3.0.5), OPC UA (1.1.2)
4.4.1	4.4.1	1E940356-3D1A-43C5-90F7- FFEC4EBEA89D	9.7	4.7.2		Comms plugins upgraded to: Modbus (1.2.0), TwinCAT (3.0.4), OPC-UA (1.1.1)
4.4.0	4.4.0	9BA1325F-27A4-4159-8D9D- 4AA3E1BDC0E1	9.6 SR2	4.7.2	VPDL 1.1	Designer no longer enforces any specific version of VisionPro. TwinCAT plugin upgraded to 3.0.3, Modbus plugin upgraded to 1.1.3, OPC-UA plugin upgraded to 1.1.0.
4.3.1	4.3.2	7E61223A-7C94-4EB2-9D64- E969C854CD5A	9.6	4.7.2	VPDL 1.0- 1.0.1	ViDi Plugin no longer supported. Replaced by a new DeepLearning plugin. TwinCAT plugin upgraded to 3.0.2, Modbus plugin upgraded to 1.1.2. OPC UA released 1.0.2
4.3.0	4.3.1	A1253D2A-62D4-4A1D- A129-7FBE718925BD	9.5 SR2	4.7.2	VIDI 4.1.0 - 4.1.3	Comms plugins upgraded to Modbus (1.1.1), TwinCAT (3.0.1), OPC UA (1.0.1).
4.2.0	4.3.0	40ED1DFC-4320-4E5F- AB29-E2FE589C376C	9.5 SR1	4.7.1	Unavailable	Modbus (1.1.0), TwinCAT (3.0.0), OPC UA (1.0.0) plugins first included for 4.x
4.1.2	4.2.0	40ED1DFC-4320-4E5F- AB29-E2FE589C376C	9.5	4.7.1	VIDI 3.4.1	
2.7	3.5.1	54A2FBEA-3ADE-4749- A6D9-CF8A711739C	9.2	4.6	N/A	
2.6	3.5.0	E2951431-1CD9-4B62- ADF4-43A5FD71C387	9.1	4.6	N/A	
2.5 PR5	3.1.0	BE5CEE3F-827E-46B6- B5FF-B1367B2CF87C	9.0		N/A	

Designer	API	Product Code	VisionPro	.NET	Deep Learning	Comments
2.1		588BE36C-5F7E-440D- BEA3-B443FC39A9FF	8.4 SR3		N/A	

#### Note:



- Designer 4.4 and later releases support VisionPro releases 9.4 to 9.\*. The column VisionPro indicates the
  version used for testing.
- Designer 2.x product codes represent the x64 version only; not the x86.

## **Supported Hardware**

The following acquisition platforms, communication cards, cameras and sensors are supported by Cognex Designer.

## **Supported Acquisition Platforms and Communication Cards**

- · Cognex Vision Controller
- Cognex CC24 I/O Communication Card
- Cognex CFG-8704e Frame Grabber Card
- Cognex CFG-8724 Frame Grabber Card
- GigE Vision
- MVS-8602e CameraLink
- · Acquisition Interface Kit (AIK)

## **Supported Cameras and Sensors**

- Cognex 2D Industrial Cameras (CIC cameras)
- Cognex 3D Displacement Sensors (DS900 series and DS1000 series)
- As well as those supported by VisionPro for the Acquisition Platforms listed above.

## **Designer Sample Projects**

Designer includes several sample projects to help illustrate how to use the program, and how different elements of Designer fit together to create modern machine vision application solutions. For more information on opening the sample projects, see the Sample Projects topic.



**Tip**: For additional information and sample codes and projects, please visit the <u>Cognex Designer Support Site</u>. A link to the Cognex Designer Support Site is also included in the Help menu.

#### Note:

Subject to Cognex Corporations terms and conditions and license agreement, you are authorized to use and modify this source project in any way you find useful, provided the Software and/or the modified Software is used solely in conjunction with a Cognex Machine Vision System. Furthermore you acknowledge and agree that Cognex has no warranty, obligations or liability for your use of the Software.

This sample program is designed to illustrate certain Cognex Designer features or techniques in the simplest way possible. It is not intended as the framework for a complete application. In particular, the sample program may not provide proper error handling, event handling, cleanup, repeatability, and other mechanisms that a commercial quality application requires.

Copyright © 2014 - 2022

## **Release History**

The following topic lists the features and resolved issues in the previous three releases of Cognex Designer. For the full list of features and resolved issues covering all earlier releases of the product, see the *Release History* topic of the *Cognex Designer User Guide*.

**Note**: Cognex Designer is *backward compatible*, which means that projects created with earlier Designer versions can be opened and edited. Designer does not support loading projects created by a newer version of Designer in an earlier version.

## **Cognex Designer 4.3 Release**

Cognex Designer 4.3 introduces multiple new or changed capabilities since the previous generally available (GA) release (4.2). See the below list for more information.

- Supports VisionPro 9.5 SR2
- Editing Vision Tools in Runtime through the WebHMI: Adjust and/or fine-tune the Vision Tools of your project during runtime by modifying them remotely through the WebHMI.
- Ease of Use Enhancements: The Cognex Designer user interface has received several graphical enhancements (such as new category icons or window naming changes) along with the following new features:
  - Added a new Web Pages Browser, allowing you to quickly access the list of WebHMI pages created in the project.
  - Added the ability of configuring a startup web page for the project through the Web Pages Browser or the Project Explorer. See the Configure a Startup Web Page topic for more information.
  - Updated the Script Editor with new buttons and hotkeys for quickly commenting out lines of code, or uncommenting existing comment lines.
  - Updated the Task Editor and the Tag Manager to support directly assigning tags to compatible Page and WebPage user input elements. See the Assign a Pin to a Page or Web Page Control and the Tag Manager topics for more information.
- New Sample Plugins: Develop your own custom Task Blocks, HMI elements, or HMI chart control elements with a set of sample plugins supplied with the Cognex Designer 4.3 installation. See the Use Sample Plugins topic for more information.
- Shared Project Resources: Share project resources between your development project and deployed application with the new Share Resources with IDE setting of the Deployment dialog. See the Deployment Options topic for more information.

• **Test Mode Password**: Protect your Cognex Designer Development project by specifying a password for exiting Test Mode. See the General topic for more information.

## Cognex Designer 4.2 Release

Cognex Designer 4.2 introduces multiple new or changed capabilities since the previous generally available (GA) release (4.1 PR2). See the below list for more information.

- Supports VisionPro 9.5 SR1
- Optional Communications Plugins Enhance the industrial communications capabilities of your vision project with the following optional industrial communications protocols:
  - Modbus With a set of new Devices, Task Blocks and \$ functions, the Modbus plugin adds support for the general-purpose Modbus communications protocol in Cognex Designer.
  - OPC UA Server Represented in the Devices node of the Project Explorer, the OPC UA Server functionality brings support for the OPC UA cross-platform machine to machine communication protocol, allowing you to read and write exposed project Tagsand \$ Functions through OPC UA client applications on the network.
  - TwinCAT Interact with Beckhoff® TwinCAT® 2 or 3 software systems through the ADS/AMS protocol by setting up a TwinCAT client device in Cognex Designer, and performing synchronous or asynchronous read/write operations through TwinCAT tags and \$ functions.
- FTP Client Support Avoid local storage limitations by setting up an authenticated FTP connection in the Project Explorer, and uploading acquired images to a remote FTP server with the enhanced Image Recorder task block.
- Image File Device Enhancements Get a better picture of simulated image acquisition by utilizing the
  enhancements of the Image File device. Use the new device tags in tandem with the Watch list window to get upto-date information on the number of images used for emulation, the currently loaded image, and more.

## Cognex Designer 4.1 PR2 Release

- Supports VisionPro 9.5
- Performance Monitoring Browse performance statistics relating to your Cognex Designer application's task execution time, memory usage, and garbage collection details, using the Analyzing Application Performance with Performance Profiler, which runs and monitors tasks in a project and produces a report and CSV file. See a breakdown of block execution times in a succinct bar-graph format by Displaying Block Time Performance Data.
- Efficient, Less Disruptive Garbage Collection The Resource-intensive Dynamic Garbage Collection present in releases 4.0.0 and before has been deprecated. Settings have been changed to allow Background Garbage Collection which can lessen performance impact. This new Garbage Collection setting is enabled by default for all new projects. See the Scheduling Garbage Collection topic for more information.
- Performance Tuning Tune performance metrics by Scheduling Garbage Collection and implementing processor Load Balancing Using Core Assignments.
- Graphics Consolidation Combine multiple supported graphics and image formats into a single CogRecord for convenient and efficient processing in Cognex applications. See the VisionPro Tool Block Graphics Options topic for complete details.
- Project Types Cognex Designer now supports drastically Accelerating Development With Predefined Project
  Types. With a single click, launch a fully defined project template that can be quickly customized. Project Types
  enable you to spend more time developing vision applications and less time creating HMIs or writing scripts.

Getting Started Tutorials - Walk through every phase of creating a standalone Vision Application with the new
Getting Started documentation section that lets you learn at your own pace, with only the content that applies to
your needs.

## Cognex Designer 4.0 Release

Cognex Designer 4.0.0 introduces multiple new or changed capabilities since the previous generally available (GA) release (2.7).

- Supports VisionPro 9.3
- Supports Cognex ViDi Suite Supports Cognex ViDi Suite, which enables Deep Learning programming within
  Cognex Designer. The ViDi Suite is a separate product and requires an additional license and installation.
  Please see the Cognex Deep Learning-based Image Analysis page or contact your sales representative for more
  information about the ViDi Suite optional plug-in for Cognex Designer.
- WebHMI With WebHMI, access your deployed application through a standard browser, enhancing user
  productivity. Run your remotely hosted applications, free from the constraints of local sites and domains. Drag
  and drop a display or viewer object on customizable Web Pages and bind objects to any tag, function, or query.
  Create your own scripts to add advanced functionality to your WebHMI applications. Deliver your vision
  application securely with support for Web authentication and set timeout values for your WebHMI log-ins. For
  more information, see WebHMI: A Functional Overview.
- Improved IDE and New Graphical Editing Shortcuts Featuring a high-resolution rich-text interface, ability to add multi-line text to labels, and other convenient graphical shortcuts for Working With Task Blocks and Working With Script Blocks.
- Localization Manage multiple-language translations from a single interface with Project Localization.
- Launch Page Use the Cognex Designer Launch Page to quickly open new projects, saved projects or sample projects with a few mouse clicks.

## Cognex Designer 2.7 Release

Cognex Designer 2.7 introduced multiple new or changed capabilities since the previous generally available (GA) release of Designer (2.6):

- Supports VisionPro 9.2
- No longer supports x86 (32-bit)

#### Resolved Issues in Designer 2.7

CR#	Issue			
44464	Serial device not correctly processing byte data			

## **Release Migration History**

#### Migrating projects from Cognex Designer 2.1 to Designer 2.5

This topic contains information about changes that may affect existing projects when migrating projects from Cognex Designer 2.1 to Designer 2.5 PR5.

• Using the Updated VisionPro Display 3D and New VisionPro Display 3D Status Bar

The VisionPro Display 3D control has been updated with the new control introduced in VisionPro version 9.0, and VisionPro Display Status Bar 3D is a new control in Designer 2.5. This will affect projects that were using the VisionPro Display 3D control in their HMI.

The following considerations apply to the new controls:

- The previous VisionPro Display 3D included a right-click context menu which could be used to display the
  X, Y and Z coordinates either on the display itself, or in a built-in status bar (or both). These options have
  been removed from the new VisionPro Display 3D control. Now, in order to display the coordinates, you
  must add a VisionPro Display 3D Status Bar and configure the Subject property to the VisionPro Display
  3D.
- The VisionPro Display 3D does not support displaying 2D images as height maps; these types of images will not be displayed and a warning will be shown, instead.
- The VisionPro Display 3D does not work when using a Windows Remote Desktop Connection. Third party options, such as VNC® or TeamViewer, may be used.
- The VisionPro Display 3D requires a VisionPro security bit; therefore, previously created Designer projects will need to be updated with this security bit to continue to work correctly.
- The VisionPro Display 3D will not work on virtual machines.

#### Migrating projects from Cognex Designer 2.0 to Designer 2.1

#### • New Project File Format

The file format of Designer projects has been modified, and when projects developed in previous versions of Designer are opened and loaded in Designer 2.1, they will automatically be converted to the new format. Projects saved in Designer 2.1 cannot be opened in previous versions of Designer. For more information, see the Cognex Designer Version Compatibility topic.

#### Recipes Folder Location

For Designer 2.1, the folder location of Recipes will no longer be editable, and must be located in the following directory: <ProjectName>\Recipes\<RecipeName>

Note: If you had edited the Recipe directory location in 2.0, you must manually move your Recipe folder into the new directory location.

#### • Recipes File Format Conversion

Recipes will only be converted from XML to <u>JSON</u> format when they are being loaded through the System.Recipes.{RecipeName}.Load and the System.Recipes.{RecipeName}.LoadFile methods.

#### • New Template File Extension in Designer 2.1

For the Designer 2.1 release, the Template file extension was updated from .cdt to .cdtx. The first time that you start Designer 2.1, all of your .cdt template files will be automatically converted to .cdtx files, with the same name. Both files will exist in the *Templates* directory (C:\Users\<username>\Documents\Cognex Designer\Templates).

If you delete a .cdtx file, you will also need to delete the .cdt file. Otherwise, when you start Designer 2.1 again, or refresh the tree view in the Template Browser, Designer will automatically perform the conversion process again and recreate another .cdtx file, based on the .cdt file.

#### Read IO and Write IO Block Visible Pins State Change

In Designer 2.0, it was possible to add and configure Read IO and Write IO blocks with *Visible Pins*, even though they did not have the *Selected Device* property set to a supported device (Cognex Communication Card or Vision Controller). If a project is loaded in Designer 2.1 which has these types of Read IO and Write IO block configurations, the pins will not be visible until the *Selected Device* property is set, and any links between the pins will disconnected and have to be reset.

#### Migrating projects from Cognex Designer 1.0 to Designer 2.0

#### • MessageID Pin Type Changed

The MessageID pin of the Notify PLC block in AsyncSoftEventComplete has been changed from a int (Int32) data type to a long (Int64) data type.

(i) Note: This does not cause any issue with existing projects.

#### Opening 1.0 or 1.0 PR1 Projects in Designer 2.0

When a Designer 1.0/1.0 PR1 project is opened in version 2.0, the <code>UsedAcquisitionIDCollection</code> pin of the Notify PLC block in <code>InspectionCompleteMode</code> will be replaced with two other pins: <code>AcquisitionIDO</code> and <code>CameraIndexO</code>. If you have more than one cameras, you can set it in the block's Configuration UI.

#### • "Assign New Tag" Option

Starting with Designer 2.0 the **Assign to New Tag** option on a pin does not initialize the created tag with the data-type's default value.

#### . Read IO Block New Pin


A new pin has been added to the Read IO Block: PrioState.

#### · Expression Builder

The Expression Builder has been revamped. It is recommended to run a project verification that should identify any expressions that are no longer compatible.


#### · Opening 1.0 projects that have WritelOBlock with pins


When an 1.0 project is opened in version 1.0 PR1, the existing "DS1000OutputBank0Line0" "DS1000OutputBank0Line1" pins of a WritelOBlock will be replaced with new empty pins. If the pins were assigned to tags, the connection to the tags will be no longer available. This means that the user has to reassign the pins to the tags (since they are still available in Tag Manager).

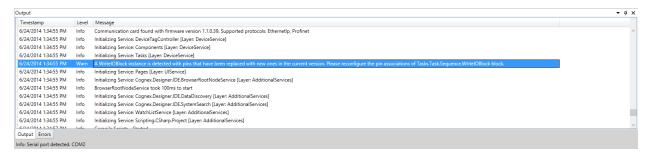

#### • Migrating Plugins From Designer 1.0 to 1.0 PR1

After Designer 1.0 PR1 is installed, all new projects created using either 1.0 or 1.0 PR1, will use the 1.0.1 VisionPro Plugin. Old projects that use VisionPro Plugin 1.0.0.0 will need to be updated to VisionPro Plugin 1.0.1, using the **Edit Project Plugins** option from the Launcher. **Click Edit Project Plugins**, select the desired .cdp project file in the **Open file** dialog box, and check/uncheck the desired plugins.

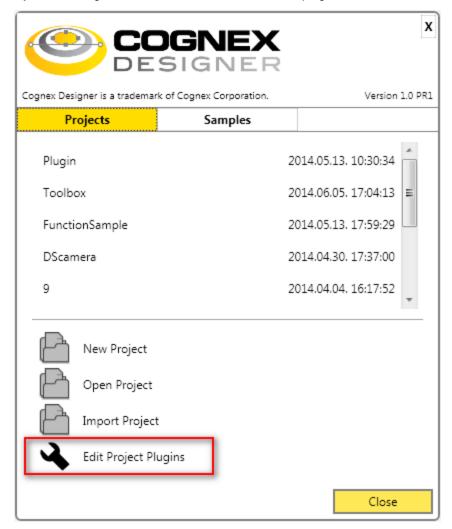

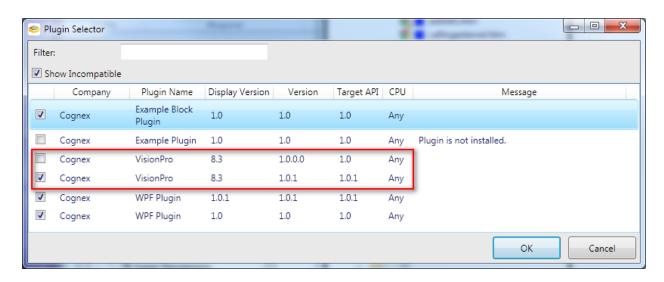

## **Previous Product and Upgrade Codes**

This topic lists the product and upgrade codes for the previous three Cognex Designer release. For the full list of codes covering all earlier product versions, see the Previous Product and Upgrade Codes topic of the *Cognex Designer User Guide*.

#### Cognex Designer 4.3

- API Version: 4.4.0
- Upgrade codes
  - x64 84F14F46-58D4-4B7C-A963-4C7F1D57D1DB
- Product Codes
  - X64 A1253D2A-62D4-4A1D-A129-7FBE718925BD

#### Cognex Designer 4.2

- API Version: 4.3.0
- Upgrade codes
  - x64 84F14F46-58D4-4B7C-A963-4C7F1D57D1DB
- Product Codes
  - X64 40ED1DFC-4320-4E5F-AB29-E2FE589C376C

#### Cognex Designer 4.1 PR2

- API Version: 4.2.1
- · Upgrade codes
  - x64 84F14F46-58D4-4B7C-A963-4C7F1D57D1DB
- Product Codes
  - X64 40ED1DFC-4320-4E5F-AB29-E2FE589C376C

## **Cognex Designer 4.0**

- API Version: 4.1.0
- Upgrade Codes
  - x64 84F14F46-58D4-4B7C-A963-4C7F1D57D1DB
- Product Codes
  - x64 21B3FB72-8EEE-4B76-9D37-26EE0ED5F464

## **Cognex Designer 2.7**

- API Version: 3.5.1
- Upgrade Codes
  - x64 9DBBCE96-D0AB-482E-B207-730F83879934
- Product Codes
  - x64 54A2FBEA-3ADE-4749-A6D9-CF8A711739C

# **Legal Notices**

The software described in this document is furnished under license, and may be used or copied only in accordance with the terms of such license and with the inclusion of the copyright notice shown on this page. Neither the software, this document, nor any copies thereof may be provided to, or otherwise made available to, anyone other than the licensee. Title to, and ownership of, this software remains with Cognex Corporation or its licensor. Cognex Corporation assumes no responsibility for the use or reliability of its software on equipment that is not supplied by Cognex Corporation. Cognex Corporation makes no warranties, either express or implied, regarding the described software, its merchantability, non-infringement or its fitness for any particular purpose.

The information in this document is subject to change without notice and should not be construed as a commitment by Cognex Corporation. Cognex Corporation is not responsible for any errors that may be present in either this document or the associated software.

Companies, names, and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, nor transferred to any other media or language without the written permission of Cognex Corporation.

Copyright © 2014 - 2020. Cognex Corporation. All Rights Reserved.

Portions of the hardware and software provided by Cognex may be covered by one or more U.S. and foreign patents, as well as pending U.S. and foreign patents listed on the Cognex web site at: cognex.com/patents.

The following are registered trademarks of Cognex Corporation:

Cognex, 2DMAX, Advantage, AlignPlus, Assemblyplus, Check it with Checker, Checker, Cognex Vision for Industry, Cognex VSOC, CVL, DataMan, DisplayInspect, DVT, EasyBuilder, Hotbars, IDMax, In-Sight, Laser Killer, MVS-8000, OmniView, PatFind, PatFlex, PatInspect, PatMax, PatQuick, SensorView, SmartView, SmartAdvisor, SmartLearn, UltraLight, Vision Solutions, VisionPro, VisionView

The following are trademarks of Cognex Corporation:

The Cognex Iogo, 1DMax, 3D-Locate, 3DMax, BGAII, CheckPoint, Cognex VSoC, CVC-1000, FFD, iLearn, In-Sight (design insignia with cross-hairs), In-Sight 2000, InspectEdge, Inspection Designer, MVS, NotchMax, OCRMax, PatMax RedLine, ProofRead, SmartSync, ProfilePlus, SmartDisplay, SmartSystem, SMD4, VisiFlex, Xpand

Portions copyright © Microsoft Corporation. All rights reserved.

Portions copyright © MadCap Software, Inc. All rights reserved.

Other product and company trademarks identified herein are the trademarks of their respective owners.