

In-Sight® 7000 Gen2 Series Vision System Reference Guide



2023 May 23
Revision: 6.3.2.1

Legal Notices

The software described in this document is furnished under license, and may be used or copied only in accordance with the terms of such license and with the inclusion of the copyright notice shown on this page. Neither the software, this document, nor any copies thereof may be provided to, or otherwise made available to, anyone other than the licensee. Title to, and ownership of, this software remains with Cognex Corporation or its licensor. Cognex Corporation assumes no responsibility for the use or reliability of its software on equipment that is not supplied by Cognex Corporation. Cognex Corporation makes no warranties, either express or implied, regarding the described software, its merchantability, non-infringement or its fitness for any particular purpose.

The information in this document is subject to change without notice and should not be construed as a commitment by Cognex Corporation. Cognex Corporation is not responsible for any errors that may be present in either this document or the associated software.

Companies, names, and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, nor transferred to any other media or language without the written permission of Cognex Corporation.

Copyright © 2017 - 2020. Cognex Corporation. All Rights Reserved.

Portions of the hardware and software provided by Cognex may be covered by one or more U.S. and foreign patents, as well as pending U.S. and foreign patents listed on the Cognex web site at: cognex.com/patents.

The following are registered trademarks of Cognex Corporation:

Cognex, 2DMAX, Advantage, AlignPlus, Assemblyplus, Check it with Checker, Checker, Cognex Vision for Industry, Cognex VSOC, CVL, DataMan, DisplayInspect, DVT, EasyBuilder, Hotbars, IDMax, In-Sight, Laser Killer, MVS-8000, OmniView, PatFind, PatFlex, PatInspect, PatMax, PatQuick, SensorView, SmartView, SmartAdvisor, SmartLearn, UltraLight, Vision Solutions, VisionPro, VisionView

The following are trademarks of Cognex Corporation:

The Cognex logo, 1DMax, 3D-Locate, 3DMax, BGAI, CheckPoint, Cognex VSoC, CVC-1000, FFD, iLearn, In-Sight (design insignia with cross-hairs), In-Sight 2000, InspectEdge, Inspection Designer, MVS, NotchMax, OCRMax, PatMax RedLine, ProofRead, SmartSync, ProfilePlus, SmartDisplay, SmartSystem, SMD4, VisiFlex, Xpand

Portions copyright © Microsoft Corporation. All rights reserved.

Portions copyright © MadCap Software, Inc. All rights reserved.

Other product and company trademarks identified herein are the trademarks of their respective owners.

Regulations and Conformity

Note: For the most current CE declaration and regulatory conformity information, see the Cognex support site: cognex.com/support.

| Safety and Regulatory | |
|-----------------------|---|
| Manufacturer | Cognex Corporation One Vision Drive Natick, MA 01760 USA |
| CE | <p>In-Sight 7500/7500C: Regulatory Model 1AAB In-Sight 7501/7501C: Regulatory Model 1AAB In-Sight 7600/7600C: Regulatory Model 1AAB In-Sight 7800/7800C: Regulatory Model 1AAB In-Sight 7801/7801C: Regulatory Model 1AAB In-Sight 7802/7802C: Regulatory Model 1AAB In-Sight 7802P: Regulatory Model R00063 In-Sight 7900/7900C: Regulatory Model 1AAB In-Sight 7901/7901C: Regulatory Model 1AAB In-Sight 7902/7902C: Regulatory Model 1AAB In-Sight 7902P: Regulatory Model R00063 In-Sight 7905/7905C: Regulatory Model R00063</p> <p>This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take immediate measures. This equipment complies with the essential requirements of the EU Directive 2014/30/EU. Declarations are available from your local representative.</p> |
| EU RoHS | Compliant to the most recent applicable directive. |
| FCC | <p>FCC Part 15, Class A</p> <p>This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.</p> |
| Korea | <p>In-Sight 7500/7500C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7501/7501C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7600/7600C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7800/7800C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7801/7801C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7802/7802C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7802P: Regulatory Model R00063: R-REM-CGX-R00063 In-Sight 7900/7900C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7901/7901C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7902/7902C: Regulatory Model 1AAB: MSIP-REM-CGX-1AAB In-Sight 7902P: Regulatory Model R00063: R-REM-CGX-R00063 In-Sight 7905/7905C: Regulatory Model R00063: R-REM-CGX-R00063</p> <p>This device is certified for office use only and if used at home, there can be frequency interference problems.</p> |

| Safety and Regulatory | |
|-----------------------|--|
| TÜV | In-Sight 7500/7500C: Regulatory Model 1AAB |
| | In-Sight 7501/7501C: Regulatory Model 1AAB |
| | In-Sight 7600/7600C: Regulatory Model 1AAB |
| | In-Sight 7800/7800C: Regulatory Model 1AAB |
| | In-Sight 7801/7801C: Regulatory Model 1AAB |
| | In-Sight 7802/7802C: Regulatory Model 1AAB |
| | In-Sight 7802P: Regulatory Model R00063 |
| | In-Sight 7900/7900C: Regulatory Model 1AAB |
| | In-Sight 7901/7901C: Regulatory Model 1AAB |
| | In-Sight 7902/7902C: Regulatory Model 1AAB |
| | In-Sight 7902P: Regulatory Model R00063 |
| | In-Sight 7905/7905C: Regulatory Model R00063 |
| | NRTL: TÜV SÜD SCC/NRTL OSHA Scheme for UL/CAN 61010-1. |
| | CB report available upon request. TÜV SÜD, IEC/EN 61010-1. |

China RoHS



| Part Name 部件名称 | Hazardous Substances 有害物质 | | | | | |
|--|---------------------------|-------------------|-------------------|--------------------------------------|--|--|
| | Lead (Pb) 铅 | Mercury (Hg) 汞 | Cadmium (Cd) 镉 | Hexavalent Chromium (Cr (VI)) 六价铬 | Polybrominated biphenyls (PBB) 多溴联苯 | Polybrominated diphenyl ethers (PBDE) 多溴二苯醚 |
| Regulatory Model 1AAB Regulatory Model R00063 | X | O | O | O | O | O |

This table is prepared in accordance with the provisions of SJ/T 11364.
这个标签是根据SJ / T 11364 的规定准备的。

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB / T26572 - 2011.
表示本部件所有均质材料中含有的有害物质低于GB / T26572 - 2011 的限量要求。

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB / T26572 - 2011.
表示用于本部件的至少一种均质材料中所含的危害物质超过GB / T26572 - 2011 的限制要求。

For European Community Users

Cognex complies with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You may also contact your supplier for more information on the environmental performance of this product.

Precautions

To reduce the risk of injury or equipment damage when you install the Cognex product, observe the following precautions:

- The vision system requires a UL or NRTL listed power supply with a 24VDC output that meets the following rating requirements:
 - At least 2A continuous current.
 - A maximum short circuit current of less than 8A.
 - A maximum power of less than 100VA and marked as a Limited Power Source (LPS) or National Electrical Code (NEC) Class 2.

Any other voltage creates a risk of fire or shock and can damage the components. Applicable national and local wiring standards and rules must be followed.

- This product is intended for industrial use in automated manufacturing or similar applications.
- The safety of any system incorporating this product is the responsibility of the assembler of the system.
- Do not install Cognex products where they are exposed to environmental hazards such as excessive heat, dust, moisture, humidity, impact, vibration, corrosive substances, flammable substances, or static electricity.
- Route cables and wires away from high-current wiring or high-voltage power sources to reduce the risk of damage or malfunction from the following causes: over-voltage, line noise, electrostatic discharge (ESD), power surges, or other irregularities in the power supply.
- Do not expose the image sensor to laser light. Image sensors can be damaged by direct, or reflected, laser light. If your application requires laser light that might strike the image sensor, use a lens filter at the corresponding laser wavelength. For suggestions, contact your local integrator or application engineer.
- This product does not contain user-serviceable parts. Do not make electrical or mechanical modifications to product components. Unauthorized modifications can void your warranty.
- Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the user's authority to operate the equipment.
- Include service loops with cable connections.
- Ensure that the cable bend radius begins at least six inches from the connector. Cable shielding can be degraded or cables can be damaged or wear out faster if a service loop or bend radius is tighter than 10X the cable diameter.
- This device should be used in accordance with the instructions in this manual.
- All specifications are for reference purposes only and can change without notice.


Table of Contents


| | |
|--|-----------|
| Legal Notices | 2 |
| Regulations and Conformity | 3 |
| China RoHS | 5 |
| For European Community Users | 5 |
| Precautions | 6 |
| Table of Contents | 7 |
| Symbols | 9 |
| Introduction | 10 |
| Support | 10 |
| Standard Components | 10 |
| Accessories | 11 |
| In-Sight Lenses, Lights and Covers | 11 |
| C-Mount Standard and Extended Covers | 11 |
| C-Mount Illumination Accessories | 13 |
| S-Mount/M12 Autofocus Accessories | 15 |
| S-Mount/M12 Manual Focus Accessories | 17 |
| DataMan Lenses, Lights and Covers | 18 |
| High-Power Illumination | 19 |
| External Lights | 20 |
| Cables | 22 |
| Mounting Brackets | 23 |
| I/O Modules | 23 |
| Connectors and Indicators | 24 |
| Installation | 26 |
| Install the Lens, Lighting and Cover | 26 |
| Install the C-Mount Lens and Cover (COV-7000-CMNT or COV-7000-CMNT-EX) | 26 |
| Install the C-Mount Lens and Cover (COV-7000-CMNT-LG) | 28 |
| Install the C-Mount Lens and In-Sight Illumination | 29 |
| Install the Autofocus Module and In-Sight Illumination | 34 |
| Install the S-Mount/M12 Manual Focus Lens | 40 |
| Working Distance and Field of View (S-Mount/M12 Lenses) | 42 |
| Mount the Vision System | 45 |
| Install the Mounting Bracket (BKT-INS-01) | 46 |
| Install the Converter Mounting Bracket (ISB-7000-7K) | 47 |
| Install the Converter Mounting Bracket (ISB-7000-5K) | 48 |
| Connect the External Light Cable (Optional) | 49 |
| Connect the Ethernet Cable | 49 |
| Connect the Breakout Cable | 50 |
| Connect the CIO-MICRO I/O Module (Optional) | 51 |
| Connect the CIO-1400 I/O Expansion Module (Optional) | 54 |
| Replace the SD Card (Optional) | 56 |


| | |
|--|------------|
| Replace the LED Ring Light (Optional) | 57 |
| Replace the M12 Autofocus Lens (Optional) | 62 |
| Specifications | 70 |
| 7500 Series Vision System Specifications | 70 |
| 7600 Series Vision System Specifications | 73 |
| 7800/7801/7802 Vision System Specifications | 76 |
| 7802P Vision System Specifications | 79 |
| 7900/7901/7902 Vision System Specifications | 82 |
| 7902P/7905 Vision System Specifications | 85 |
| Acquisition Trigger Input | 88 |
| General-Purpose Inputs | 89 |
| High-Speed Outputs | 90 |
| High-Speed Output Wiring | 91 |
| External Light Connector | 92 |
| Ethernet Cable | 93 |
| Breakout Cable | 94 |
| I/O Module Cable | 95 |
| Dimensions | 96 |
| 7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System | 96 |
| 7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Cover (COV-7000-CMNT) | 97 |
| 7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Cover (COV-7000-CMNT-EX) | 98 |
| 7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Illumination (ISLM-7000-xxx) | 99 |
| 7802P/7902P/7905 Vision System | 100 |
| 7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT) | 101 |
| 7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-EX) | 102 |
| 7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-LG) | 103 |
| 7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-LG) and Extender (COV-7000-CMNT-LGX) | 104 |
| 7802P/7902P/7905 Vision System with Illumination (ISLM-7000-xxx) | 105 |
| Mounting Bracket (BKT-INS-01) | 106 |
| Converter Mounting Bracket (ISB-7000-7K) | 107 |
| Converter Mounting Bracket (ISB-7000-5K) | 108 |
| C-Mount Lens Clearance Dimensions | 109 |
| Cleaning/Maintenance | 110 |
| Clean the Housing | 110 |
| Clean the Image Sensor Window | 110 |
| Clean the Cover | 110 |
| Appendix | 111 |
| Mechanical Vignetting | 111 |
| Remove the Illumination Accessory PCB | 112 |


Symbols

The following symbols indicate safety precautions and supplemental information:

 **WARNING:** This symbol indicates a hazard that could cause death, serious personal injury or electrical shock.

 **CAUTION:** This symbol indicates a hazard that could result in property damage.

 **Note:** This symbol indicates additional information about a subject.

 **Tip:** This symbol indicates suggestions and shortcuts that might not otherwise be apparent.

Introduction

The In-Sight[®] vision system is a compact, network-ready, stand-alone machine vision system used for automated inspection, measurement, identification and robot guidance applications on the factory floor. All models can be easily configured remotely over a network using an intuitive user interface.

Support

Many information resources are available to help you use the vision system:


- The *In-Sight[®] Explorer Help* and *EasyBuilder Help* files, provided with In-Sight Explorer software.
- On-demand training: cognex.com/on-demand-training.aspx.
- The In-Sight online support site: cognex.com/support/insight.

Note: For the latest documentation, visit: support.cognex.com/documentation/in-sight.


Standard Components

Note:

- Cables are sold separately.



- If a standard component is missing or damaged, immediately contact your Cognex Authorized Service Provider (ASP) or Cognex Technical Support.

|  | |
|--|---|
| Component | Description |
| Vision System | Provides image acquisition, vision processing, job storage, Ethernet connectivity and discrete I/O. The vision system has an 8GB SD card pre-installed. |

Accessories

You can purchase the following components separately. For a list of options and accessories, contact your local Cognex sales representative.

In-Sight Lenses, Lights and Covers

The following In-Sight lenses, lights and covers are supported with the vision system.





C-Mount Standard and Extended Covers



Note:

- When using a C-Mount lens, the following restrictions apply:
 - Maximum thread length is 5.25mm.
 - The C-Mount lens threads and body cannot protrude more than 6.5mm in length into the vision system when screwed in unless the diameter of the back lens is smaller than 14.75mm. If the C-Mount lens threads and body protrude more than 6.5mm, you can add a spacer between the lens and vision system. However, the spacer decreases the working distance.
- Refer to [C-Mount Lens Clearance Dimensions on page 109](#) for more information.



CAUTION: If installing a C-Mount cover, the illumination accessory (ISLM-7000-xxx) PCB should not be installed to the vision system. Refer to [Remove the Illumination Accessory PCB on page 112](#) for steps to safely remove the PCB and avoid damage to the vision system.

| Accessory | Part Number | Accessory Image |
|--|-------------------|---|
| Standard plastic C-Mount cover and lens cover adapter. Note: If using the COV-7000-CMNT cover, the maximum lens length is 41mm, the maximum lens body diameter is 36.5mm and the maximum diameter including locking screws is 47mm. | COV-7000-CMNT |  |
| Standard extended plastic C-Mount cover and lens cover adapter. Note: If using the COV-7000-CMNT-EX cover, the maximum lens length is 62mm, the maximum lens body diameter is 36.5mm and the maximum diameter including locking screws is 46.5mm. | COV-7000-CMNT-EX |  |
| Wide plastic C-Mount cover and lens cover adapter. This accessory is only supported with the In-Sight 7802P, 7902P and 7905 vision system. Note: If using the COV-7000-CMNT-LG cover, the maximum lens length is 77mm, the maximum lens body diameter is 55mm and the maximum diameter including locking screws is 55mm. | COV-7000-CMNT-LG |  |
| Wide plastic 30mm C-Mount extender, compatible with the COV-7000-CMNT-LG cover. This accessory is only supported with the In-Sight 7802P, 7902P and 7905 vision system. | COV-7000-CMNT-LGX |  |

| Accessory | Part Number | Accessory Image |
|--|----------------|---|
| <p>Metal C-Mount lens cover adapter. Compatible with the following In-Sight 5000 series metal C-Mount lens covers:</p> <ul style="list-style-type: none"> • LNS-CVR-EXT01 • LNS-CVR-R-00 • LNS-CVR-UV-00 • LNS-CVR50-AL-2 <p>Note: If using the ADPT-MTL-M55 lens cover adapter, the maximum lens diameter is 36.5mm. Locking screws cannot protrude more than 7.0mm at the 36.5mm diameter. If they do, the lens diameter must be reduced, so the maximum diameter including locking screws is less than 50.5mm.</p> | ADPT-MTL-M55 |  |
| <p>Plugs to cover the integrated light and autofocus connectors on the vision system faceplate. The plugs are used with large lenses that do not fit under C-Mount covers and prevents dust from getting into the vision system. The kit contains:</p> <ul style="list-style-type: none"> • 5 integrated light plugs. • 5 autofocus plugs. <p>Note: The imager is isolated from the rest of the vision system internally, therefore the only way dust will get on the imager is from the C-Mount opening.</p> | IS7000-CON-PLG |  |

C-Mount Illumination Accessories








Note:

- The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.
- When using a C-Mount lens, the following restrictions apply:
 - Maximum thread length is 5.25mm.
 - The C-Mount lens threads and body cannot protrude more than 6.5mm in length into the vision system when screwed in unless the diameter of the back lens is smaller than 14.75mm. If the C-Mount lens threads and body protrude more than 6.5mm, you can add a spacer between the lens and vision system. However, the spacer decreases the working distance.



CAUTION: The following C-Mount lenses are supported with vision systems when using the illumination accessory (ISLM-7000-xxx). If using a different C-Mount lens with the illumination accessory, it must be 29.5mm in diameter or smaller. Maximum lens length is 38.5mm without a bandpass filter and 36mm with a bandpass filter. Larger lenses will irreparably damage the vision system.

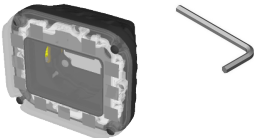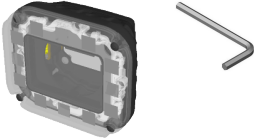







| Accessory | | Part Number | Accessory Image |
|--|------------------------------------|------------------|-----------------|
| Lenses supported with vision systems with 2.3 mega-pixel resolution and below. | 9mm f/1.4 - f/16 aperture lens | LFC-9F1B | |
| | 12.5mm f/1.4 - close aperture lens | LFC-12.5F | |
| | 16mm f/1.4 - f/16 aperture lens | LFC-16F1 | |
| | 25mm f/1.4 - f/22 aperture lens | LFC-25F1 | |
| | 35mm f/1.6 - f/22 aperture lens | LFC-35F1 | |
| | 50mm f/2.3 - f/22 aperture lens | LFC-50F1 | |
| Lenses supported with vision systems with 5 mega-pixel resolution. | 8mm f/2.4 - f/16 aperture lens | LMC-ML-M0824-MP5 | |
| | 12.5mm f/2.4 - f/16 aperture lens | LMC-ML-M1224-MP5 | |
| | 16mm f/1.6 - f/16 aperture lens | LMC-ML-M1616UR | |
| | 25mm f/1.6 - f/16 aperture lens | LMC-ML-M2516UR | |
| | 35mm f/2.0 - f/16 aperture lens | LMC-ML-M3520UR | |



| Accessory | Part Number | Accessory Image |
|---|------------------|---|
| Illumination accessory with white LED ring light, cover and hex wrench | ISLM-7000-WHI |  |
| Illumination accessory with cover and hex wrench. Does not include an LED ring light. | ISLM-7000-00 |  |
| Diffuse cover | COV-7000-DF |  |
| Clear cover | COV-7000-CLR |  |
| Polarized cover | COV-7000-PL-FULL |  |
| Note: When installing the cover, pull the red tab to remove the protective film. | | |
| Red LED ring light | ISL-7000-RD |  |
| IR LED ring light | ISL-7000-IR | |
| Blue LED ring light | ISL-7000-BL | |
| White LED ring light | ISL-7000-WHI | |
| Note: For color vision systems, the white LED ring light should be used. | | |
| Red bandpass filter used with the ISL-7000-RD LED ring light | ISF-7000-RDBP605 |  |
| IR bandpass filter used with the ISL-7000-IR LED ring light | ISF-7000-IRBP815 | |
| Blue bandpass filter used with the ISL-7000-BL LED ring light | ISF-7000-BLBP435 | |

S-Mount/M12 Autofocus Accessories

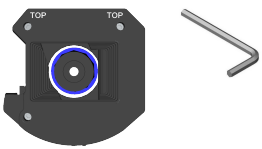Note:

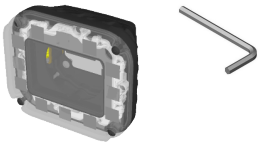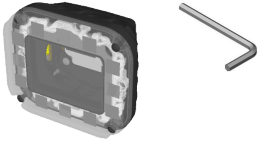- The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

| Accessory | Part Number | Accessory Image |
|---|------------------|---|
| Autofocus module with 8mm S-Mount/M12 lens | ISAF-7000-8mm |  |
| Lens removal tool with replacement lens nuts | ISAF-7000-TOOL |  |
| 6mm M12 lens | LM12-06-01 |  |
| 8mm M12 lens | LM12-08-01-F2.2 | |
| 12mm M12 lens | LM12-12-01-F2.3 | |
| 16mm M12 lens | LM12-16-01 | |
| 25mm M12 lens | LM12-25-01 | |
| Illumination accessory with white LED ring light, cover and hex wrench | ISLM-7000-WHI |  |
| Illumination accessory with cover and hex wrench. Does not include an LED ring light. | ISLM-7000-00 |  |
| Diffuse cover | COV-7000-DF |  |
| Clear cover | COV-7000-CLR |  |
| Polarized cover | COV-7000-PL-FULL |  |
| Note: When installing the cover, pull the red tab to remove the protective film. | | |

| Accessory | Part Number | Accessory Image |
|---|------------------|---|
| Red LED ring light | ISL-7000-RD |  |
| IR LED ring light | ISL-7000-IR | |
| Blue LED ring light | ISL-7000-BL | |
| White LED ring light | ISL-7000-WHI | |
| Note: For color vision systems, the white LED ring light should be used. | | |
| Red bandpass filter used with the ISL-7000-RD LED ring light | ISF-7000-RDBP605 |  |
| IR bandpass filter used with the ISL-7000-IR LED ring light | ISF-7000-IRBP815 | |
| Blue bandpass filter used with the ISL-7000-BL LED ring light | ISF-7000-BLBP435 | |




S-Mount/M12 Manual Focus Accessories

Note:

- The following S-Mount/M12 lenses are supported. If a different lens is used, the following restrictions apply:
 - At infinity focus, the back focal length must be greater than 5.5mm.
 - Close up, the back focal length of the lens cannot be greater than 13mm.



- The DataMan clear cover accessory (DM300-CLCOV) is supported with In-Sight S-Mount/M12 manual focus lenses and provides an IP65 rating.
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

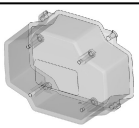

| Accessory | Part Number | Accessory Image |
|--|-----------------|---|
| 6mm M12 lens | LM12-06-01 |  |
| 8mm M12 lens | LM12-08-01-F2.2 | |
| 12mm M12 lens | LM12-12-01-F2.3 | |
| 16mm M12 lens | LM12-16-01 | |
| 25mm M12 lens | LM12-25-01 | |
| S-Mount/M12 adapter kit: <ul style="list-style-type: none"> S-Mount/M12 adapter 13mm lens locking cone (P/N 1000000178) 14mm lens locking cone (P/N 372-1270R) Installation tool | ISLN-7000-SMNT |  |
| Note: The S-Mount/M12 adapter kit (ISLN-7000-SMNT) is required when installing In-Sight S-Mount/M12 manual focus lenses. | | |
| Clear cover | DM300-CLCOV |  |


DataMan Lenses, Lights and Covers

The following DataMan accessories are also supported with the In-Sight vision system for S-Mount/M12 manual focus lens configurations. DataMan lenses are only supported with DataMan lights and covers.

Note:


- The following S-Mount/M12 lenses are supported. If a different lens is used, the following restrictions apply:
 - At infinity focus, the back focal length must be greater than 5.5 mm.
 - Close up, the back focal length of the lens cannot be greater than 10 mm.
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

| Accessory | Part Number | Accessory Image |
|---|------------------|---|
| 10.3mm M12 lens with locking (DM300-LENS-10) and 10.3 mm IR M12 lens with locking | DM300-LENS-10-IR |  |
| 16mm M12 lens with locking | DM300-LENS-16 |  |
| 25mm M12 lens with lens spacer and hex wrench (also requires Extension kit) | DM300-LENS-25 |  |
| Extension kit | DM300-EXT |  |
| Clear cover | DM300-CLCOV |  |
| Clear cover with white LED illumination | DM300-CLCOV-WHI |  |
| Diffuse cover with red LED illumination | DM300-DLCOV-RE | |
| Diffuse cover with blue LED illumination | DM300-DLCOV-BL | |
| Diffuse cover with IR LED illumination | DM300-DLCOV-IR | |
| Polarized cover with red LED illumination | DM300-PLCOV-RE | |
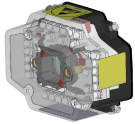
| Accessory | Part Number | Accessory Image |
|---|--------------------|---|
| Diffuse cover, red illumination (assembled), ESD safe | DM300-DLCOV-RE-ESD |  |
| Polarized red LED high-powered integrated light, ESD safe | DM360-HPIL-RE-P | |
| Non-polarized red LED high-powered integrated light | DM360-HPIL-RE | |

High-Power Illumination

Note: The following External Light Cables are supported with the Cognex high-power lights: IVSL-5PM12-J300, IVSL-5PM12-J500, IVSL-5PM12-J1000 and IVSL-5PM12-J2000.


| Accessory | Part Number | Accessory Image |
|-----------------|-------------------|---|
| Red narrow | DM30X-HPIA3-625 |  |
| Red wide | DM30X-HPIA3-625-W | |
| White narrow | DM30X-HPIA3-WHI | |
| White wide | DM30X-HPIA3-WHI-W | |
| Blue narrow | DM30X-HPIA3-470 | |
| Blue wide | DM30X-HPIA3-470-W | |
| Infrared narrow | DM30X-HPIA3-IR | |
| Infrared wide | DM30X-HPIA3-IR-W | |


External Lights

External lights can be connected to the vision system's LIGHT connector using the External Light cable.

Note:







- The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.
- If daisy-chaining multiple Cognex IVSL-YLW2X-xxx or IVSL-YLW300-xxx external lights:
 - The lights must be powered externally by a separate power supply.
 - A Cognex control cable (CCB-FOV25-MAL-012) can be used to connect the vision system's LIGHT connector to the external light and a Cognex power cable (IVSL-5PM12-5) can be used to connect the light to the separate power supply. Only the power and ground wires from the Cognex power cable (IVSL-5PM12-5) should be connected to the remote power supply.
- ① If using a Cognex IVSL-LX520-xxx external light:
 - The lights must be powered externally by a separate power supply.
 - A Cognex control cable (CCB-FOV25-MAL-012) can be used to connect the vision system's LIGHT connector to the external light and a Cognex power cable (IVSL-5PM12-5) can be used to connect the light to the separate power supply. Only the power and ground wires from the Cognex power cable (IVSL-5PM12-5) should be connected to the remote power supply.
 - The following cables must not be used with IVSL-LX520-xxx external lights: IVSL-5PM12-J300, IVSL-5PM12-J500 and IVS-5PM12-J1000, IVSL-5PM12-J2000.
- The vision system supports Cognex IVSL-YL300-xx external lights with the following External Light cables: IVSL-M12-NSB-300, IVSL-M12-NSB-1000 and IVSL-M12-NSB-2000.

| Accessory | Part Number | Supported External Light Cables | Accessory Image |
|--------------------------|-------------------|--|---|
| Brick light, narrow blue | IVSL-ODDM-S75-470 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 |  |
| Brick light, narrow red | IVSL-ODDM-S75-625 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |




| Accessory | Part Number | Supported External Light Cables | Accessory Image |
|---|-------------------|--|---|
| Bar light, wide red | IVSL-YLW2X-625 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 |  |
| Bar light, narrow red, linear polarizer | IVSL-YLW2X-625P | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, narrow infrared | IVSL-YLW2X-850 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, narrow blue | IVSL-YLW300-470 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, wide blue | IVSL-YLW300-470 W | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, narrow red | IVSL-YLW300-625 | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, wide red | IVSL-YLW300-625 W | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, narrow white | IVSL-YLW300-WHI | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, wide white | IVSL-YLW300-WHI W | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 | |
| Bar light, blue | IVSL-LX520-470 | CCB-FOV25-MAL-012 for intensity and strobe control. IVSL-5PM12-5 for power. |  |
| Bar light, red | IVSL-LX520-625 | CCB-FOV25-MAL-012 for intensity and strobe control. IVSL-5PM12-5 for power. | |

Cables



Note: When using the 15 meter Breakout cable, full 24VDC voltage must be maintained at the input leads of the Breakout cable when the vision system is operating.

| Accessory | Part Number | Accessory Image |
|--|--|---|
| External Light Cable, Yellow Note: This cable supports intensity control. | IVSL-5PM12-J300 IVSL-5PM12-J500 IVSL-5PM12-J1000 IVSL-5PM12-J2000 |  |
| External Light Cable, Black Note: <ul style="list-style-type: none"> This cable supports intensity control. This cable is used with standard SVL lights. | IVSL-M12-NSB-300 IVSL-M12-NSB-1000 IVSL-M12-NSB-2000 |  |
| External Light Cable, Grey Note: This cable does not support intensity control. | CCB-M12LTF-xx (xx specifies length: 0.5m, 1m, 2m, 5m) |  |
| Ethernet Cable, X-coded M12-8 to RJ-45 | CCB-84901-2001-xx (straight, xx specifies length: 2m, 5m, 10m, 15m, 30m) |  |
| Ethernet Cable, X-coded M12-8 to RJ-45 | CCB-84901-2002-xx (right-angled, xx specifies length: 2m, 5m, 10m) | |
| Ethernet Cable, Robotic X-Coded M12-8 to RJ-45 | CCB-84901-2RBT-xx (straight, xx specifies length: 2m, 5m, 10m) | |
| Breakout Cable, M12-12 to Flying Lead | CCB-PWRIO- xx (straight, xx specifies length: 5m, 10m, 15m) |  |
| Breakout Cable, M12-12 to Flying Lead | CCB-PWRIO-xxR (right-angled, xx specifies length: 5m, 10m, 15m) | |
| I/O Module Cable M12-12 to DB15 | CCB-PWRIO-MOD-xx (xx specifies length: 2m, 5m) |  |


Mounting Brackets
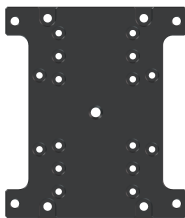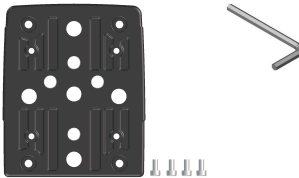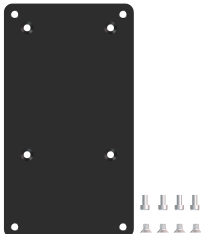
| Accessory | Part Number | Accessory Image |
|---|-------------|---|
| Mounting bracket with M3, M4 and 1/4 - 20 mounting holes. Mounting screws are not included. The mounting bracket is supported with In-Sight 5000 series, In-Sight 7000 Gen2 series and In-Sight 9000 series vision systems. | BKT-INS-01 |  |
| Converter mounting bracket with M3 socket head screws and hex wrench. Also has 1/4 - 20, M6 and flat head mounting holes. Mounting holes are compatible with the In-Sight 7000 Gen1 series vision system. | ISB-7000-7K |  |
| Converter mounting bracket with Phillips flat head M3 screws and M4 screws. Mounting holes are compatible with the In-Sight 5000 series vision system. | ISB-7000-5K |  |


I/O Modules
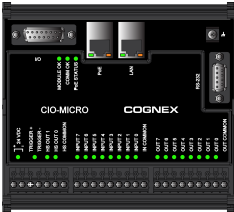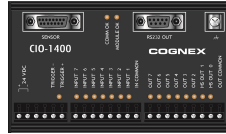
| Accessory | Part Number | Accessory Image |
|------------------------------------|--------------|---|
| In-Sight CIO-MICRO I/O Module | CIO-MICRO-00 |  |
| In-Sight 1400 I/O Expansion Module | CIO-1400 |  |


Connectors and Indicators

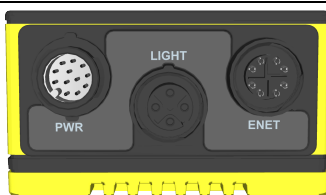

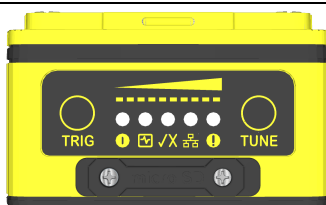

| Connector | Function |
|-----------------|---|
| PWR Connector | Connects the Breakout cable, which provides connections to an external power supply, the acquisition trigger input, general-purpose inputs, high-speed outputs and RS-232 serial communications. For more information, refer to Breakout Cable on page 94 . Alternately, this connector is used to attach the I/O Module cable to a compatible In-Sight I/O module, which adds general-purpose discrete I/O. For more information, refer to I/O Module Cable on page 95 . |
| LIGHT Connector | Connects the vision system to an external lighting device. For more information, refer to External Light Connector on page 92 . |
| ENET Connector | Connects the Ethernet cable, which provides 10/100/1000 Ethernet connectivity. For more information, refer to Ethernet Cable on page 93 . |

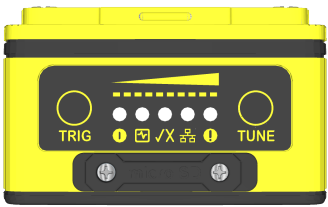

| Indicator | Function |
|-----------|--|
| | Focus Metric LEDs Indicates the image focus score (0 - 10) while in Live Video Mode within In-Sight Explorer. |
| | TRIG Button Manually triggers an image acquisition when the vision system is either: <ul style="list-style-type: none"> Online within In-Sight Explorer and the acquisition Trigger parameter is set to Manual. Offline within In-Sight Explorer. |
| | Power LED The green LED illuminates to indicate that the vision system is powered on. |
| | SD Card Status LED <ul style="list-style-type: none"> Off: The SD card is not inserted. Green: The SD card is present, and it is safe to remove the SD card after removing power from the vision system. Yellow: The SD card is present, but it is not safe to remove it. |
| | Pass/Fail LED and Indicator Ring Green or red when active. User configurable. |
| | Network LED The yellow LED flashes to indicate network activity. |



| Indicator | | Function |
|---|-------------|---|
|  | Error LED | Red when active. User configurable. |
|  | TUNE Button | Used as an Event Trigger within In-Sight Explorer to force a cell containing an Event structure to run when the TUNE button is pressed. |

Installation

Read this section to learn how the vision system connects to its standard components and accessories. For a list of options and accessories, contact your Cognex sales representative.

Note: Cables are sold separately.

CAUTION: All cable connectors are keyed to fit the connectors on the vision system. Do not force the connections or damage may occur.

Install the Lens, Lighting and Cover

You can choose between a variety of different C-Mount and S-Mount/M12 lenses and covers to install to the vision system. Refer to [In-Sight Lenses, Lights and Covers on page 11](#) and [DataMan Lenses, Lights and Covers on page 18](#) for a complete list of options and accessories.

Install the C-Mount Lens and Cover (COV-7000-CMNT or COV-7000-CMNT-EX)

Complete the following steps to install a C-Mount lens and cover to the vision system. The C-Mount covers are optional accessories and required for IP67 protection.


Note:

- When using a C-Mount lens, the following restrictions apply:
 - Maximum thread length is 5.25mm.
 - The C-Mount lens threads and body cannot protrude more than 6.5mm in length into the vision system when screwed in unless the diameter of the back lens is smaller than 14.75mm. If the C-Mount lens threads and body protrude more than 6.5mm, you can add a spacer between the lens and vision system. However, the spacer decreases the working distance.
- If using the COV-7000-CMNT cover, the maximum lens length is 41mm, the maximum lens body diameter is 36.5mm and the maximum diameter including locking screws is 47mm.
- If using the COV-7000-CMNT-EX cover, the maximum lens length is 62mm, the maximum lens body diameter is 36.5mm and the maximum diameter including locking screws is 46.5mm.

CAUTION: If installing a C-Mount cover, the illumination accessory (ISLM-7000-xxx) PCB should not be installed to the vision system. Refer to [Remove the Illumination Accessory PCB on page 112](#) for steps to safely remove the PCB and avoid damage to the vision system.

1. Remove the rubber faceplate covering the image sensor window, if present.
2. Remove the protective film covering the threaded lens opening, if present.
3. Place the adapter on the faceplate of the vision system. Insert the four adapter screws and tighten. The maximum torque is 0.90 Nm (8 in-lb).
4. Thread the lens into the vision system.

5. Attach the cover to the vision system. Rotate the cover clockwise approximately seven degrees to lock it.

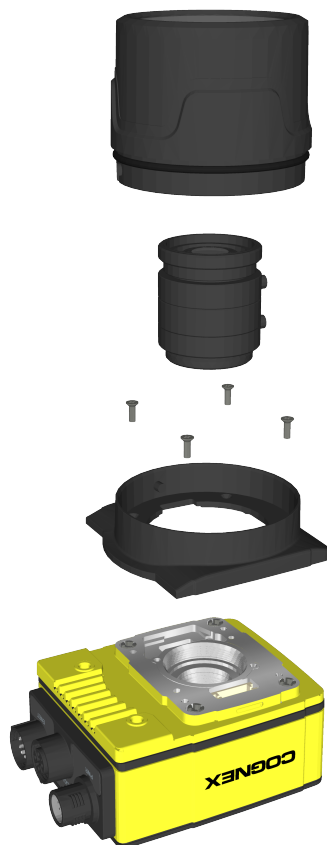

Install the C-Mount Lens and Cover (COV-7000-CMNT-LG)

Complete the following steps to install a C-Mount lens and cover to the vision system. The C-Mount cover is an optional accessory and required for IP67 protection.

Note:

- The COV-7000-CMNT-LG cover is only supported with the In-Sight 7802P, 7902P and 7905 vision systems.
- When using a C-Mount lens, the following restrictions apply:
 - Maximum thread length is 5.25mm.
 - The C-Mount lens threads and body cannot protrude more than 6.5mm in length into the vision system when screwed in unless the diameter of the back lens is smaller than 14.75mm. If the C-Mount lens threads and body protrude more than 6.5mm, you can add a spacer between the lens and vision system. However, the spacer decreases the working distance.
- If using the COV-7000-CMNT-LG cover, the maximum lens length is 77mm, the maximum lens body diameter is 55mm and the maximum diameter including locking screws is 55mm.

CAUTION: If installing a C-Mount cover, the illumination accessory (ISLM-7000-xxx) PCB should not be installed to the vision system. Refer to [Remove the Illumination Accessory PCB on page 112](#) for steps to safely remove the PCB and avoid damage to the vision system.

1. Remove the rubber faceplate covering the image sensor window, if present.
2. Remove the protective film covering the threaded lens opening, if present.
3. Place the adapter on the faceplate of the vision system. Insert the four adapter screws and tighten. The maximum torque is 0.90 Nm (8 in-lb).
4. Thread the lens into the vision system.
5. (Optional) For longer lenses, the C-Mount cover extender accessory (COV-7000-CMNT-LGX) can be used to add 30mm in length to the C-Mount cover. If using the cover extender, attach it to the vision system and rotate the cover extender clockwise approximately thirteen degrees to lock it.
6. Attach the cover to the vision system. Rotate the cover clockwise approximately thirteen degrees to lock it.




Install the C-Mount Lens and In-Sight Illumination

Complete the following steps to install a C-Mount lens and the illumination accessory (ISLM-7000-WHI). The illumination accessory (ISLM-7000-WHI) is an optional accessory and required for IP67 protection.

Note: The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.


CAUTION:

- Refer to [C-Mount Illumination Accessories on page 13](#) for lenses supported with the illumination accessory (ISLM-7000-WHI). If using a different C-Mount lens with the illumination accessory, it must be 29.5mm in diameter or smaller. Maximum lens length is 38.5mm without a bandpass filter and 36mm with a bandpass filter. Larger lenses will irreparably damage the vision system.
- Do not hot-plug the illumination accessory. Verify the vision system is not receiving power when connecting or disconnecting the illumination accessory. Failure to remove power during this procedure may result in damage to the vision system and/or the illumination accessory.
- The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.
- Tighten all illumination accessory screws in the following sequence.

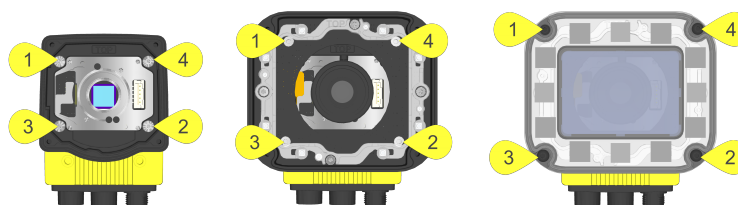

1. Remove the rubber faceplate covering the image sensor window, if present.
2. Remove the protective film covering the threaded lens opening, if present.
3. Plug the PCB into the lighting connector on the vision system faceplate.

CAUTION: If uninstalling the PCB from the vision system, refer to [Remove the Illumination Accessory PCB on page 112](#) for steps to safely remove the PCB and avoid damage to the vision system.

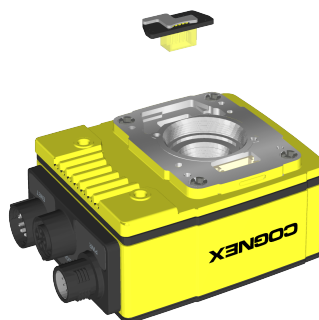

4. Install the spacer.

- a. Place the spacer on top of the vision system with “TOP” oriented upward.
- b. Verify seating of the gasket on the bottom of the spacer.
- c. Insert the four M3 screws and use a 2mm hex wrench to torque screws to 0.34 Nm (3 in-lb). For the 7500, 7501, 7600, 7800, 7801, 7802, 7900, 7901 and 7902, use the M3 x 6mm screws. For the 7802P, 7902P and 7905, use the M3 x 8mm screws.



5. Thread the lens into the vision system. Focusing of the C-Mount lens prior to light housing installation is required.

Note: If installing the autofocus module accessory (ISAF-7000-8mm), refer to [Install the Autofocus Module and In-Sight Illumination on page 34](#).



6. Install the light housing.

CAUTION:

- Do not hot-plug the LED ring light. Verify the vision system is not receiving power when connecting or disconnecting the LED ring light.
- A connector protrudes from the underside of the light housing. To prevent damage, it is recommended the light housing not be removed from the box until ready to be assembled.

Note: If a different LED color is required, refer to [Replace the LED Ring Light \(Optional\) on page 57](#).

- Place the light housing with LED ring light on top of the spacer, with “TOP” oriented upward.
- Verify seating of the gasket on the top of the spacer.
- There are four captive screw access holes near the white circles on the LED ring light. Use a 2mm hex wrench to torque the captive screws to 0.34 Nm (3 in-lb).




7. Optionally, install a bandpass filter to the light baffle.




Tip: Wear gloves when installing the filter to prevent leaving fingerprints on the surface of the filter.

- a. Insert the filter in the light baffle so it is held in place between the light baffle's filter retention tabs. Both sides of the filter are the same; either side of the filter can be oriented up or down when inserted in the light baffle.

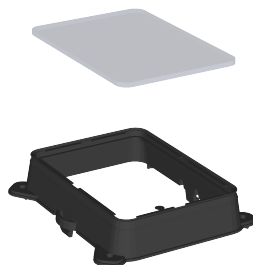


- b. Push the filter down and snap it into place, ensuring the filter retention tabs are flush with the top surface of the filter.

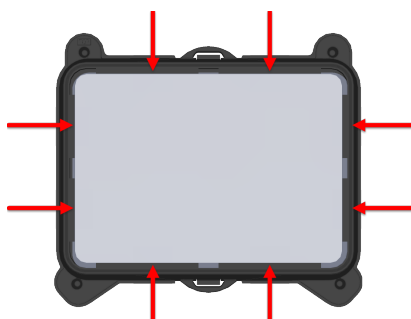


8. Install the light baffle.

- a. Tilt the light baffle toward the light housing and maneuver the light baffle past the top of the LED ring light structure.
- b. Compress the light baffle and maneuver the bottom of the light baffle past the bottom of the LED ring light structure until the light baffle snaps into place, with the keyed tabs sitting flush over each light housing captive screw access hole.

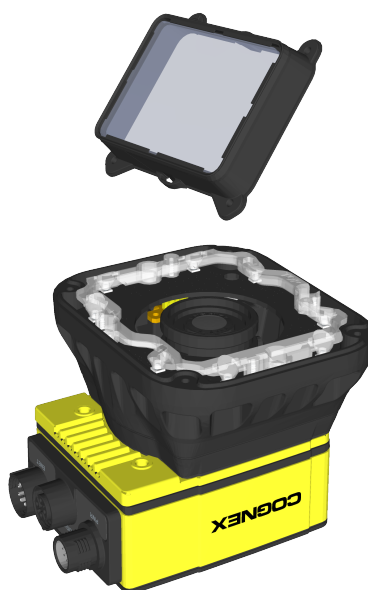

9. Install the cover.

- a. Place the cover on the light housing.
- b. Align the central clear region of the cover with the light baffle edges.
- c. Insert the four M3 x 12mm screws and use a 2mm hex wrench to torque screws to 0.31 Nm (2.75 in-lb).

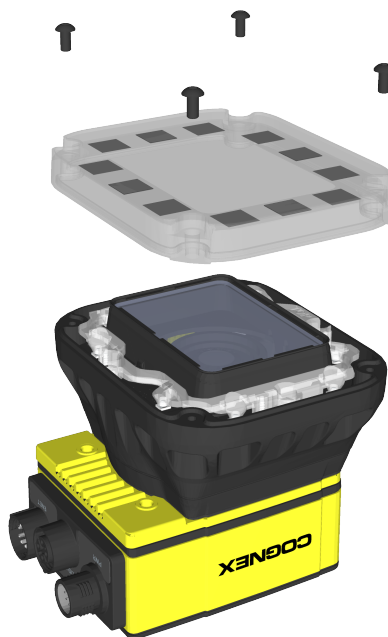

Install the Autofocus Module and In-Sight Illumination


Complete the following steps to install the autofocus module accessory (ISAF-7000-8mm) and illumination accessory (ISLM-7000-WHI).

Note:

- The autofocus module has an 8mm M12 lens pre-installed. If a different lens is required, it should be installed into the autofocus module before the autofocus module is installed to the vision system. For more information, see [Replace the M12 Autofocus Lens \(Optional\) on page 62](#).
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).
- The illumination accessory (ISLM-7000-xxx) is sold separately. It is the only cover available for the autofocus module and is required for IP67 rating.
- The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.

CAUTION:

- When installing the illumination accessory (ISLM-7000-WHI):
 - Do not hot-plug the illumination accessory. Verify the vision system is not receiving power when connecting or disconnecting the illumination accessory. Failure to remove power during this procedure may result in damage to the vision system and/or the illumination accessory.
 - The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.
 - Tighten all illumination accessory screws in the following sequence.

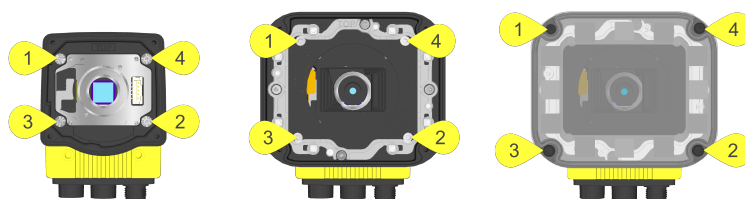


1. Remove the rubber faceplate covering the image sensor window, if present.
2. Remove the protective film covering the threaded lens opening, if present.

3. Plug the PCB into the lighting connector on the vision system faceplate.



CAUTION: If uninstalling the PCB from the vision system, refer to [Remove the Illumination Accessory PCB on page 112](#) for steps to safely remove the PCB and avoid damage to the vision system.

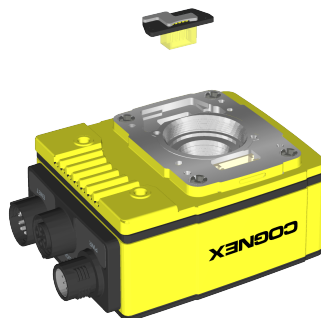

4. Install the spacer.

- Place the spacer on top of the vision system with "TOP" oriented upward.
- Verify seating of the gasket on the bottom of the spacer.
- Insert the four M3 screws and use a 2mm hex wrench to torque screws to 0.34 Nm (3 in-lb). For the 7500, 7501, 7600, 7800, 7801, 7802, 7900, 7901 and 7902, use the M3 x 6mm screws. For the 7802P, 7902P and 7905, use the M3 x 8mm screws.



5. Install the autofocus module.

CAUTION: Do not hot-plug the autofocus module. Verify the vision system is not receiving power when connecting or disconnecting the autofocus module.

Note: If a different lens is required, it should be installed in the autofocus module before the autofocus module is installed to the vision system. For more information, see [Replace the M12 Autofocus Lens \(Optional\) on page 62](#).

- a. There are two alignment pins on the base of the autofocus module. Seat the pins into the vision system faceplate.
- b. There are three captive screws in the autofocus module. Partially thread the screws into the vision system faceplate using a 1.5mm hex wrench.
- c. Once threaded, torque the captive screws to 0.5 Nm (4.43 in-lb) using a torque screwdriver with a 1.5mm hex torque bit capable of reaching 15mm into a 2.5mm diameter hole. For example, Wiha Tools 1.5mm Hex Metric Torque Blade (SKU 28545) used with the Adjustable Torque Handle (SKU 28550).



6. Install the light housing.

CAUTION:

- Do not hot-plug the LED ring light. Verify the vision system is not receiving power when connecting or disconnecting the LED ring light.
- A connector protrudes from the underside of the light housing. To prevent damage, it is recommended the light housing not be removed from the box until ready to be assembled.

Note: If a different LED color is required, refer to [Replace the LED Ring Light \(Optional\) on page 57](#).

- a. Place the light housing with LED ring light on top of the spacer, with “TOP” oriented upward.
- b. Verify seating of the gasket on the top of the spacer.
- c. There are four captive screw access holes near the white circles on the LED ring light. Use a 2mm hex wrench to torque the captive screws to 0.34 Nm (3 in-lb).




7. Optionally, install a bandpass filter to the light baffle.




Tip: Wear gloves when installing the filter to prevent leaving fingerprints on the surface of the filter.

- a. Insert the filter in the light baffle so it is held in place between the light baffle's filter retention tabs. Both sides of the filter are the same; either side of the filter can be oriented up or down when inserted in the light baffle.

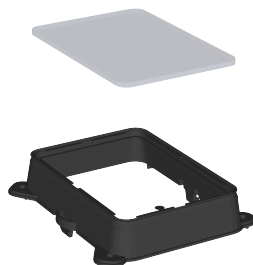


- b. Push the filter down and snap it into place, ensuring the filter retention tabs are flush with the top surface of the filter.

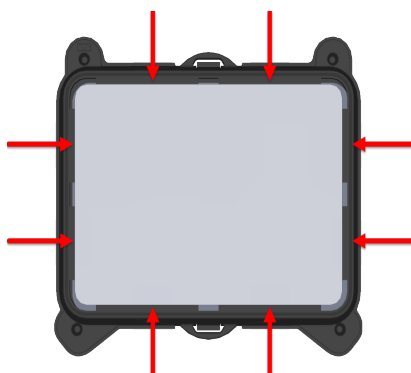


8. Install the light baffle.

- a. Tilt the light baffle toward the light housing and maneuver the light baffle past the top of the LED ring light structure.
- b. Compress the light baffle and maneuver the bottom of the light baffle past the bottom of the LED ring light structure until the light baffle snaps into place, with the keyed tabs sitting flush over each light housing captive screw access hole.

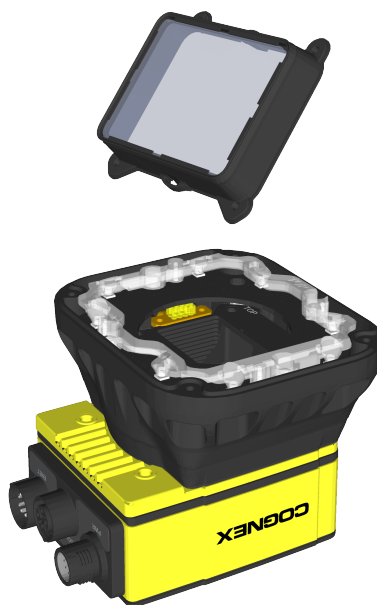

9. Install the cover.

- a. Place the cover on the light housing.
- b. Align the central clear region of the cover with the light baffle edges.
- c. Insert the four M3 x 12mm screws and use a 2mm hex wrench to torque screws to 0.31 Nm (2.75 in-lb).

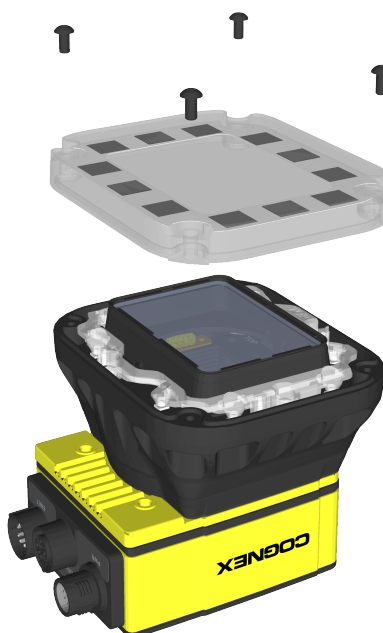


Install the S-Mount/M12 Manual Focus Lens

Complete the following steps to install an In-Sight S-Mount/M12 manual focus lens. The S-Mount/M12 adapter kit (ISLN-7000-SMNT) is required when installing In-Sight S-Mount/M12 manual focus lenses.


Note:

- The DataMan clear cover accessory (DM300-CLCOV) is supported with In-Sight S-Mount/M12 manual focus lenses and provides an IP65 rating. For more information, see [S-Mount/M12 Manual Focus Accessories on page 17](#).
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

1. Remove the rubber faceplate covering the image sensor window, if present.
2. Remove the protective film covering the threaded lens opening, if present.
3. Place the S-Mount adapter over the image sensor window.

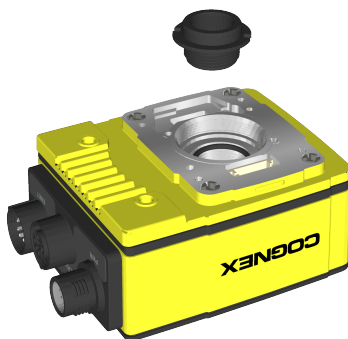

4. Place the "In-Sight" end of the adapter tool on the adapter. Turn clockwise until tight.

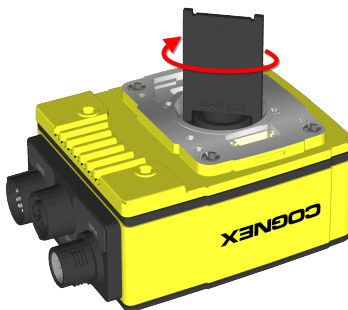


5. Remove the adapter tool.

6. Thread the lens into the vision system. Focusing of lens prior to installation of the rubber lens-locking cone is required.



7. Place the 13mm or 14mm rubber lens-locking cone over the M12 lens until it snaps tightly into place around the nose of the lens. When installing, avoid rotating the M12 lens.

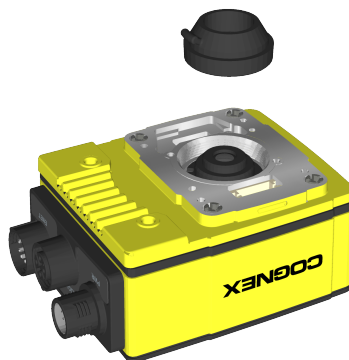


8. If using a lens cover accessory, attach the cover to the vision system.

Working Distance and Field of View (S-Mount/M12 Lenses)


The working distance is the distance from the In-Sight illumination accessory cover (ISLM-7000-xxx) to the part that needs to be inspected. Field of view is what the vision system can see at that distance. As the working distance increases, so does the size of the field of view.

Note:


- The following charts show the design field of view of the In-Sight S-Mount/M12 accessory lenses and is fully mapped onto the image sensor. Additional field beyond the design field of view may have vignetting. For supported In-Sight lenses, refer to [S-Mount/M12 Autofocus Accessories on page 15](#) and [S-Mount/M12 Manual Focus Accessories on page 17](#).
- For the In-Sight 7802P and 7902P, the S-Mount/M12 lens image circle size is slightly smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image. This is most noticeable with the smaller S-Mount/M12 6mm, 8mm and 12mm focal lenses.
- For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

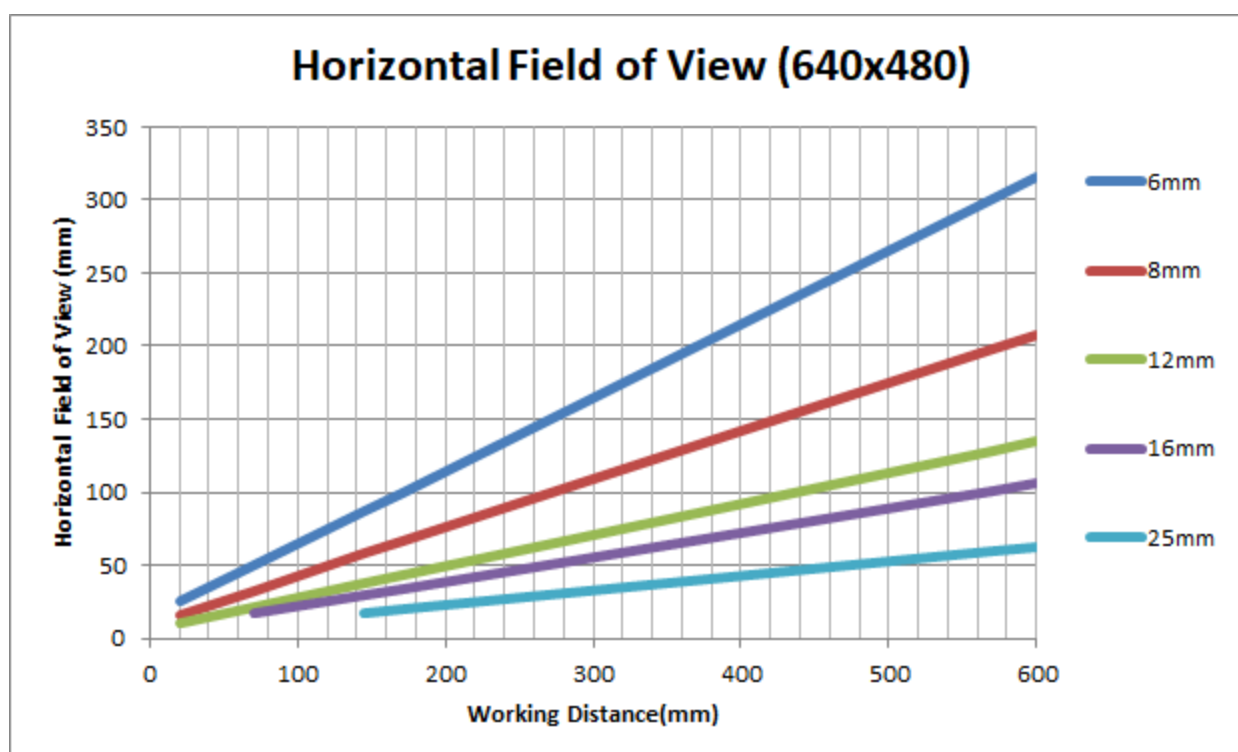


Horizontal Field of View (800x600)

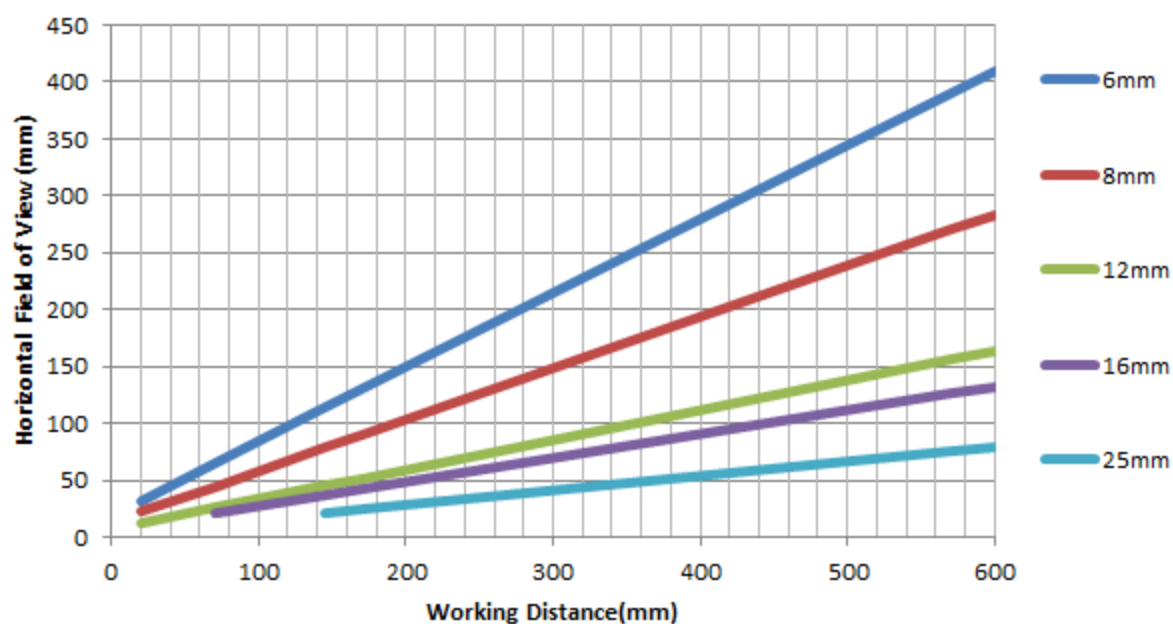


Horizontal Field of View (1280x1024)

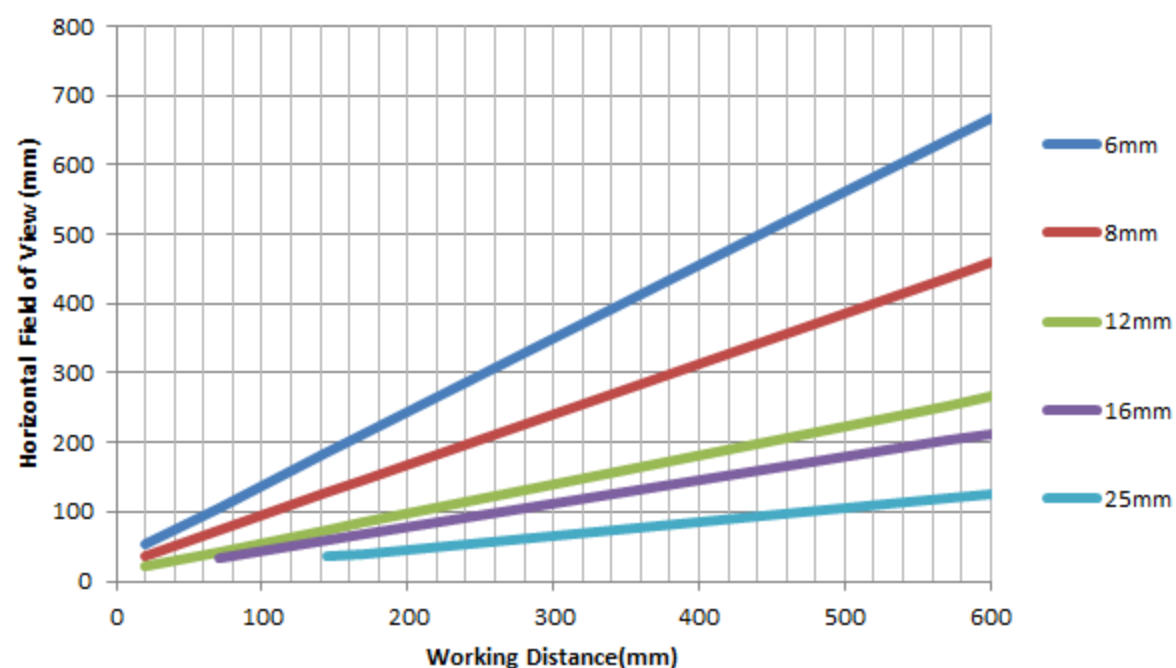

Horizontal Field of View (1600x1200)

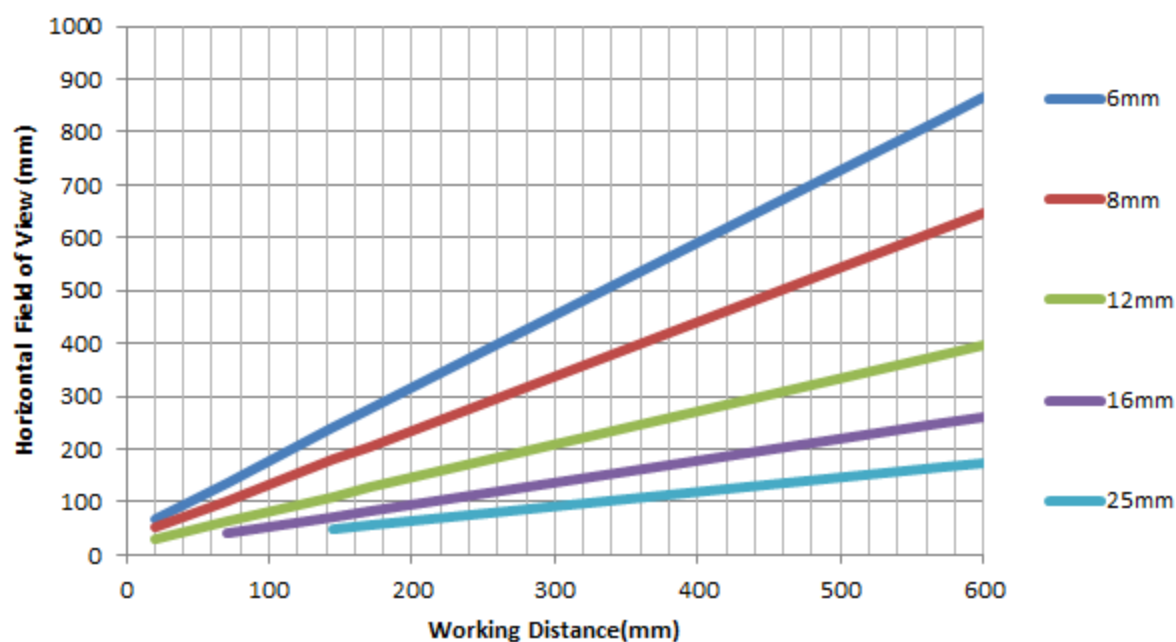

Horizontal Field of View (1920x1200)

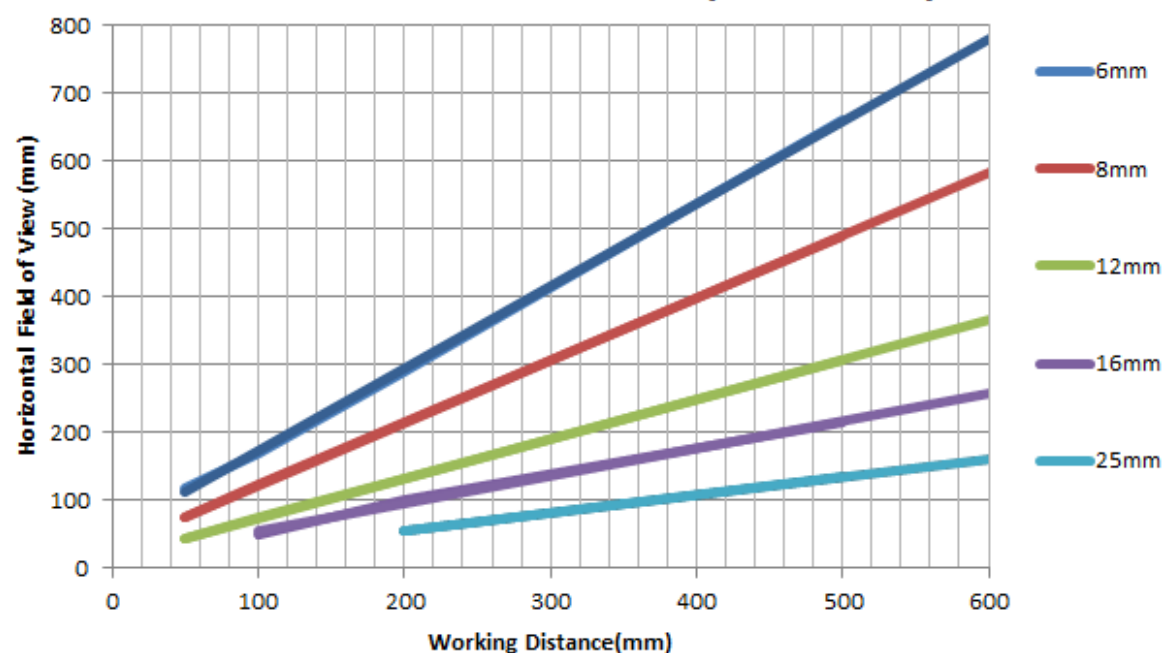

Mount the Vision System

The vision system provides mounting holes for attachment to a mounting surface.

Note:

- In the rear housing, the maximum insertion depth of the M3 screws should not exceed 3.5mm. This does not include the thickness of the mounting material used.



- In the front housing, the maximum insertion depth of the M4 screws should not exceed 3mm. This does not include the thickness of the mounting material used.

For more information, see [7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System on page 96](#) and [7802P/7902P/7905 Vision System on page 100](#).

CAUTION: The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.

1. Align the holes on the mounting surface with the mounting holes on the vision system.
2. Insert the M3 screws into the mounting holes and tighten using a 2.5mm hex wrench. The maximum torque is 0.90 Nm (8 in-lb).



Install the Mounting Bracket (BKT-INS-01)

Complete the following steps to attach the accessory mounting bracket (BKT-INS-01) to the vision system.

Note:

- When attaching the vision system to the mounting bracket:
 - If using the M3 screw holes, the thread length of the M3 screw should not exceed 7mm.
 - If using the 1/4 - 20 screw holes, the thread length of the screw should not exceed 10mm.



For more information, see [Mounting Bracket \(BKT-INS-01\) on page 106](#).



CAUTION: The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.

- Align the mounting bracket with the mounting holes on the vision system. If using the M3 mounting holes, the mounting bracket can be attached in either orientation.
- Insert the M3 screws into the mounting holes and tighten. The maximum torque is 0.90 Nm (8 in-lb).



Install the Converter Mounting Bracket (ISB-7000-7K)

Complete the following steps to attach the converter accessory mounting bracket (ISB-7000-7K) to the vision system.

Note: When attaching the vision system to the mounting bracket, use the M3 screws supplied with the mounting kit. If using the 1/4 - 20 or M6 screw holes, the thread length of the screw should not exceed 7mm. For more information, see [Converter Mounting Bracket \(ISB-7000-7K\) on page 107](#).

CAUTION: The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.

1. Align the converter mounting bracket with the mounting holes on the vision system.
2. Insert the M3 screws into the mounting holes and tighten using a 2.5mm hex wrench. The maximum torque is 0.90 Nm (8 in-lb).



Install the Converter Mounting Bracket (ISB-7000-5K)

Complete the following steps to attach the accessory converter mounting bracket (ISB-7000-5K) to the vision system.

Note: When attaching the vision system to the mounting bracket, use either the Phillips flat head M3 screws or the M4 screws supplied with the mounting kit. For more information, see [Converter Mounting Bracket \(ISB-7000-5K\) on page 108](#).

CAUTION: The vision system should be grounded, either by mounting the vision system to a fixture that is electrically grounded or by attaching a wire from the vision system's mounting fixture to frame ground or Earth ground. If a ground wire is used, it should be attached to one of the four mounting points on the back plate of the vision system and not to the mounting points on the front of the vision system.

1. Align the converter mounting bracket with the mounting holes on the vision system..
2. Insert the Phillips flat head screws into the mounting holes and tighten. The maximum torque is 0.56 Nm (5 in-lb).




Connect the External Light Cable (Optional)

The vision system's LIGHT connector is used to connect the External Light cable to an external lighting device, providing power and strobe control. The External Light cable can be connected to either a continuous or strobed lighting device. For a list of supported accessories, refer to [External Lights on page 20](#).

Note: The vision system supports connecting an integrated illumination accessory to the vision system's faceplate and connecting an external light to the vision system's LIGHT connector, but does not support using both lighting devices simultaneously.


1. Remove the protective cap from the LIGHT connector, if present.
2. Connect the External Light cable's M12 connector to the vision system's LIGHT connector.
3. Connect the other end of the Light cable to an external lighting device (for example, a strobe light). For more information, refer to [External Light Connector on page 92](#).

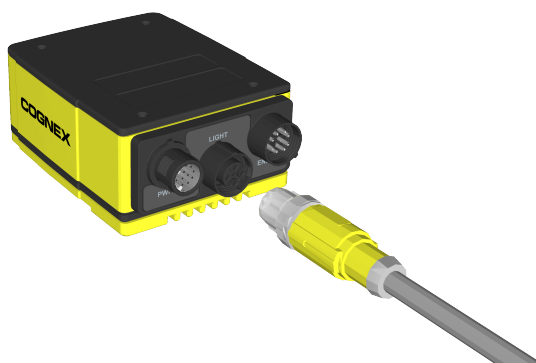

Connect the Ethernet Cable

CAUTION: The Ethernet cable shield must be grounded at the far end. Whatever this cable is plugged into (typically a switch or router) should have a grounded Ethernet connector. A digital voltmeter should be used to validate the grounding. If the far end device is not grounded, a ground wire should be added in compliance with local electrical codes.

1. Connect the Ethernet cable's M12 connector to the vision system ENET connector.
2. Connect the Ethernet cable's RJ-45 connector to a switch/router or PC, as applicable.

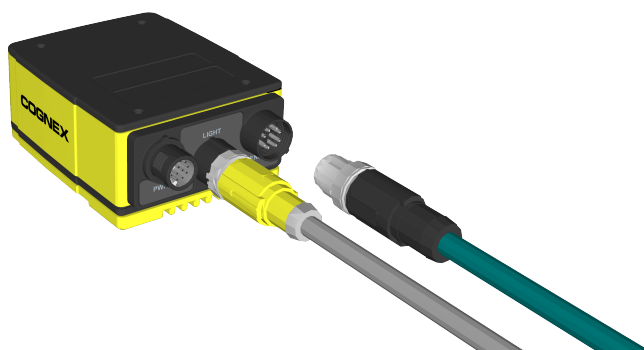

Connect the Breakout Cable

⚠ CAUTION: To reduce emissions, connect the far end of the Breakout cable shield to frame ground.


Note:

- Perform wiring or adjustments to I/O devices when the vision system is not receiving power.
- You can cut exposed wires short or trim wire ends. You also can tie the wires back if you use a tie made of non-conductive material. Keep bare wires separated from the +24VDC wire.
- When using the 15 meter Breakout cable, full 24VDC voltage must be maintained at the input leads of the Breakout cable when the vision system is operating.

1. Verify that the 24VDC power supply is unplugged and not receiving power.
2. Optionally, connect the I/O wires to an appropriate device (for example, a PLC or a serial device). For more information, refer to [Breakout Cable on page 94](#).
3. Attach the Breakout cable's +24VDC (Red wire) and GND (Black wire) to the corresponding terminals on the power supply.

⚠ CAUTION: Never connect voltages other than 24VDC. Always observe the polarity shown.

4. Connect the Breakout cable's M12 connector to the vision system PWR connector.

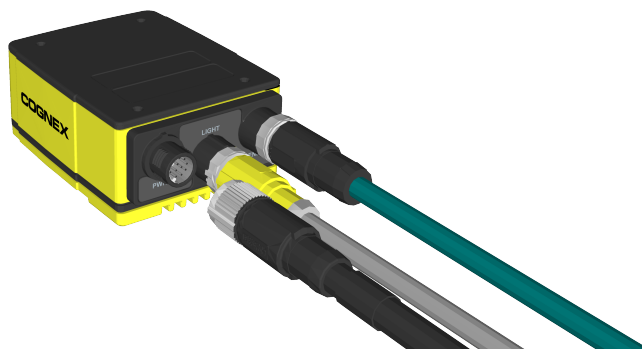

5. Restore power to the 24VDC power supply and turn it on if necessary.

Connect the CIO-MICRO I/O Module (Optional)


The vision system can access the CIO-MICRO I/O module's general-purpose input and output lines via an Ethernet connection to the I/O module. Optionally, the I/O Module cable can be connected to access the I/O module's TRIGGER+, TRIGGER-, HS OUT 0, HS OUT 1 and HS COMMON lines.

Note:


- When the vision system is connected to the I/O Module cable:
 - Illumination accessories attached to the vision system faceplate or LIGHT connector are not supported. If these illumination accessories are attached, the Breakout cable must be used to supply power to the vision system and a connection to the I/O module established via Ethernet only.
 - The vision system's IN 1, IN 2 / HS OUT 2, and IN 3 / HS OUT 3 lines are not supported.



- HS OUT 0 and HS OUT 1 are configurable as NPN (current sinking) or PNP (current sourcing) with 50mA maximum current and the general-purpose outputs are configurable as NPN (current sinking) or PNP (current sourcing) with 100mA maximum current.
- The CIO-MICRO I/O module does not support Gigabit pass-through operation. If you need Gigabit operation, connect a LAN cable from a Gigabit Ethernet switch to the I/O module's LAN port and connect the vision system Ethernet cable to the Gigabit Ethernet switch.
- Perform wiring or adjustments to I/O devices when the vision system is not receiving power.

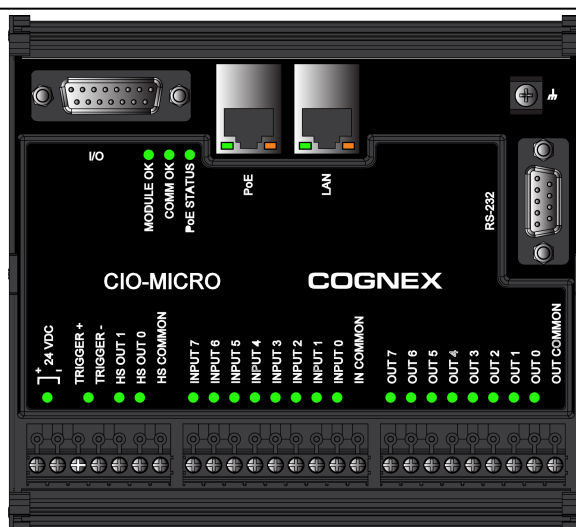


| I/O Port | Connects the I/O module to the vision system using the I/O Module cable, and provides power, trigger and high-speed output signals to the vision system. |
|----------------|--|
| MODULE OK LED | Illuminates after the I/O module has powered on, has booted up, and is ready to communicate with the vision system. |
| COMM OK LED | Blinks continuously until the vision system has established a successful connection to the I/O module from In-Sight software. Once successfully connected and communicating properly, the green LED is constantly illuminated. |
| PoE STATUS LED | Not supported. When the vision system is connected to the I/O module's PoE port, the POE STATUS LED may blink. This is normal and does not affect operation of the vision system. |

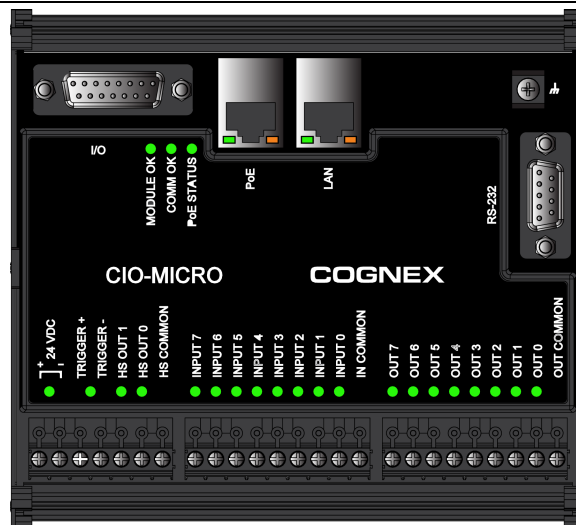


| | |
|---|---|
| PoE Port | Connects the I/O module to the vision system, providing the vision system with Ethernet. The green LED blinks when a network connection to the vision system is detected. The orange LED blinks when network activity is detected. |
| LAN Port | Connects the I/O module to an Ethernet network. The green LED blinks when a network connection to the local area network is detected. The orange LED blinks when network activity is detected. |
| Frame Ground Terminal | Connects the I/O module to a frame ground. |
| RS-232 Port | Connects the I/O module to an external serial device using an RS-232 (DB9) serial cable. Provides RS-232 communications to the vision system. |
| High-Speed Output Status LEDs (HS OUT 0 and HS OUT 1) | <p>Illuminates to indicate the high-speed output signal for the In-Sight vision system has switched ON. The LEDs illuminate even if the I/O module's high-speed terminals are not connected to anything. In addition, the I/O module displays the last known state of the high-speed output line. Therefore, the LEDs may be illuminated even if the vision system's I/O module cable is disconnected from the I/O module.</p> <p>Note: The I/O module's high-speed output terminals (labeled HS OUT 0 and HS OUT 1) correspond to the vision system's built-in high-speed outputs when connected to the I/O module cable. These signals are considered high-speed because they pass directly through the I/O module without processing, which provides minimal delay.</p> |
| I/O and Trigger Status LEDs | Illuminates to indicate that an input/output signal has switched ON. |
| Terminal Blocks | Connects the I/O module to 24VDC power, trigger, external I/O, high-speed outputs and common connections. |

1. Connect the I/O module's power wires.

 **CAUTION:** Never connect the I/O module to a power source other than 24VDC. Any other voltage creates a risk of fire or shock and can damage the hardware. Do not connect the 24VDC power source to any terminals other than the 24VDC + and – power terminals.

- a. Verify that the 24VDC power supply is unplugged and not receiving power.
 - b. Use a screwdriver to loosen the I/O module's power terminals (labeled 24VDC + and –).
 - c. Insert the 24VDC + and – wires (16 - 22 AWG, solid or stranded wire) from the power supply into the 24VDC + and – terminals on the I/O module.
 - d. Tighten the screw terminals with the screwdriver to secure the wire leads in the terminal block; the maximum torque is 0.1921 Nm (1.7 in-lb).
2. Connect a frame ground wire to the I/O module's Frame Ground terminal. Connect the other end of the frame ground wire to frame ground.


 **CAUTION:** The shield ground connections of the RS-232 port, LAN port, PoE port, I/O port and Frame Ground terminal are internally connected. The system grounding is at a zero ground potential. This zero-ground potential extends through the cable and to peripheral equipment, such as a vision system or PLC. To ensure safe operating conditions, check ground connections to ensure that they meet a zero ground potential.

3. Connect the I/O module's I/O wires.
 - a. Determine how I/O devices will be connected to the I/O module's input and output terminals.
 - b. To loosen the appropriate screw terminals, use a screwdriver.
 - c. Connect the input and output wires to the input and output terminals.
 - d. Connect the other end of the input and output wires to the corresponding I/O device.
 - e. Tighten the screw terminals with the screwdriver to secure the wire leads in the terminal block; the maximum torque is 0.1921 Nm (1.7 in-lb).
4. To connect the vision system to a serial device, plug a RS-232 serial cable (DB9 male connector) into the I/O module's RS-232 port and connect the other end of the cable to the serial device. Tighten the connector screws to secure it to the I/O module.
5. Connect to an Ethernet network.
 - a. Connect a LAN cable (RJ-45 connector) to the I/O module's LAN port.
 - b. Connect the other end of the LAN cable to a switch/router or PC, as applicable.
6. Connect the vision system's Ethernet cable.
 - a. Connect the Ethernet cable's M12 connector to the vision system ENET connector.
 - b. Connect the Ethernet cable's RJ-45 connector to the I/O module's PoE port or to a switch/router, as applicable.
7. (Optional) Connect the I/O Module cable (CCB-PWRIO-MOD-xx) to the vision system to gain access to the I/O module's TRIGGER+, TRIGGER-, HS OUT 0, HS OUT 1 and HS COMMON terminals.
 - a. Connect the I/O Module cable's M12 connector to the vision system's PWR connector.
 - b. Connect the I/O Module cable's DB15 connector to the I/O module's I/O connector.
 - c. Restore power to the 24VDC power supply and turn it on if necessary.

Connect the CIO-1400 I/O Expansion Module (Optional)


Note:

- When connected to the CIO-1400 I/O expansion module:
 - HS OUT 0 and HS OUT 1 are configurable as NPN (current sinking) with 50mA maximum current and the general-purpose outputs are configurable as NPN (current sinking) or PNP (current sourcing) with 100mA maximum current.
 - The vision system's IN 1, IN 2 / HS OUT 2, and IN 3 / HS OUT 3 lines are not supported.
- Perform wiring or adjustments to I/O devices when the vision system is not receiving power.

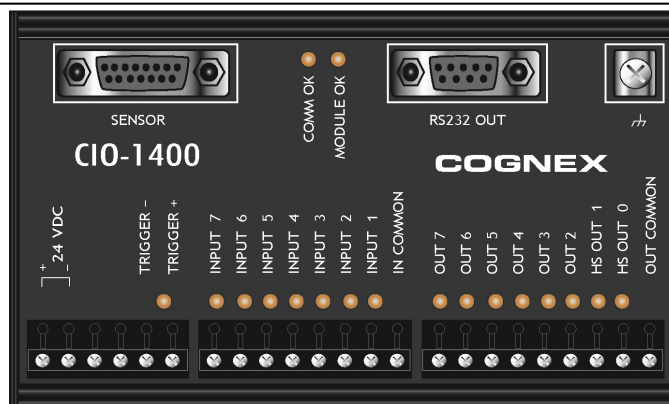


| Connector/Indicator | Description |
|--------------------------------------|--|
| COMM OK LED (yellow) | Illuminates to indicate that the vision system and I/O module are communicating properly. |
| MODULE OK LED (yellow) | Illuminates after the I/O module has initialized and is ready to communicate with the vision system. |
| I/O and Trigger Status LEDs (yellow) | Illuminates to indicate when an input/output has switched ON. |
| SENSOR Port | Connects the I/O module to the vision system using the I/O Module cable, which provides power, trigger, I/O and RS-232 signals to the vision system. |
| RS232 OUT Port | Connects the I/O module to an RS-232 serial cable, which provides RS-232 communications between the I/O module and an external serial device. |
| Frame Ground Terminal | Connects the I/O module to a common frame ground. |

1. Connect the I/O module's power wires.

 **CAUTION:** Never connect the I/O module to a power source other than 24VDC. Any other voltage creates a risk of fire or shock and can damage the hardware. Do not connect the 24VDC power source to any terminals other than the 24VDC + and – power terminals.

- a. Verify that the 24VDC power supply is unplugged and not receiving power.
 - b. Use a screwdriver to loosen the I/O module's power terminals (labeled 24VDC + and –).
 - c. Insert the 24VDC + and – wires (16 - 26 AWG, solid or stranded wire) from the power supply into the 24VDC + and – terminals on the I/O module.
 - d. Tighten the screw terminals with the screwdriver to secure the wire leads in the terminal block. The maximum torque is 0.4 Nm (3.5 in-lb).
2. Connect a frame ground wire to the I/O module's Frame Ground terminal. Connect the other end of the frame ground wire to frame ground.

 **CAUTION:** The shield ground connections of the RS232 OUT port, SENSOR port and Frame Ground terminal are internally connected. The system grounding is designed to be at a zero ground potential; this zero ground potential extends through the cable and to peripheral equipment (e.g. a vision system, PLC, etc.). To ensure safe operating conditions, it is strongly recommended that all ground connections are checked to ensure that a zero ground potential is met.

3. Connect the I/O module's I/O wires.
 - a. Determine how I/O devices will be connected to the I/O module's input and output terminals.
 - b. To loosen the appropriate screw terminals, use a screwdriver.
 - c. Connect the input and output wires to the input and output terminals.
 - d. Connect the other end of the input and output wires to the corresponding I/O device.
 - e. Tighten the screw terminals with the screwdriver to secure the wire leads in the terminal block. The maximum torque is 0.4 Nm (3.5 in-lb).
4. To connect the vision system to a serial device, plug an RS-232 serial cable (DB9 male connector) into the I/O module's RS232 OUT port and connect the other end of the cable to the serial device. Tighten the connector screws to secure it to the I/O module.
5. Connect the I/O Module cable (CCB-PWRIO-MOD-xx) to the vision system.
 - a. Connect the I/O Module cable's M12 connector to the vision system's PWR connector.
 - b. Connect the I/O Module cable's DB15 connector to the I/O module's SENSOR port.
 - c. Restore power to the 24VDC power supply and turn it on if necessary.

Replace the SD Card (Optional)

The vision system is equipped with a Micro SD card slot and an 8GB SD card is pre-installed for saving job and image files. Complete the following steps to replace the pre-installed SD card.

Note: The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system.

CAUTION:

- Hot-plugging the SD card is not supported and may damage the SD card and/or lead to unexpected behavior.



- IP67 protection requires that all cables are properly attached (or the provided connector plug installed), the IP67-rated lens cover is properly installed and the Micro SD card cover is fastened in place.
- Observe ESD precautions when installing or removing an SD card or other accessories.

1. Remove power from the vision system.
2. Unscrew the screws in the Micro SD card cover and open the card slot.
3. Remove the existing SD card from the Micro SD card slot.
4. Insert the new SD card into the Micro SD card slot, ensuring the card is properly oriented.
5. Replace the SD card cover, reinsert the screws and torque screws to 0.18 Nm (25 in-oz).




6. Restore power to the vision system.

Replace the LED Ring Light (Optional)


The illumination accessory (ISLM-7000-WHI) has a white LED ring light pre-installed. Complete the following steps to replace the pre-installed LED ring light.

CAUTION:

- Do not hot-plug the illumination accessory. Verify the vision system is not receiving power when connecting or disconnecting the illumination accessory. Failure to remove power during this procedure may result in damage to the vision system and/or the illumination accessory.
- Tighten all illumination accessory screws in the following sequence.

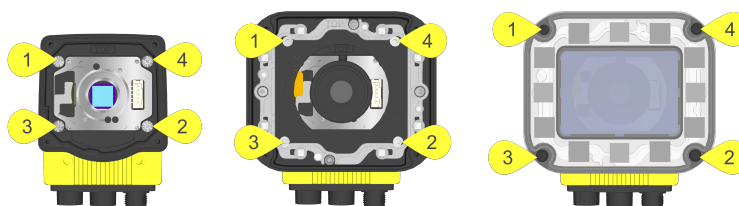


1. Remove power from the vision system.
2. Use a 2mm hex wrench to remove the four M3 x 12mm screws and remove the cover.

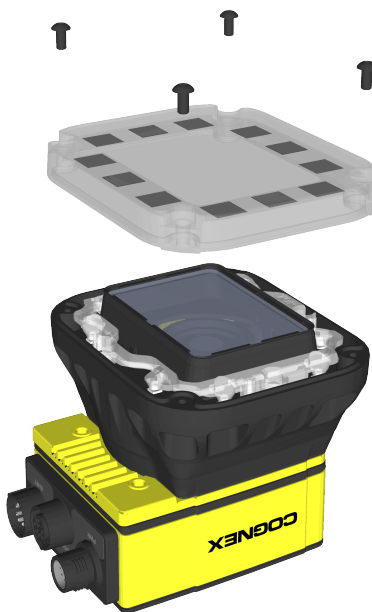


3. Remove the keyed light baffle.

Note: This step includes an optional bandpass filter accessory installed to the light baffle. For more information, refer to [In-Sight Lenses, Lights and Covers on page 11](#).

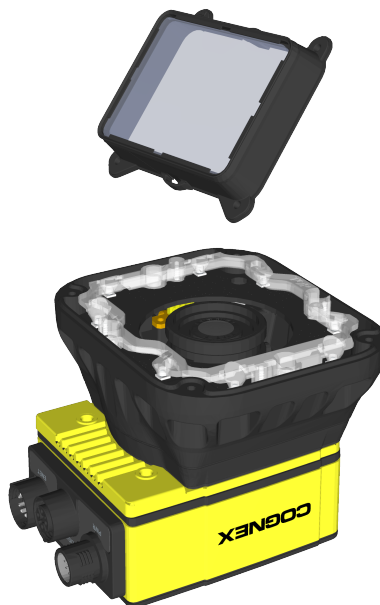


4. The LED ring light screw holes are indicated by a triangle symbol ►. Use a 2mm hex wrench to remove the four M2.5 x 6mm screws and remove the LED ring light from the light housing.

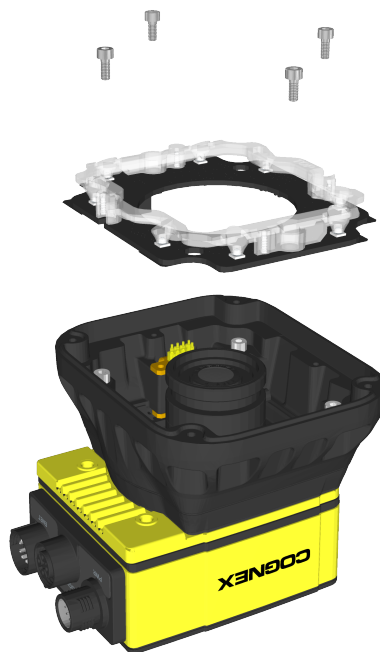

5. Install the new LED ring light.


⚠ CAUTION: Do not hot-plug the LED ring light. Verify the vision system is not receiving power when connecting or disconnecting the LED ring light.

- Place the new LED ring light inside the light housing, with "TOP" oriented upward.
- Insert the four M2.5 x 6mm screws into the screw holes indicated by a triangle symbol ►.
- Tighten the screws using a 2mm hex wrench. The maximum torque is 0.34 Nm (3 in-lb).

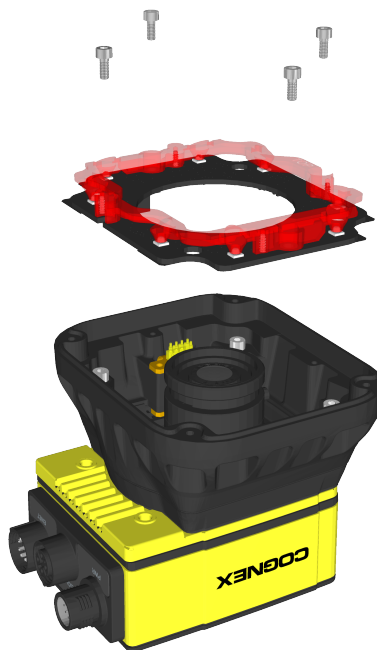


6. Install the light baffle.
 - a. Tilt the light baffle toward the light housing and maneuver the light baffle past the top of the LED ring light structure.
 - b. Compress the light baffle and maneuver the bottom of the light baffle past the bottom of the LED ring light structure until the light baffle snaps into place, with the keyed tabs sitting flush over each light housing captive screw access hole.

Note: This step includes an optional bandpass filter accessory installed to the light baffle. For more information, refer to [In-Sight Lenses, Lights and Covers on page 11](#).

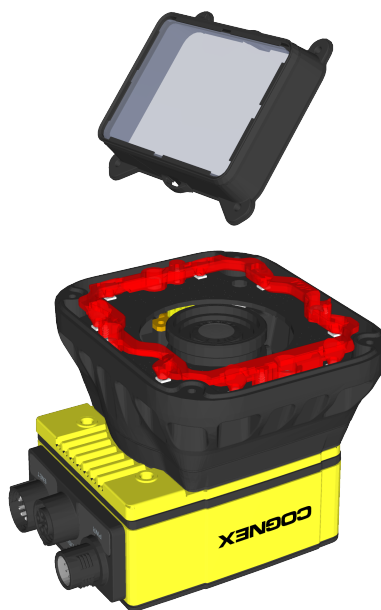

7. Install the cover.

- a. Place the cover on the light housing.
- b. Align the central clear region of the cover with the light baffle edges.
- c. Insert the four M3 x 12mm screws and use a 2mm hex wrench to torque screws to 0.31 Nm (2.75 in-lb).

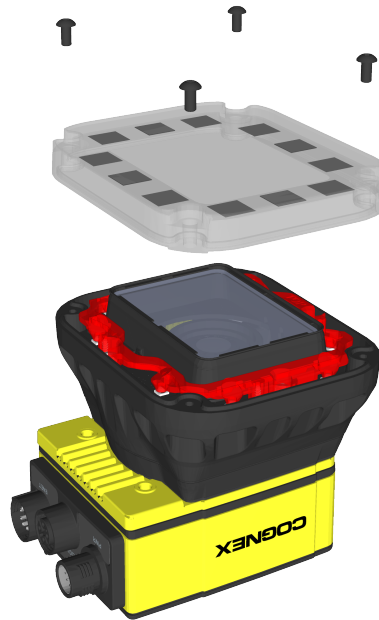

8. Restore power to the vision system.


Replace the M12 Autofocus Lens (Optional)

The autofocus module accessory (ISAF-7000-8mm) has an 8mm M12 lens pre-installed. Complete the following steps to replace the pre-installed M12 lens.


Note: For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see [Mechanical Vignetting on page 111](#).

CAUTION:

- Do not hot-plug the illumination accessory. Verify the vision system is not receiving power when connecting or disconnecting the illumination accessory. Failure to remove power during this procedure may result in damage to the vision system and/or the illumination accessory.
- Tighten all illumination accessory screws in the following sequence.

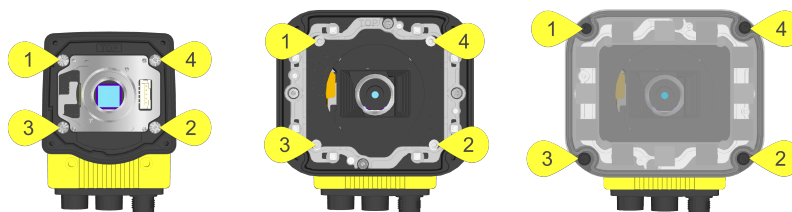


- If the autofocus module is already installed to the vision system, you must first log onto the vision system using In-Sight Explorer software and reset the focus position to 0. Refer to the *In-Sight® Explorer Help* file for more information.
- Remove power from the vision system.
- Use a 2mm hex wrench to remove the four M3 x 12mm screws and remove the cover.

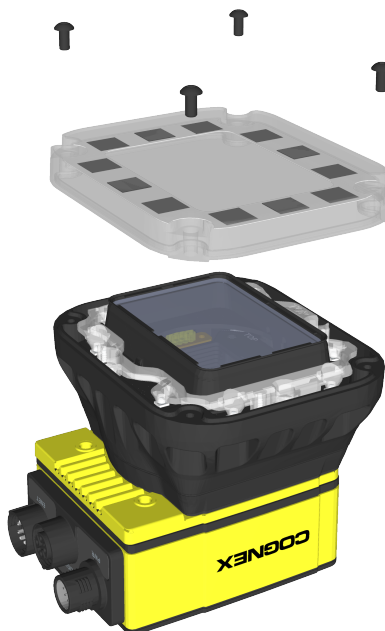

4. Remove the keyed light baffle.

Note: This step includes an optional bandpass filter accessory installed to the light baffle. For more information, refer to [In-Sight Lenses, Lights and Covers on page 11](#).

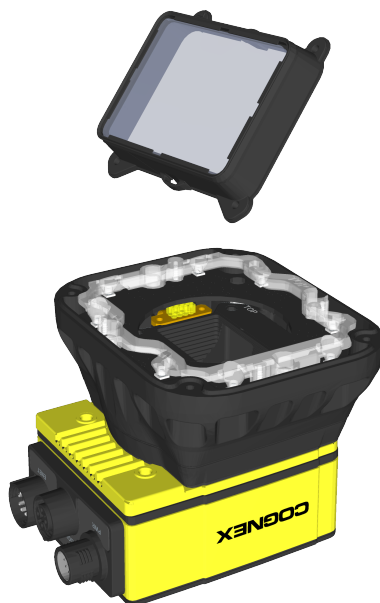

5. The light housing contains four captive screws that are accessible via captive screw access holes in the LED ring light board. Use a 2mm hex wrench to loosen the four captive screws and remove the light housing.

CAUTION:



- Do not hot-plug the LED ring light. Verify the vision system is not receiving power when connecting or disconnecting the LED ring light.
- A connector protrudes from the underside of the light housing and can be damaged if placed on a hard surface.




6. Use a 1.5mm hex wrench to loosen the three captive screws in the autofocus module and remove the autofocus module from the vision system.


CAUTION: Do not hot-plug the autofocus module. Verify the vision system is not receiving power when connecting or disconnecting the autofocus module.



7. Remove the M12 lens from the autofocus module.
 - a. Remove the blue threaded lens nut on the underside of the autofocus module.

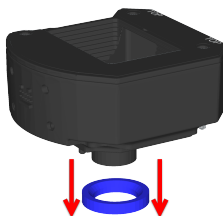

- b. Remove the M12 lens from the autofocus module.

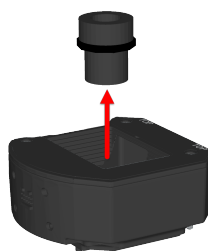


8. Install the new M12 lens.

- a. An extra black lens nut is included with the lens toolkit accessory (ISAF-7000-TOOL). Thread this black lens nut on the new M12 lens until snug.




- b. Drop the new M12 lens into the module.

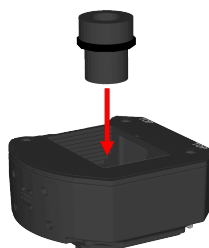


- c. Quarter-turn the thread of the lens clockwise, to ensure the lens is seated in the lens carrier.




- d. Once the lens is in the module, place the lens tool directly on the lens, with the padded end of the tool pressed against the lens.

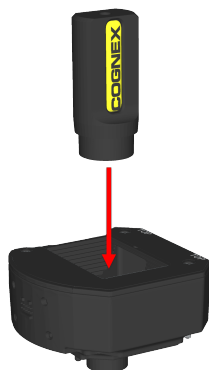


- e. With the lens tool, apply just enough pressure on the front of the lens to prevent the lens from moving. With the chamfer side of the blue lens nut facing the module, screw the blue nut onto the back of the lens. Once the threads of the blue nut are engaged with the lens, remove the lens tool and continue threading the blue nut until it is snug against the focus mechanism. The lens nut should be tight enough that it does not fall off due to vibration.

 **CAUTION:** Use light axial force on the lens tool when installing or removing the lens.

Chamfer Side of Blue Lens Nut:

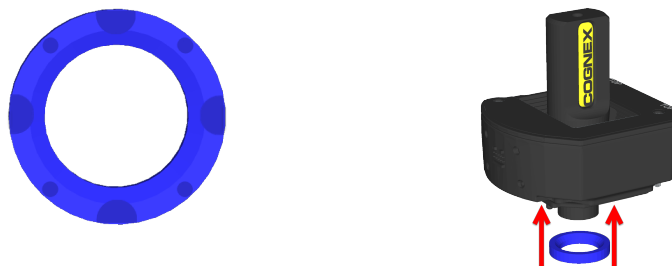

9. Install the autofocus module.

 **CAUTION:** Do not hot-plug the autofocus module. Verify the vision system is not receiving power when connecting or disconnecting the autofocus module.

- There are two alignment pins on the base of the autofocus module. Seat the pins into the vision system faceplate.
- There are three captive screws in the autofocus module. Partially thread the screws into the vision system faceplate using a 1.5mm hex wrench.
- Once threaded, torque the captive screws to 0.5 Nm (4.43 in-lb) using a torque screwdriver with a 1.5mm hex torque bit capable of reaching 15mm into a 2.5mm diameter hole. For example, Wiha Tools 1.5mm Hex Metric Torque Blade (SKU 28545) used with the Adjustable Torque Handle (SKU 28550).



10. Install the light housing.

CAUTION:

- Do not hot-plug the LED ring light. Verify the vision system is not receiving power when connecting or disconnecting the LED ring light.
- A connector protrudes from the underside of the light housing and can be damaged if placed on a hard surface.

Note: If a different LED color is required, refer to [Replace the LED Ring Light \(Optional\) on page 57](#).


- a. Place the light housing with LED ring light on top of the spacer, with “TOP” oriented upward.
- b. Verify seating of the gasket on the top of the spacer.
- c. There are four captive screw access holes near the white circles on the LED ring light. Use a 2mm hex wrench to torque the captive screws to 0.34 Nm (3 in-lb).



11. Install the light baffle.


Note: This step includes an optional bandpass filter accessory installed to the light baffle. For more information, refer to [In-Sight Lenses, Lights and Covers on page 11](#).

- a. Tilt the light baffle toward the light housing and maneuver the light baffle past the top of the LED ring light structure.
- b. Compress the light baffle and maneuver the bottom of the light baffle past the bottom of the LED ring light structure until the light baffle snaps into place, with the keyed tabs sitting flush over each light housing captive screw access hole.

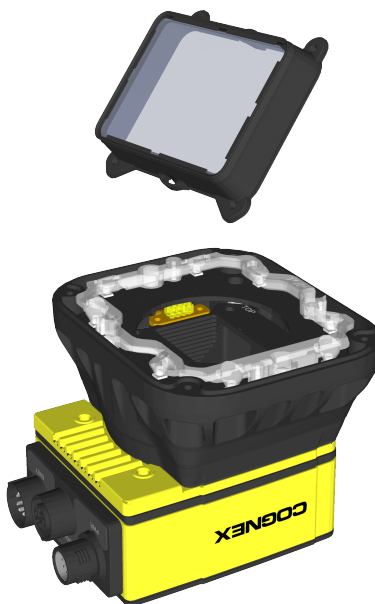

12. Install the cover.

- a. Place the cover on the light housing.
- b. Align the central clear region of the cover with the light baffle edges.
- c. Insert the four M3 x 12mm screws and use a 2mm hex wrench to torque screws to 0.31 Nm (2.75 in-lb).

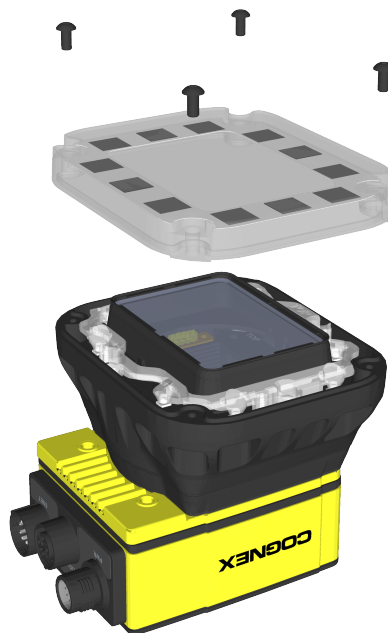

13. Restore power to the vision system.

Specifications

The following sections list general specifications for the vision system.


7500 Series Vision System Specifications

| Specifications | 7500 | 7500C | 7501 | 7501C |
|--|---|------------------------|---|--------------|
| Minimum Firmware Requirement | In-Sight version 5.4.0 | In-Sight version 5.5.0 | | |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. | | | |
| Image Processing Memory | 512MB SDRAM | | | |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. | | | |
| Sensor Type | 1/1.8-inch CMOS, global shutter | | | |
| Sensor Properties | 800 x 600: 4.5mm diagonal, 4.5 x 4.5µm sq. pixels | | 7.38mm diagonal, 4.5 x 4.5µm sq. pixels | |
| | 640 x 480: 3.6mm diagonal, 4.5 x 4.5µm sq. pixels | | | |
| Maximum Image Resolution (pixels) ¹ | 800 x 600 ² | | 1280 x 1024 | |
| | 640 x 480 | | | |
| Electronic Shutter Speed | 800 x 600: 14µs to 550ms | | 17µs to 750ms | |
| | 640 x 480: 14µs to 520ms | | | |
| Acquisition | Rapid reset, progressive scan, full-frame integration. | | | |
| Bit Depth | 256 grey levels (8 bits/pixel) | 24-bit color | 256 grey levels (8 bits/pixel) | 24-bit color |
| Frames Per Second (FPS) ³ | 800 x 600: 165 FPS | 800 x 600: 100 FPS | 76 FPS | 45 FPS |
| | 640 x 480: 217 FPS | 640 x 480: 135 FPS | | |
| Lens Type | C-Mount or S-Mount/M12 | | | |
| Trigger | 1 opto-isolated, acquisition trigger input. | | | |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² The default resolution is 800 x 600 pixels. The resolution can be configured as 640 x 480 pixels within the In-Sight Explorer software. For more information, see the *In-Sight® Explorer Help* file.

³ Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

| Specifications | 7500 | 7500C | 7501 | 7501C |
|---|---|-------|------|-------|
| Discrete Inputs | <ul style="list-style-type: none"> 3 general-purpose inputs when connected to the Breakout cable.¹ 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | |
| Discrete Outputs | <ul style="list-style-type: none"> 4 high-speed outputs when connected to the Breakout cable.² 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | |
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. | | | |
| Internal LED Ring Light | White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx). <ul style="list-style-type: none"> White LED color temperature: 4000 K Red LED wavelength: 617 nm Blue LED wavelength: 455 nm IR LED wavelength: 850 nm | | | |
| |  Note: Refer to DataMan documentation for DataMan accessory specifications. | | | |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). | | | |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 | | | |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. | | | |
| 1588 Support | Timestamp Resolution: 8ns Synchronization Accuracy Through Transparent Clock: 5µs | | | |
| Serial Communication | RS-232C when connected to the Breakout cable ³ or a compatible I/O module. | | | |
| Power Consumption | 24VDC ±10%, 1.5A maximum. | | | |
| Power Output | 24VDC @ 750mA maximum to external light. | | | |
| Material | Die-cast and extruded aluminum housing. | | | |
| Finish | Painted. | | | |

¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

² When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

³ If hardware handshaking is required, an I/O module must be used.

| Specifications | 7500 | 7500C | 7501 | 7501C |
|---|--|-------|------|-------|
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). | | | |
| Dimensions | <ul style="list-style-type: none"> 35.7mm (1.41in) x 60.5mm (2.38in) x 90.1mm (3.55in). 81.7mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). 102.7mm (4.04in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). 77.5mm (3.05in) x 88.9mm (3.50in) x 97.2mm (3.83in) with Illumination accessory (ISLM-7000-xxx). | | | |
| Weight | <ul style="list-style-type: none"> Vision system with no accessories attached: 240 g (8.47 oz.) Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) | | | |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) | | | |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) | | | |
| Humidity | < 80% non-condensing | | | |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. | | | |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. | | | |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. | | | |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS | | | |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.

² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

7600 Series Vision System Specifications


| Specifications | 7600 | 7600C |
|--|---|------------------------|
| Minimum Firmware Requirement | In-Sight version 5.4.0 | In-Sight version 5.5.0 |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. | |
| Image Processing Memory | 512MB SDRAM | |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. | |
| Sensor Type | 1/1.8-inch CMOS, global shutter | |
| Sensor Properties | 800 x 600: 4.5mm diagonal, 4.5 x 4.5µm sq. pixels | |
| | 640 x 480: 3.6mm diagonal, 4.5 x 4.5µm sq. pixels | |
| Maximum Image Resolution (pixels) ¹ | 800 x 600 ² | |
| | 640 x 480 | |
| Electronic Shutter Speed | 800 x 600: 14µs to 550ms | |
| | 640 x 480: 14µs to 520ms | |
| Acquisition | Rapid reset, progressive scan, full-frame integration. | |
| Bit Depth | 256 grey levels (8 bits/pixel) | 24-bit color |
| Frames Per Second (FPS) ³ | 800 x 600: 165 FPS | 800 x 600: 100 FPS |
| | 640 x 480: 217FPS | 640 x 480: 135 FPS |
| Lens Type | C-Mount or S-Mount/M12 | |
| Trigger | 1 opto-isolated, acquisition trigger input. | |
| Discrete Inputs | <ul style="list-style-type: none"> • 3 general-purpose inputs when connected to the Breakout cable.⁴ • 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² The default resolution is 800 x 600 pixels. The resolution can be configured as 640 x 480 pixels within the In-Sight Explorer software. For more information, see the *In-Sight® Explorer Help* file.

³ Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

⁴ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

| Specifications | 7600 | 7600C |
|---|--|-------|
| Discrete Outputs | <ul style="list-style-type: none"> • 4 high-speed outputs when connected to the Breakout cable.¹ • 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | |
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. | |
| Internal LED Ring Light | <p>White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx).</p> <ul style="list-style-type: none"> • White LED color temperature: 4000 K • Red LED wavelength: 617 nm • Blue LED wavelength: 455 nm • IR LED wavelength: 850 nm <p>Note:</p> <p> • For color vision systems, the white LED ring light should be used.</p> <p>• Refer to DataMan documentation for DataMan accessory specifications.</p> | |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). | |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 | |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. | |
| 1588 Support | <p>Timestamp Resolution: 8ns</p> <p>Synchronization Accuracy Through Transparent Clock: 5µs</p> | |
| Serial Communication | RS-232C when connected to the Breakout cable ² or a compatible I/O module. | |
| Power Consumption | 24VDC ±10%, 1.5A maximum. | |
| Power Output | 24VDC @ 750mA maximum to external light. | |
| Material | Die-cast and extruded aluminum housing. | |
| Finish | Painted. | |
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). | |

¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

² If hardware handshaking is required, an I/O module must be used.

| Specifications | 7600 | 7600C |
|---|--|-------|
| Dimensions | <ul style="list-style-type: none"> 35.7mm (1.41in) x 60.5mm (2.38in) x 90.1mm (3.55in). 81.7mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). 102.7mm (4.04in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). 77.5mm (3.05in) x 88.9mm (3.50in) x 97.2mm (3.83in) with Illumination accessory (ISLM-7000-xxx). | |
| Weight | <ul style="list-style-type: none"> Vision system with no accessories attached: 240 g (8.47 oz.) Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) | |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) | |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) | |
| Humidity | < 80% non-condensing | |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. | |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. | |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. | |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS | |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.

² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

7800/7801/7802 Vision System Specifications


| Specifications | 7800 | 7800C | 7801 | 7801C | 7802 | 7802C |
|--|---|------------------------|---|------------------------|---|------------------------------------|
| Minimum Firmware Requirement | In-Sight version 5.4.0 | In-Sight version 5.5.0 | In-Sight version 5.4.0 | In-Sight version 5.5.0 | In-Sight version 5.4.0 | In-Sight version 5.5.0 |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. | | | | | |
| Image Processing Memory | 512MB SDRAM | | | | | |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. | | | | | |
| Sensor Type | 1/1.8-inch CMOS, global shutter | | | | | |
| Sensor Properties | 800 x 600: 4.5mm diagonal, 4.5 x 4.5µm sq. pixels | | 7.38mm diagonal, 4.5 x 4.5µm sq. pixels | | 1600 x 1200: 9mm diagonal, 4.5 x 4.5µm sq. pixels | |
| | 640 x 480: 3.6mm diagonal, 4.5 x 4.5µm sq. pixels | | | | 800 x 600: 9mm diagonal, 4.5 x 4.5µm sq. pixels | |
| Maximum Image Resolution (pixels) ¹ | 800 x 600 ² | | 1280 x 1024 | | 1600 x 1200 ³ | |
| | 640 x 480 | | | | 800 x 600 (Low Light Mode) | |
| Electronic Shutter Speed | 800 x 600: 14µs to 550ms | | 17µs to 750ms | | 1600 x 1200: 20µs to 940ms | |
| | 640 x 480: 14µs to 520ms | | | | 800 x 600 (Low Light Mode): 20µs to 940ms | |
| Acquisition | Rapid reset, progressive scan, full-frame integration. | | | | | |
| Bit Depth | 256 grey levels (8 bits/pixel) | 24-bit color | 256 grey levels (8 bits/pixel) | 24-bit color | 256 grey levels (8 bits/pixel) | 24-bit color |
| Frames Per Second (FPS) ⁴ | 800 x 600: 165 FPS | 800 x 600: 100 FPS | 76 FPS | 45 FPS | 1600 x 1200: 53 FPS | 1600 x 1200: 33 FPS |
| | 640 x 480: 217 FPS | 640 x 480: 135 FPS | | | 800 x 600 (Low Light Mode): 53 FPS | 800 x 600 (Low Light Mode): 45 FPS |
| Lens Type | C-Mount or S-Mount/M12 | | | | | |
| Trigger | 1 opto-isolated, acquisition trigger input. | | | | | |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² The default resolution is 800 x 600 pixels. The resolution can be configured as 640 x 480 pixels within the In-Sight Explorer software. For more information, see the *In-Sight® Explorer Help* file.

³ The default resolution is 1600 x 1200 pixels. The resolution can be configured as 800 x 600 (Low Light Mode) within the In-Sight Explorer software. When using 800 x 600 (Low Light Mode), it provides increased light sensitivity at a reduced resolution. For more information, see the *In-Sight® Explorer Help* file.

⁴ Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

| Specifications | 7800 | 7800C | 7801 | 7801C | 7802 | 7802C |
|---|---|-------|------|-------|------|-------|
| Discrete Inputs | <ul style="list-style-type: none"> • 3 general-purpose inputs when connected to the Breakout cable.¹ • 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | | | |
| Discrete Outputs | <ul style="list-style-type: none"> • 4 high-speed outputs when connected to the Breakout cable.² • 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | | | |
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. | | | | | |
| Internal LED Ring Light | <p>White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx).</p> <ul style="list-style-type: none"> • White LED color temperature: 4000 K • Red LED wavelength: 617 nm • Blue LED wavelength: 455 nm • IR LED wavelength: 850 nm <p>Note:</p> <p> • For color vision systems, the white LED ring light should be used.</p> <p>• Refer to DataMan documentation for DataMan accessory specifications.</p> | | | | | |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). | | | | | |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 | | | | | |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. | | | | | |
| 1588 Support | <p>Timestamp Resolution: 8ns</p> <p>Synchronization Accuracy Through Transparent Clock: 5µs</p> | | | | | |
| Serial Communication | RS-232C when connected to the Breakout cable ³ or a compatible I/O module. | | | | | |
| Power Consumption | 24VDC ±10%, 1.5A maximum. | | | | | |
| Power Output | 24VDC @ 750mA maximum to external light. | | | | | |
| Material | Die-cast and extruded aluminum housing. | | | | | |
| Finish | Painted. | | | | | |

¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

² When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

³ If hardware handshaking is required, an I/O module must be used.

| Specifications | 7800 | 7800C | 7801 | 7801C | 7802 | 7802C |
|---|--|-------|------|-------|------|-------|
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). | | | | | |
| Dimensions | <ul style="list-style-type: none"> 35.7mm (1.41in) x 60.5mm (2.38in) x 90.1mm (3.55in). 81.7mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). 102.7mm (4.04in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). 77.5mm (3.05in) x 88.9mm (3.50in) x 97.2mm (3.83in) with Illumination accessory (ISLM-7000-xxx). | | | | | |
| Weight | <ul style="list-style-type: none"> Vision system with no accessories attached: 240 g (8.47 oz.) Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) | | | | | |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) | | | | | |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) | | | | | |
| Humidity | < 80% non-condensing | | | | | |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. | | | | | |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. | | | | | |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. | | | | | |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS | | | | | |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.

² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

7802P Vision System Specifications


| Specifications | 7802P |
|--|---|
| Minimum Firmware Requirement | In-Sight version 5.7.4 |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. |
| Image Processing Memory | 512MB SDRAM |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. |
| Sensor Type | 2/3-inch CMOS, global shutter |
| Sensor Properties | 7.8mm diagonal, 3.45 x 3.45µm sq. pixels |
| Maximum Image Resolution (pixels) ¹ | 1920 x 1200 |
| Electronic Shutter Speed | 21µs to 1000ms |
| Acquisition | Rapid reset, progressive scan, full-frame integration. High Dynamic Range (HDR+) available. |
| Bit Depth | 256 grey levels (8 bits/pixel) |
| Frames Per Second (FPS) ² | 55 FPS |
| Lens Type | C-Mount or S-Mount/M12 |
| Trigger | 1 opto-isolated, acquisition trigger input. |
| Discrete Inputs | <ul style="list-style-type: none"> • 3 general-purpose inputs when connected to the Breakout cable.³ • 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. |
| Discrete Outputs | <ul style="list-style-type: none"> • 4 high-speed outputs when connected to the Breakout cable.⁴ • 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

³ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

⁴ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

| Specifications | 7802P |
|---|--|
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. |
| Internal LED Ring Light | <p>White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx).</p> <ul style="list-style-type: none"> • White LED color temperature: 4000 K • Red LED wavelength: 617 nm • Blue LED wavelength: 455 nm • IR LED wavelength: 850 nm <p>Note:</p> <p> • For color vision systems, the white LED ring light should be used.</p> <p>• Refer to DataMan documentation for DataMan accessory specifications.</p> |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. |
| 1588 Support | <p>Timestamp Resolution: 8ns</p> <p>Synchronization Accuracy Through Transparent Clock: 5µs</p> |
| Serial Communication | RS-232C when connected to the Breakout cable ¹ or a compatible I/O module. |
| Power Consumption | 24VDC ±10%, 1.5A maximum. |
| Power Output | 24VDC @ 750mA maximum to external light. |
| Material | Die-cast and extruded aluminum housing. |
| Finish | Painted. |
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). |

¹ If hardware handshaking is required, an I/O module must be used.

| Specifications | 7802P |
|---|---|
| Dimensions | <ul style="list-style-type: none"> • 49.4mm (1.94in) x 60.5mm (2.38in) x 90.1mm (3.55in). • 95.3mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). • 116.3mm (4.58in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). • 131.7 (5.19in) x 68.0 (2.68in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-LG). • 161.7 (6.37in) x 68.0 (2.68in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-LG) and C-Mount cover extender accessory (COV-7000-CMNT-LGX). • 91.1mm (3.59in) x 88.9mm (3.50in) x 97.2mm (3.83in) with illumination accessory (ISLM-7000-xxx). |
| Weight | <ul style="list-style-type: none"> • Vision system with no accessories attached: 300 g (10.58 oz.) • Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) • Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) • Wide plastic C-Mount cover (COV-7000-CMNT-LG): 75.9 g (2.68 oz.) • Wide plastic C-Mount extender (COV-7000-CMNT-LGX): 25.0 g (0.88 oz.) • Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) • Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) |
| Humidity | < 80% non-condensing |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.

² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

7900/7901/7902 Vision System Specifications


| Specifications | 7900 | 7900C | 7901 | 7901C | 7902 | 7902C |
|--|---|------------------------|---|--|------------------------------------|------------------------------------|
| Minimum Firmware Requirement | In-Sight version 5.5.0 | In-Sight version 5.6.0 | | | In-Sight version 5.5.0 | In-Sight version 5.6.0 |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. | | | | | |
| Image Processing Memory | 512MB SDRAM | | | | | |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. | | | | | |
| Sensor Type | 1/1.8-inch CMOS, global shutter | | | | | |
| Sensor Properties | 800 x 600: 4.5mm diagonal, 4.5 x 4.5µm sq. pixels | | 7.38mm diagonal, 4.5 x 4.5µm sq. pixels | 1600 x 1200: 9mm diagonal, 4.5 x 4.5µm sq. pixels | | |
| | 640 x 480: 3.6mm diagonal, 4.5 x 4.5µm sq. pixels | | | 800 x 600 (Low Light Mode): 9mm diagonal, 4.5 x 4.5µm sq. pixels | | |
| Maximum Image Resolution (pixels) ¹ | 800 x 600 ² | | 1280 x 1024 | 1600 x 1200 ³ | | |
| | 640 x 480 | | | 800 x 600 (Low Light Mode) | | |
| Electronic Shutter Speed | 800 x 600: 14µs to 550ms | | 17µs to 750ms | 1600 x 1200: 20µs to 940ms | | |
| | 640 x 480: 14µs to 520ms | | | 800 x 600 (Low Light Mode): 20µs to 940ms | | |
| Acquisition | Rapid reset, progressive scan, full-frame integration. | | | | | |
| Bit Depth | 256 grey levels (8 bits/pixel) | 24-bit color | 256 grey levels (8 bits/pixel) | 24-bit color | 256 grey levels (8 bits/pixel) | 24-bit color |
| Frames Per Second (FPS) ⁴ | 800 x 600: 165 FPS | 800 x 600: 100 FPS | 76 FPS | 45 FPS | 1600 x 1200: 53 FPS | 1600 x 1200: 33 FPS |
| | 640 x 480: 217 FPS | 640 x 480: 135 FPS | | | 800 x 600 (Low Light Mode): 53 FPS | 800 x 600 (Low Light Mode): 45 FPS |
| Lens Type | C-Mount or S-Mount/M12 | | | | | |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² The default resolution is 800 x 600 pixels. The resolution can be configured as 640 x 480 pixels within the In-Sight Explorer software. For more information, see the *In-Sight® Explorer Help* file.

³ The default resolution is 1600 x 1200 pixels. The resolution can be configured as 800 x 600 (Low Light Mode) within the In-Sight Explorer software. When using 800 x 600 (Low Light Mode), it provides increased light sensitivity at a reduced resolution. For more information, see the *In-Sight® Explorer Help* file.

⁴ Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

| Specifications | 7900 | 7900C | 7901 | 7901C | 7902 | 7902C |
|---|--|-------|------|-------|------|-------|
| Trigger | 1 opto-isolated, acquisition trigger input. | | | | | |
| Discrete Inputs | <ul style="list-style-type: none"> 3 general-purpose inputs when connected to the Breakout cable.¹ 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | | | |
| Discrete Outputs | <ul style="list-style-type: none"> 4 high-speed outputs when connected to the Breakout cable.² 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | | | | |
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. | | | | | |
| Internal LED Ring Light | <p>White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx).</p> <ul style="list-style-type: none"> White LED color temperature: 4000 K Red LED wavelength: 617 nm Blue LED wavelength: 455 nm IR LED wavelength: 850 nm <p>Note:</p> <p> For color vision systems, the white LED ring light should be used.</p> <p>Refer to DataMan documentation for DataMan accessory specifications.</p> | | | | | |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). | | | | | |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 | | | | | |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. | | | | | |
| 1588 Support | <p>Timestamp Resolution: 8ns</p> <p>Synchronization Accuracy Through Transparent Clock: 5μs</p> | | | | | |
| Serial Communication | RS-232C when connected to the Breakout cable ³ or a compatible I/O module. | | | | | |
| Power Consumption | 24VDC ±10%, 1.5A maximum. | | | | | |
| Power Output | 24VDC @ 750mA maximum to external light. | | | | | |
| Material | Die-cast and extruded aluminum housing. | | | | | |

¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

² When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.


³ If hardware handshaking is required, an I/O module must be used.

| Specifications | 7900 | 7900C | 7901 | 7901C | 7902 | 7902C |
|---|--|-------|------|-------|------|-------|
| Finish | Painted. | | | | | |
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). | | | | | |
| Dimensions | <ul style="list-style-type: none"> 35.7mm (1.41in) x 60.5mm (2.38in) x 90.1mm (3.55in). 81.7mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). 102.7mm (4.04in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). 77.5mm (3.05in) x 88.9mm (3.50in) x 97.2mm (3.83in) with Illumination accessory (ISLM-7000-xxx). | | | | | |
| Weight | <ul style="list-style-type: none"> Vision system with no accessories attached: 240 g (8.47 oz.) Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) | | | | | |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) | | | | | |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) | | | | | |
| Humidity | < 80% non-condensing | | | | | |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. | | | | | |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. | | | | | |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. | | | | | |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS | | | | | |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.

² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

7902P/7905 Vision System Specifications

| Specifications | 7902P | 7905 | 7905C |
|--|---|---|--|
| Minimum Firmware Requirement | In-Sight version 5.7.4 | In-Sight version 5.6.0 | |
| Job/Program Memory | 7.2GB non-volatile flash memory; unlimited storage via remote network device. | | |
| Image Processing Memory | 512MB SDRAM | | |
| SD Card | 1 Micro SD card slot with an 8GB SD card pre-installed for saving job and image files. The vision system supports SD cards with a maximum capacity of 32GB, formatted with a FAT32 file system. | | |
| Sensor Type | 2/3-inch CMOS, global shutter | | |
| Sensor Properties | 7.8mm diagonal, 3.45 x 3.45µm sq. pixels | 11.1mm diagonal, 3.45 x 3.45µm sq. pixels | |
| Maximum Image Resolution (pixels) ¹ | 1920 x 1200 | 2448 x 2048 | |
| Electronic Shutter Speed | 21µs to 1000ms | | |
| Acquisition | Rapid reset, progressive scan, full-frame integration. High Dynamic Range (HDR+) available. | | Rapid reset, progressive scan, full-frame integration. |
| Bit Depth | 256 grey levels (8 bits/pixel) | | 24-bit color |
| Frames Per Second (FPS) ² | 55 FPS | 32 FPS | 17 FPS |
| Lens Type | C-Mount or S-Mount/M12 <div> Note: For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see Mechanical Vignetting on page 111.</div> | | |
| Trigger | 1 opto-isolated, acquisition trigger input. | | |
| Discrete Inputs | <ul style="list-style-type: none">• 3 general-purpose inputs when connected to the Breakout cable.³• 8 general-purpose inputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable.• 7 general-purpose inputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | |

¹ You can configure the number of image sensor rows and set them in the In-Sight Explorer software. If you decrease the number of rows, it increases the frames per second acquired by the vision system. Refer to the AcquireImage topic in the *In-Sight® Explorer Help* file for more information.

² Maximum frames per second are job-dependent, based on the minimum exposure for a full image frame capture using the dedicated acquisition trigger, and assumes there is no user interface connection to the vision system.

³ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

| Specifications | 7902P | 7905 | 7905C |
|---|---|------|-------|
| Discrete Outputs | <ul style="list-style-type: none"> • 4 high-speed outputs when connected to the Breakout cable.¹ • 2 high-speed outputs, plus 8 general-purpose outputs available when connected to the CIO-MICRO I/O Module via the I/O Module cable. • 2 high-speed outputs, plus 6 general-purpose outputs available when connected to the CIO-1400 I/O Expansion Module via the I/O Module cable. | | |
| Status LEDs | SD Card Status, Pass/Fail LED and Indicator Ring, Network LED and Error LED. | | |
| Internal LED Ring Light | White, Red, Blue or IR LED ring light used with the illumination accessory (ISLM-7000-xxx). <ul style="list-style-type: none"> • White LED color temperature: 4000 K • Red LED wavelength: 617 nm • Blue LED wavelength: 455 nm • IR LED wavelength: 850 nm <div> <i>Note:</i> For color vision systems, the white LED ring light should be used. </div> | | |
| In-Sight Illumination Accessory (ISLM-7000-xxx) | Cover is compliant with ANSI Z87.1-2003 Drop-Ball Impact Test (no fracture, 25.4mm diameter steel ball, vertical drop from 127cm). | | |
| In-Sight Autofocus Module Accessory (ISAF-7000-8mm) | Number of Focus Cycles: 20,000 <div> <i>Note:</i> For the In-Sight 7905, the S-Mount/M12 lens image circle size is smaller than the vision system's image sensor size, resulting in mechanical vignetting in the image when using any S-Mount/M12 lens. Therefore, S-Mount/M12 lenses are not recommended. For more information, see Mechanical Vignetting on page 111. </div> | | |
| Network Communication | 1 Ethernet port, 10/100/1000 BaseT with auto MDIX. IEEE 802.3 TCP/IP Protocol. Supports DHCP, static and link-local IP address configuration. | | |
| 1588 Support | Timestamp Resolution: 8ns Synchronization Accuracy Through Transparent Clock: 5µs | | |
| Serial Communication | RS-232C when connected to the Breakout cable ² or a compatible I/O module. | | |
| Power Consumption | 24VDC ±10%, 1.5A maximum. | | |
| Power Output | 24VDC @ 750mA maximum to external light. | | |
| Material | Die-cast and extruded aluminum housing. | | |
| Finish | Painted. | | |
| Mounting | Four M3 threaded mounting holes. 1/4-20, M6 and flathead mounting holes also available on mounting bracket accessory (ISB-7000-7K). M4 mounting holes also available on mounting bracket accessory (ISB-7000-5K). | | |

¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

² If hardware handshaking is required, an I/O module must be used.

| Specifications | 7902P | 7905 | 7905C |
|---|---|------|-------|
| Dimensions | <ul style="list-style-type: none"> 49.4mm (1.94in) x 60.5mm (2.38in) x 90.1mm (3.55in). 95.3mm (3.21in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT). 116.3mm (4.58in) x 60.5mm (2.38in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-EX). 131.7 (5.19in) x 68.0 (2.68in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-LG). 161.7 (6.37in) x 68.0 (2.68in) x 90.1mm (3.55in) with C-Mount cover accessory (COV-7000-CMNT-LG) and C-Mount cover extender accessory (COV-7000-CMNT-LGX). 91.1mm (3.59in) x 88.9mm (3.50in) x 97.2mm (3.83in) with illumination accessory (ISLM-7000-xxx). | | |
| Weight | <ul style="list-style-type: none"> Vision system with no accessories attached: 300 g (10.58 oz.) Standard plastic C-Mount cover (COV-7000-CMNT): 35 g (1.23 oz.) Standard extended plastic C-Mount cover (COV-7000-CMNT-EX): 43 g (1.52 oz.) Wide plastic C-Mount cover (COV-7000-CMNT-LG): 75.9 g (2.68 oz.) Wide plastic C-Mount extender (COV-7000-CMNT-LGX): 25.0 g (0.88 oz.) Autofocus module (ISAF-7000-8mm): 121.5 g (4.29 oz.) Illumination (ISLM-7000-WHI): 153.5 g (5.41 oz.) | | |
| Case Temperature ¹ | 0°C to 50°C (32°F to 122°F) | | |
| Storage Temperature | -20°C to 80°C (-4°F to 176°F) | | |
| Humidity | < 80% non-condensing | | |
| Protection | IP67 with all cables properly attached (or the provided connector plug installed), the IP67-rated cover properly installed, and the Micro SD card cover fastened in place. | | |
| Shock (Shipping and Storage) | IEC 60068-2-27: 18 shocks (3 shocks in each polarity in each (X, Y, Z) axis) 80 Gs (800m/s ² at 11ms, half-sinusoidal) with cables or cable plugs and a 150 gram or lighter lens attached. | | |
| Vibration (Shipping and Storage) ² | IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm) with cables or cable plugs and a 150 gram or lighter lens attached. | | |
| Regulations/Conformity | CE, FCC, KCC, TÜV SÜD NRTL, EU RoHS, China RoHS | | |

¹ To verify case temperature, use the EV GetSystemConfig("Internal.Temperature") Extended Native Mode command or GetSystemConfig("Internal.Temperature") spreadsheet function. When issued, it returns the vision system internal temperature in degrees Celsius, which is approximately 3 to 5 degrees above the vision system case temperature. For more information, see the *In-Sight® Explorer Help* file. A thermal scanner can also be used to determine the vision system case temperature. Additional cooling measures are required if the case temperature cannot be kept below 50°C. Examples of such measures include: extra heat sinking and/or air movement.


² Before you ship this product or any machinery that contains it, remove lenses that weigh more than 150 grams.

Acquisition Trigger Input

The vision system features one acquisition trigger input, which is optically isolated. You can configure the acquisition trigger input to trigger from an NPN (current sinking) or PNP (current sourcing) device.

| Specification | Description |
|-------------------|--|
| Voltage | ON: 15 to 28V DC (24VDC nominal) OFF: 0 to 5VDC (11.5VDC nominal threshold) |
| Current (Typical) | ON: 2.6mA to 4.9mA from 15 to 28V input OFF: < 830µA for < 5VDC input Resistance: ~6 kOhms |
| Delay | 190µs maximum latency between leading edge of trigger and start of acquisition. Input pulse should be a minimum of 1ms wide. |

- To trigger from an NPN type photoelectric sensor or PLC output, connect COMMON IN to +24VDC and connect TRIGGER to the output of the photoelectric sensor. When the output turns ON, it pulls TRIGGER down to 0VDC, turning the opto-coupler ON. For more information, refer to [Breakout Cable on page 94](#).
- To trigger from a PNP photoelectric sensor or PLC output, connect TRIGGER to the output of the photoelectric sensor and connect COMMON IN to 0VDC. When the output turns ON, it pulls TRIGGER up to +24VDC, turning the opto-coupler ON. For more information, refer to [Breakout Cable on page 94](#).

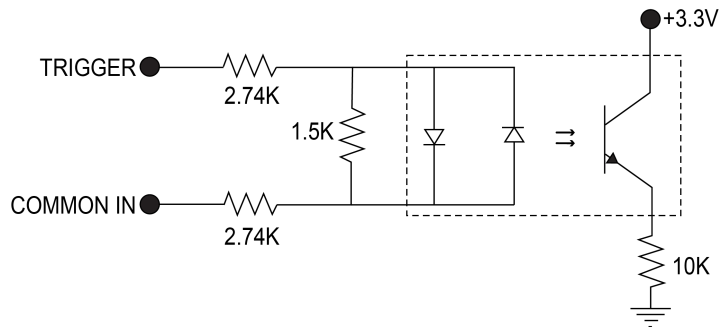


26.4V Max. across input pins - Transition approximately 12V (Min.)

General-Purpose Inputs

The vision system features three¹ built-in general-purpose inputs, which are optically isolated. The inputs can be configured as either NPN (current sinking) or PNP (current sourcing) lines.

| Specification | Description |
|-------------------|---|
| Voltage | ON: 15 to 28V DC (24VDC nominal) OFF: 0 to 5VDC (11.5VDC nominal threshold) |
| Current (Typical) | ON: 2.6mA to 4.9mA from 15 to 28V input OFF: < 830µA for < 5VDC input Resistance: ~6 kOhms |
| Delay | 1.11ms maximum latency between leading edge of trigger and start of acquisition. Input pulse should be a minimum of 1ms wide. |

- For NPN lines, connect COMMON IN to +24VDC and connect IN 1 to the output of the photoelectric sensor or PLC. When the output turns ON, it pulls IN 1 down to 0VDC, turning the opto-coupler ON.
- For PNP lines, connect IN 1 to the output of the detector and connect COMMON IN to 0VDC. When the output turns ON, it pulls IN 1 up to +24VDC, turning the opto-coupler ON.

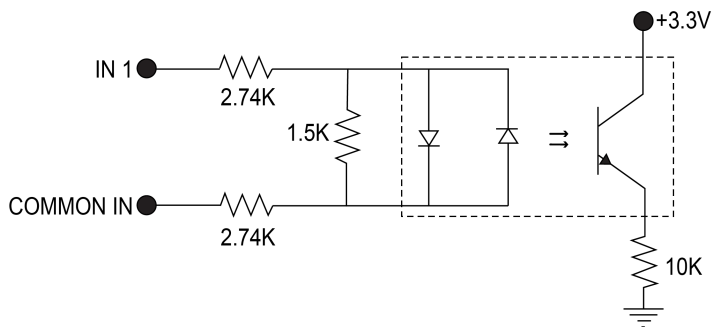

26.4V Max. across input pins - Transition approximately 12V (Min.)


¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.

High-Speed Outputs


The vision system features four¹ built-in, high-speed outputs, which are optically isolated. The high-speed outputs can be used as either NPN (current sinking) or PNP (current sourcing) lines.

| Specification | Description |
|--------------------|---|
| Voltage | 26.4VDC maximum through external load |
| Current | 50mA maximum sink or source current |
| | OFF state leakage current 100µA |
| | External load resistance 470 Ohms to 10K Ohms |
| | Each line rated at a maximum 50mA, protected against over-current, short circuits and transients from switching inductive loads. High current inductive loads require an external protection diode. |
| Delay ² | 25µs (maximum due to opto-isolators turning ON). |

For NPN lines, the external load should be connected between the output and the positive supply voltage (<26.4VDC). The output pulls down to less than 3VDC when ON, which causes current to flow through the load. When the output is OFF, no current flows through the load.

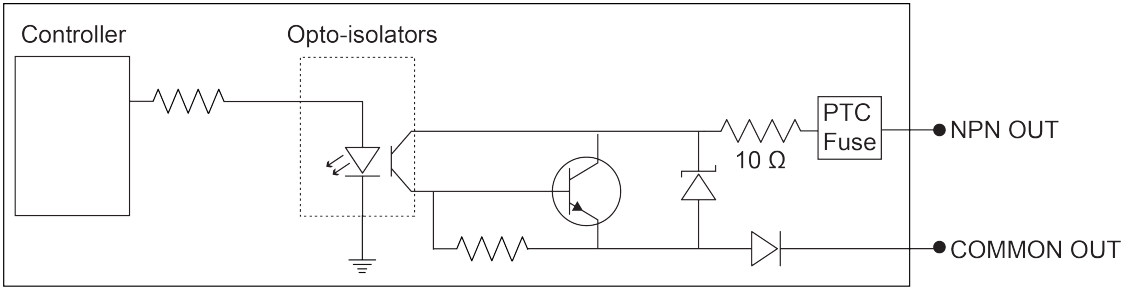

For PNP lines, the external load should be connected between the output and the negative supply voltage (0VDC). When connected to a 24VDC power supply, the output pulls up greater than 21VDC when ON, and current flows through the load. When the output is OFF, no current flows through the load.

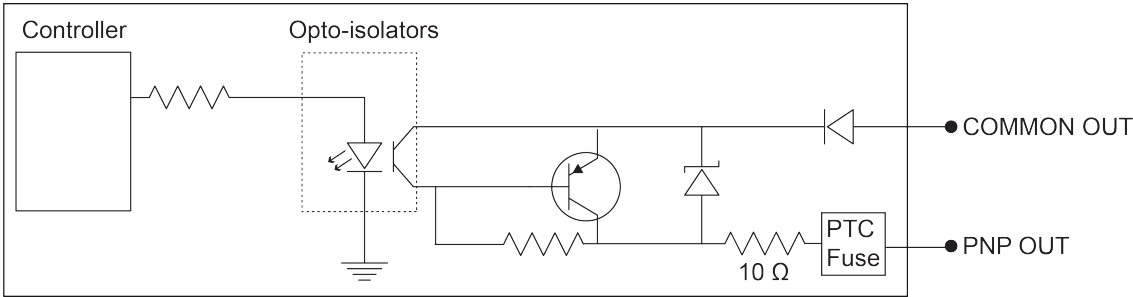


¹ When connected to the Breakout cable, the vision system allows for bi-directional, general-purpose inputs and high-speed outputs for IN 2 / HSOUT 2 and IN 3 / HSOUT 3. These lines are configured as outputs by default.


² Delay when opto-isolators turn OFF depends on the load to which the output is connected. With a 470 Ohm load, the maximum delay will be 200µs.

High-Speed Output Wiring


To connect to an NPN-compatible PLC input, connect one of the vision system's high-speed outputs directly to the PLC input. When enabled, the output pulls the PLC input down to less than 3VDC.

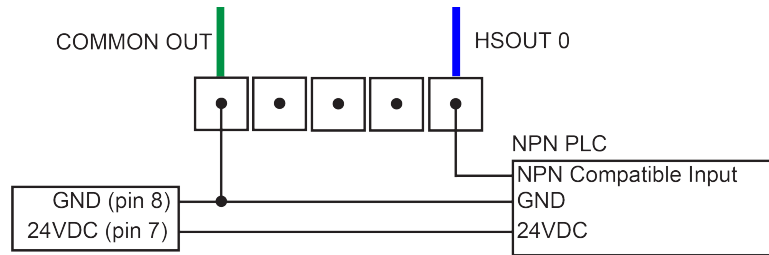

To connect to a PNP-compatible PLC input, connect one of the vision system's high-speed outputs directly to the PLC input. When enabled, the output pulls the PLC input up to greater than 21VDC.

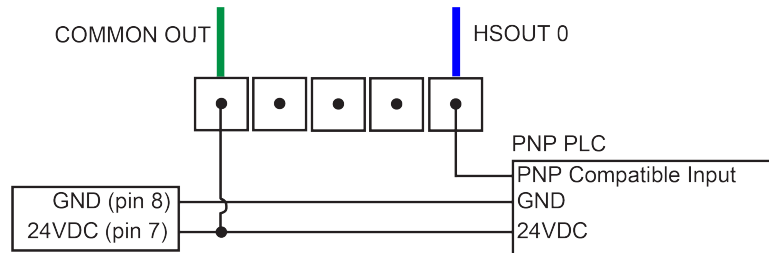


To connect the high-speed outputs to a relay, LED or similar load, connect the negative side of the load to the output and the positive side to +24VDC. When the output switches on, the negative side of the load is pulled down to less than 3VDC, and 24VDC appears across the load. Use a protection diode for a large inductive load, with the anode connected to the output and the cathode connected to +24VDC.

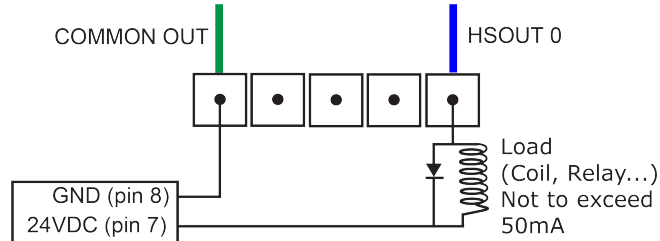

External Light Connector

The vision system's LIGHT connector is used to connect the External Light cable to an external lighting device, providing power and strobe control. The External Light cable can be connected to either a continuous or strobed lighting device. Before using an external lighting device, you must configure the light settings within In-Sight Explorer. For more information, refer to the Light Settings topic in the *In-Sight® Explorer Help* file.
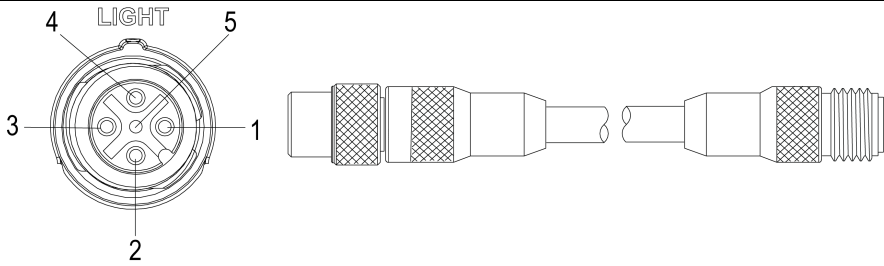
|  | | |
|--|-------------------|---------------|
| Pin# | Signal Name | Wire Color |
| 1 | +24VDC | Brown |
| 2 | Intensity Control | White |
| 3 | GND | Blue |
| 4 | Strobe | Black |
| 5 | Chassis | Not Connected |


Note:

- Cables are sold separately.
- Current load: 750 mA maximum. Only the +24VDC pin is capable of sourcing 750mA.
- Intensity Control is an analog signal that ranges from 0 to +10VDC, and is configurable within In-Sight Explorer. It is a control signal only, and must not be used to power an external device. Power should be sourced from +24VDC and GND. Verify the External Light cable and light support intensity control.
- The Strobe output is active low 0VDC and active high +12VDC, with the Polarity configurable within In-Sight Explorer. It is a control signal only and may not to be used for power. Power should be sourced from +24VDC and GND.



Ethernet Cable

The Ethernet cable provides Ethernet connectivity to the vision system.

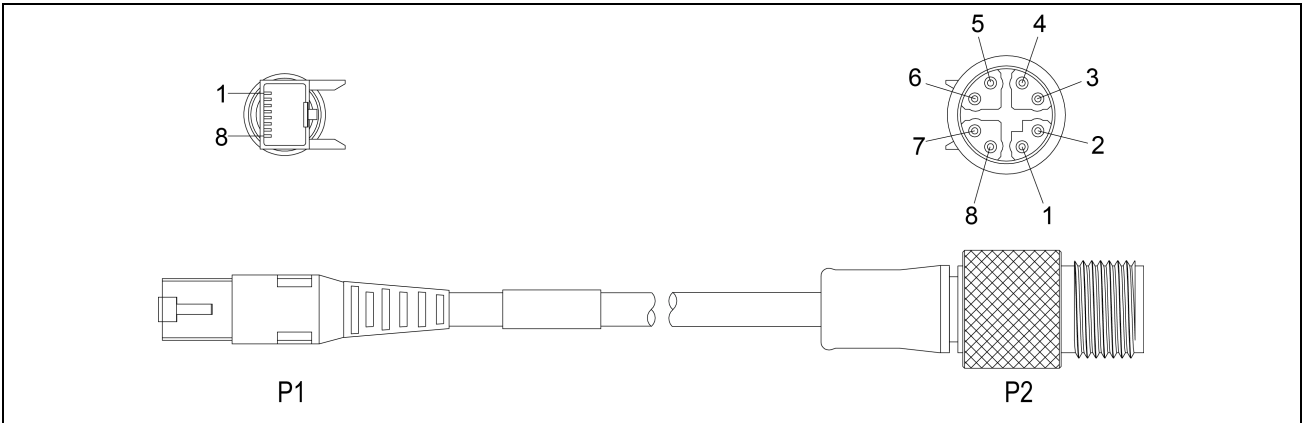

| P1 Pin Number | Wire Color | Signal Name | P2 Pin Number |
|---------------|--------------|-------------|---------------|
| 1 | White/Orange | TxRx A + | 1 |
| 2 | Orange | TxRx A - | 2 |
| 3 | White/Green | TxRx B + | 3 |
| 4 | Blue | TxRx C + | 8 |
| 5 | White/Blue | TxRx C - | 7 |
| 6 | Green | TxRx B - | 4 |
| 7 | White/Brown | TxRx D + | 5 |
| 8 | Brown | TxRx D - | 6 |


CAUTION: The Ethernet cable shield must be grounded at the far end. Whatever this cable is plugged into (typically a switch or router) should have a grounded Ethernet connector. A digital voltmeter should be used to validate the grounding. If the far end device is not grounded, a ground wire should be added in compliance with local electrical codes.

Note:

- Cables are sold separately.
- The wiring for this cable follows standard industrial Ethernet M12 specifications. It differs from the 568B standard.

Breakout Cable

The Breakout cable provides connections to an external power supply, the acquisition trigger input, general-purpose inputs, high-speed outputs, and RS-232 serial communications. The Breakout cable is not terminated.

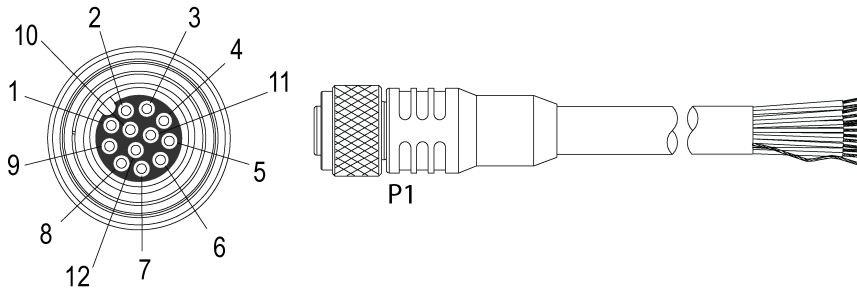

| Pin# | Signal Names | Wire Color |
|------|-----------------|--------------|
| 1 | IN 2 / HSOUT 2 | Yellow |
| 2 | RS-232 TRANSMIT | White/Yellow |
| 3 | RS-232 RECEIVE | Brown |
| 4 | IN 3 / HSOUT 3 | White/Brown |
| 5 | IN 1 | Violet |
| 6 | COMMON IN | White/Violet |
| 7 | +24VDC | Red |
| 8 | GND | Black |
| 9 | COMMON OUT | Green |
| 10 | TRIGGER | Orange |
| 11 | HSOUT 0 | Blue |
| 12 | HSOUT 1 | Grey |


Note:

- Cables are sold separately.
- Perform wiring or adjustments to I/O devices when the vision system is not receiving power.
- You can cut exposed wires short or trim wire ends. You also can tie the wires back if you use a tie made of non-conductive material. Keep bare wires separated from the +24VDC wire.
- When using the 15 meter Breakout cable, full 24VDC voltage must be maintained at the input leads of the Breakout cable when the vision system is operating.
- If hardware handshaking is required for serial communication, an I/O module must be used.



I/O Module Cable

The I/O Module cable connects the vision system directly to a compatible I/O module via the DB15 connector. When the I/O module is used, all power and communication lines used by the vision system are connected using the I/O Module cable.
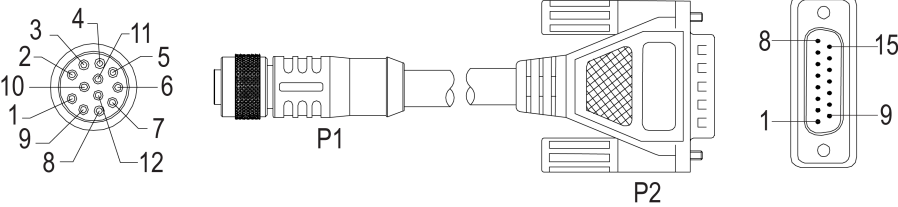
|  | | | | |
|--|-----------------|--------------|-----------------|----------|
| P1 Pin# | Signal Name | Wire Color | Signal Name | P2 Pin# |
| 1 | IN 2 / HS OUT 2 | Yellow | Not Used | Not Used |
| 2 | RS-232 TRANSMIT | White/Yellow | RS-232 RECEIVE | 7 |
| 3 | RS-232 RECEIVE | Brown | RS-232 TRANSMIT | 6 |
| 4 | IN 3 / HS OUT 3 | White/Brown | Not Used | Not Used |
| 5 | IN 1 | Violet | Not Used | Not Used |
| 6 | COMMON IN | White/Violet | TRIGGER- | 3 |
| 7 | +24VDC | Red | +24VDC | 1 |
| 8 | GND | Black | -24VDC | 8 |
| 9 | COMMON OUT | Green | -24VDC | 8 |
| 10 | TRIGGER | Orange | TRIGGER+ | 2 |
| 11 | HS OUT 0 | Blue | HS OUT 0 | 4 |
| 12 | HS OUT 1 | Grey | HS OUT 1 | 5 |

Note: Cables are sold separately.

Dimensions



The following sections list dimensions of the vision system and optional accessories.

7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System

Note:





- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

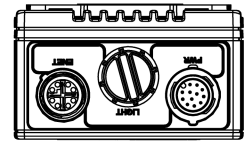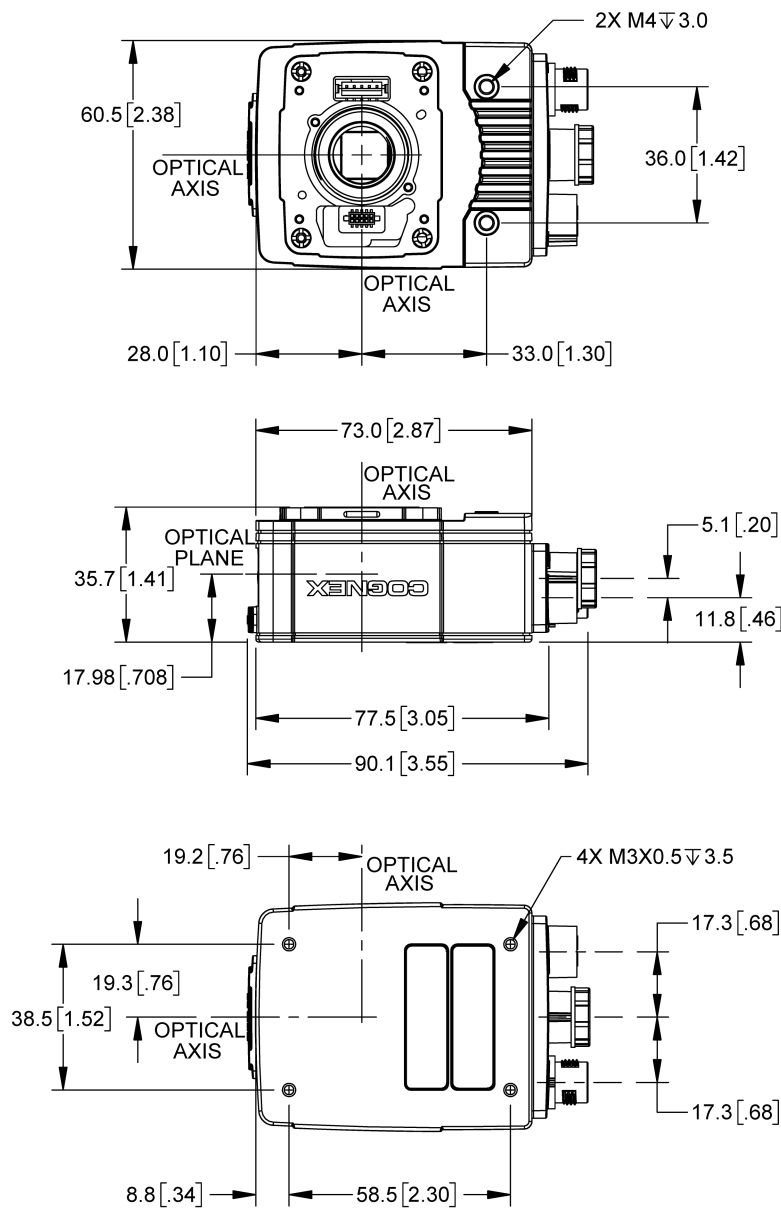

7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Cover (COV-7000-CMNT)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

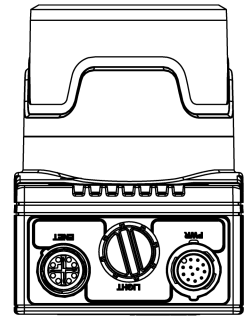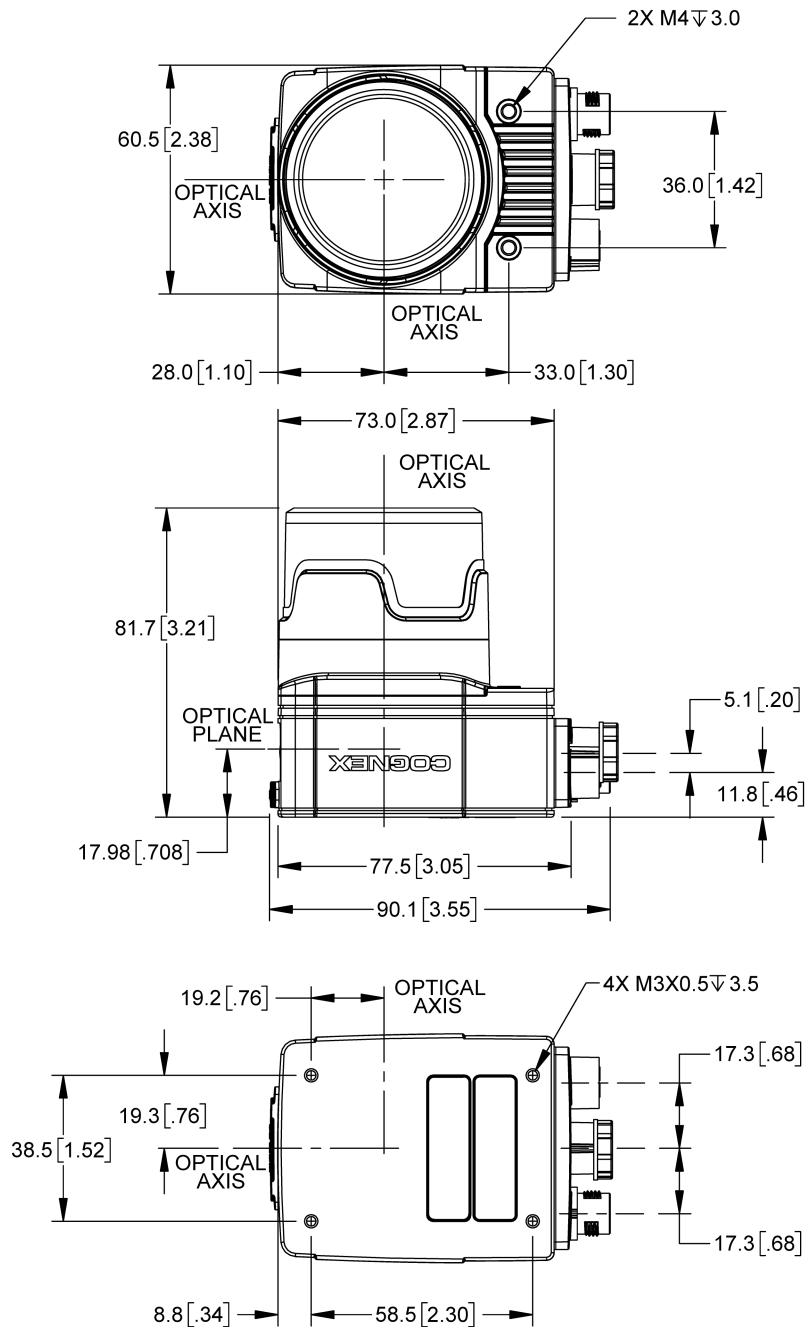

7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Cover (COV-7000-CMNT-EX)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

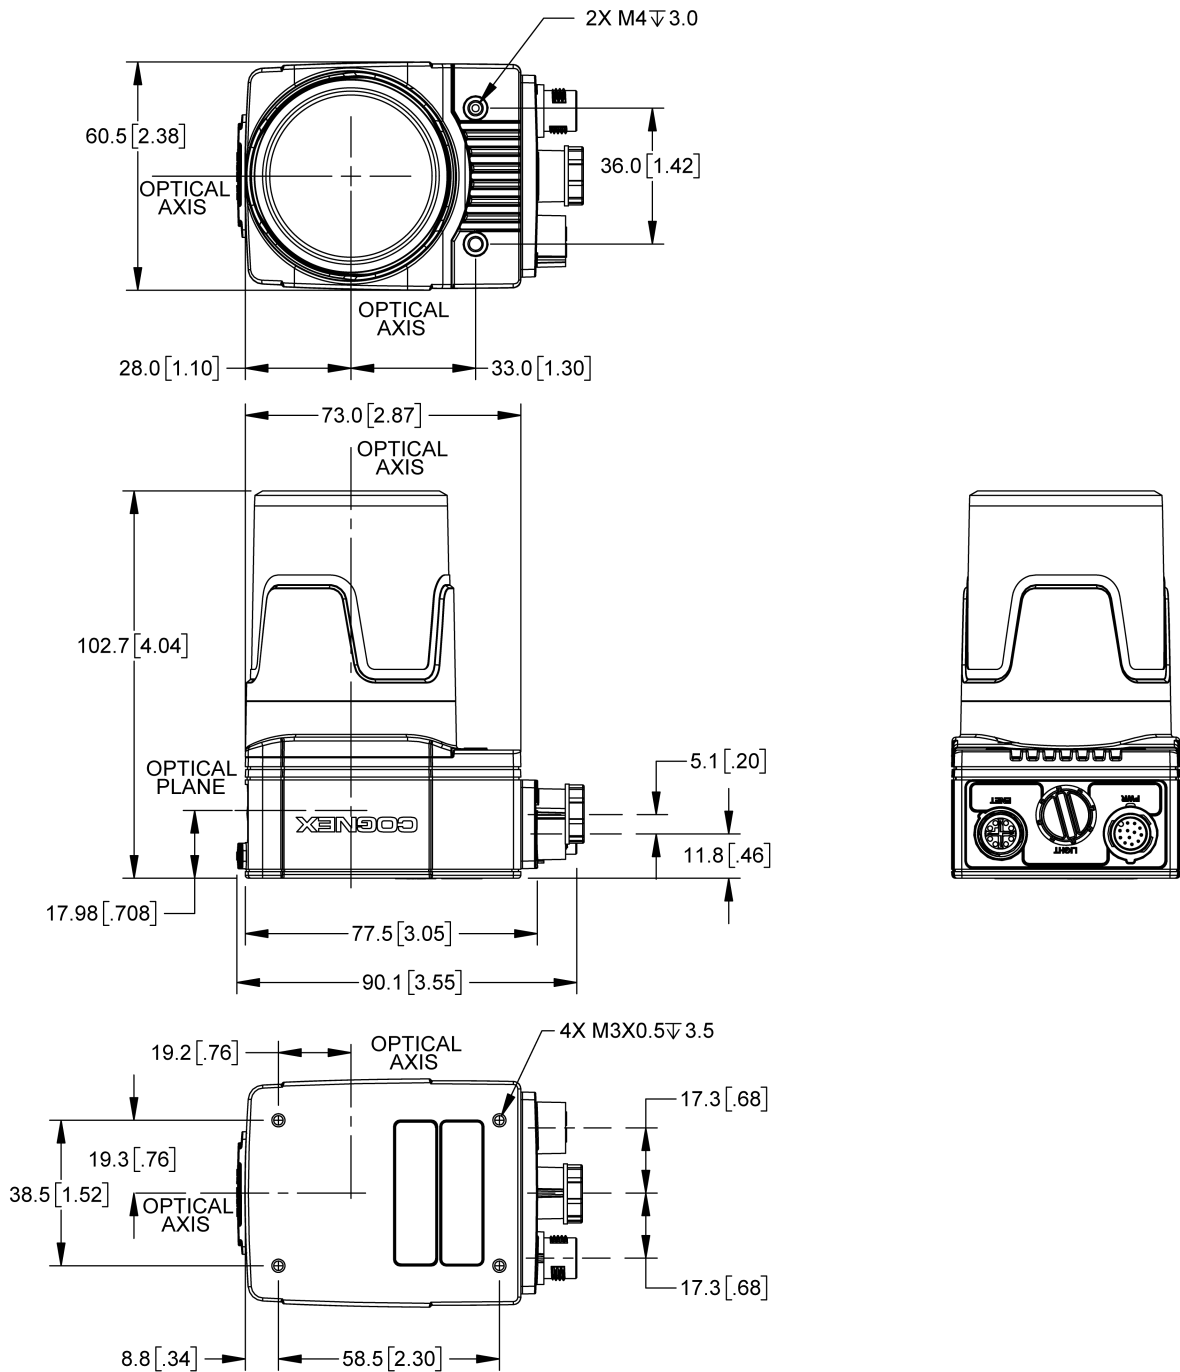

7500/7600 Series & 7800/7801/7802/7900/7901/7902 Vision System with Illumination (ISLM-7000-xxx)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

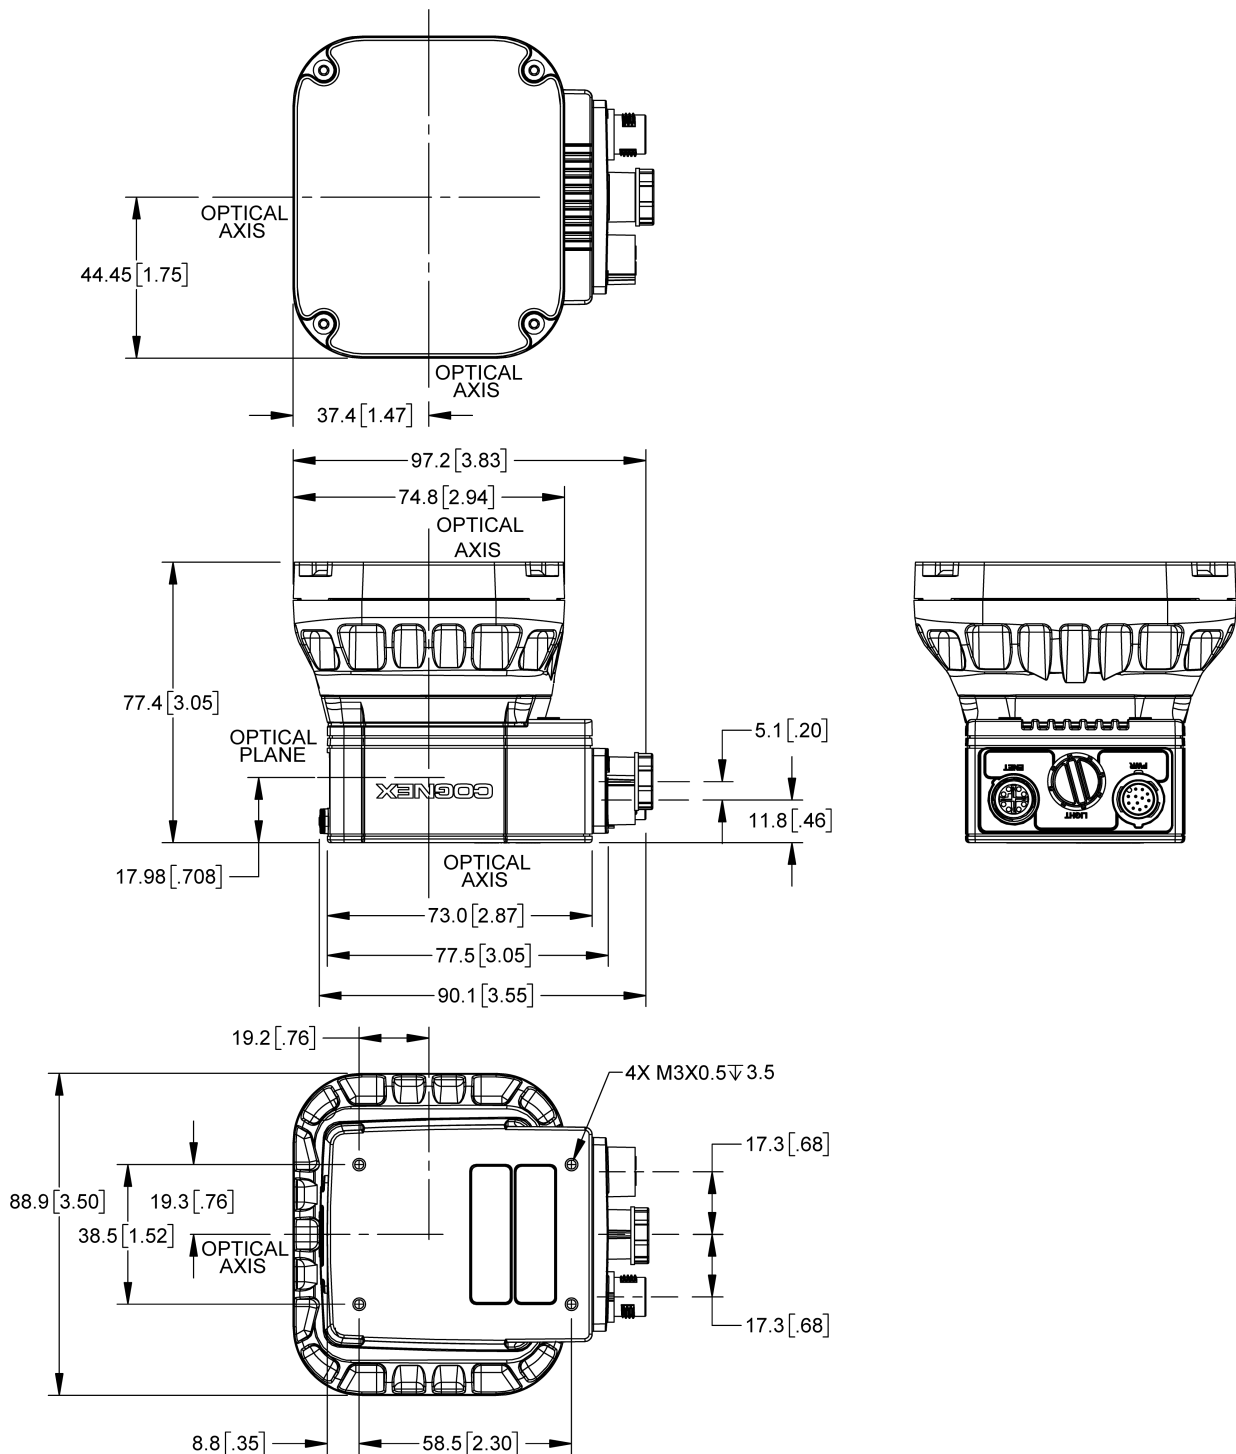

7802P/7902P/7905 Vision System

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

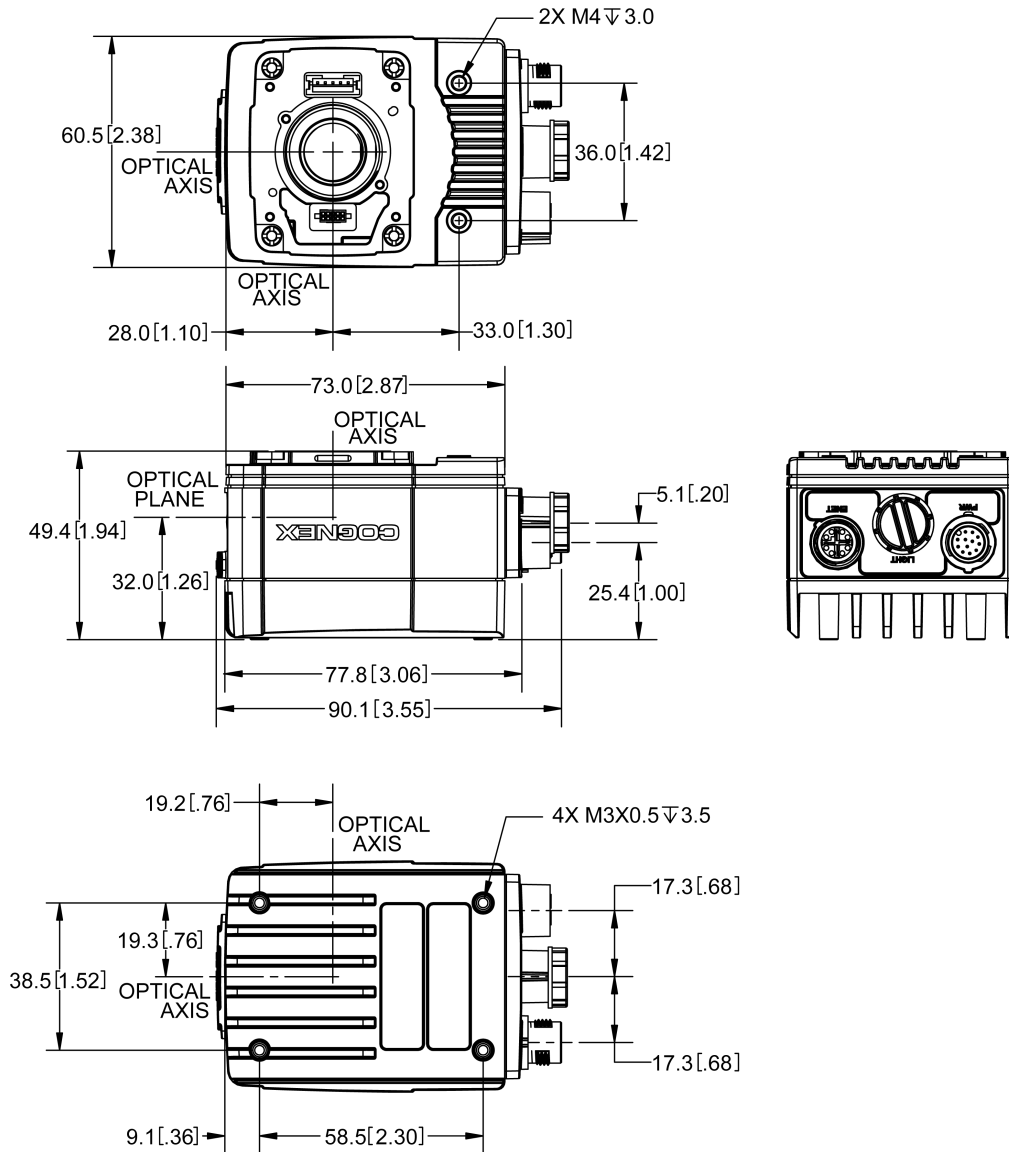

7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

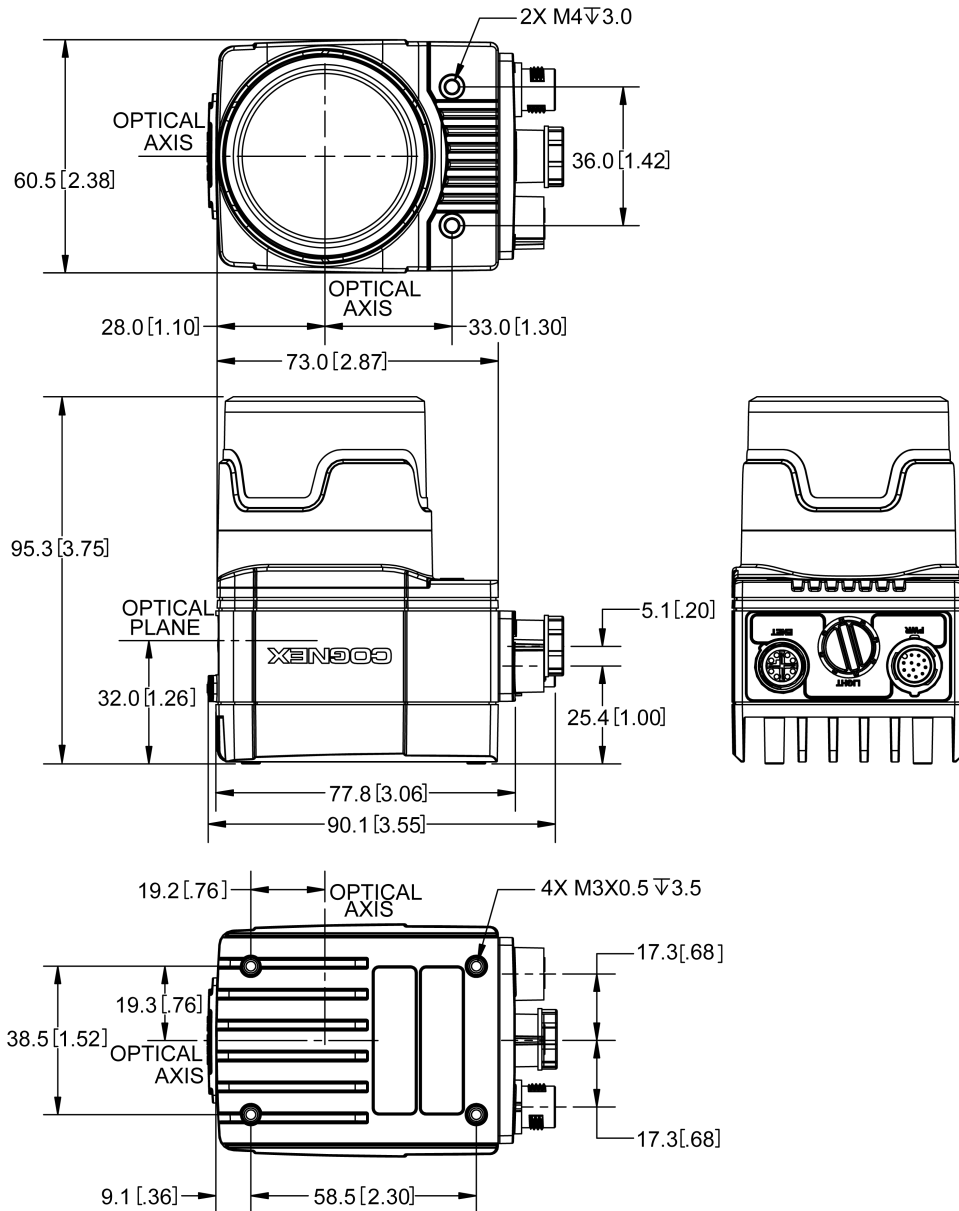

7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-EX)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

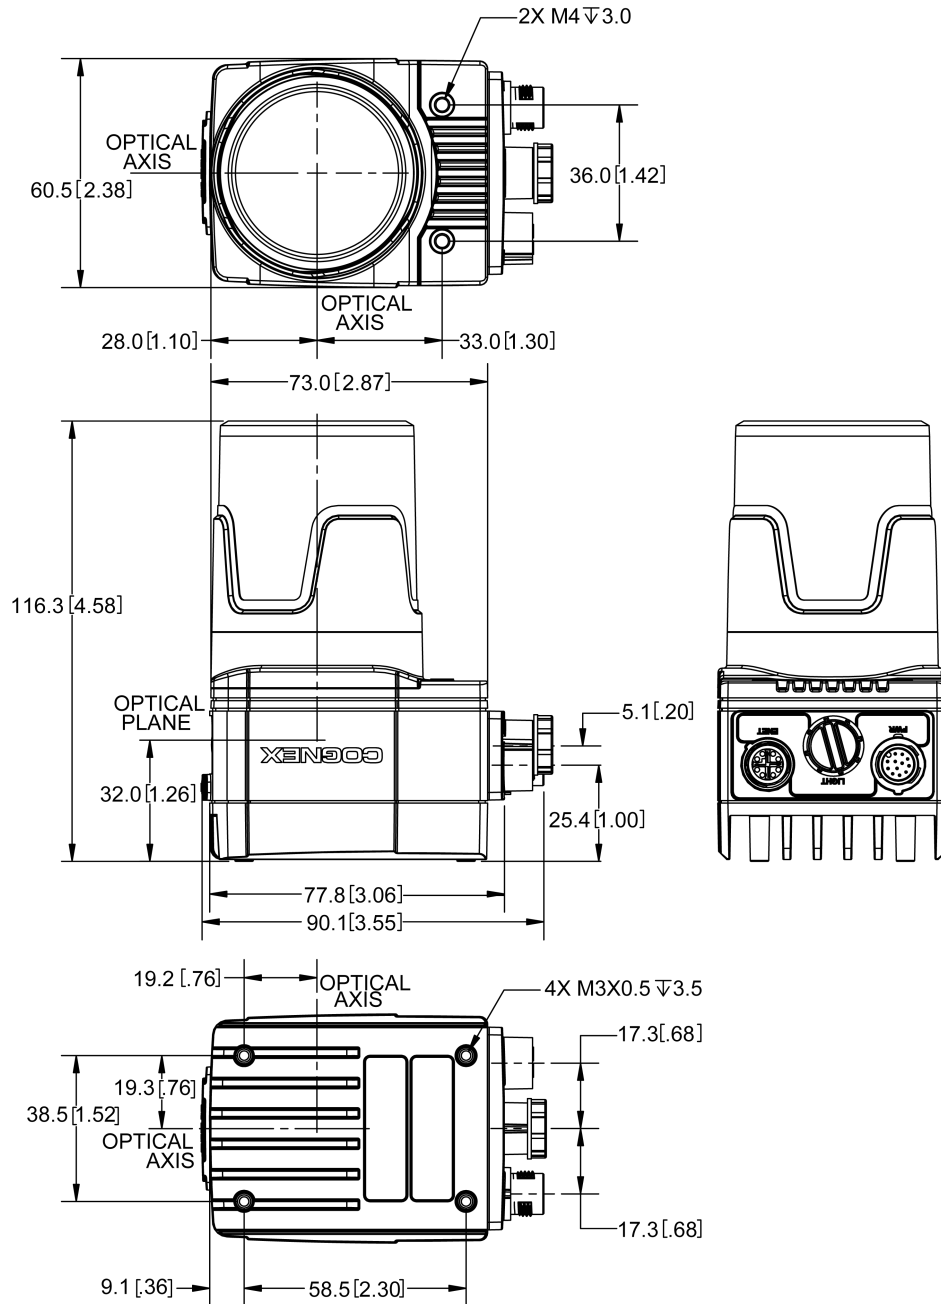

7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-LG)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

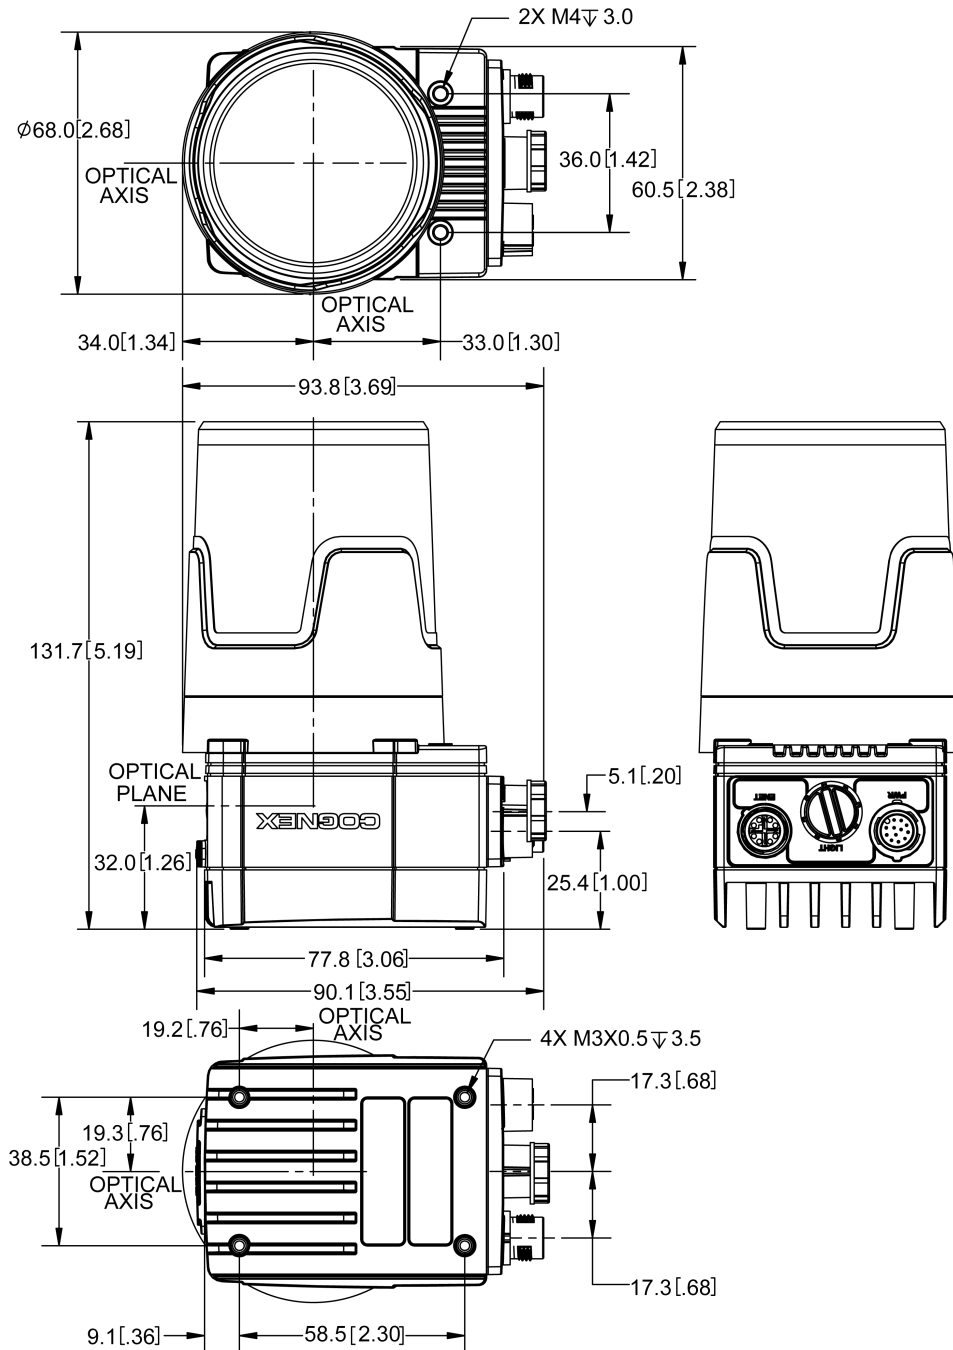

7802P/7902P/7905 Vision System with Cover (COV-7000-CMNT-LG) and Extender (COV-7000-CMNT-LGX)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

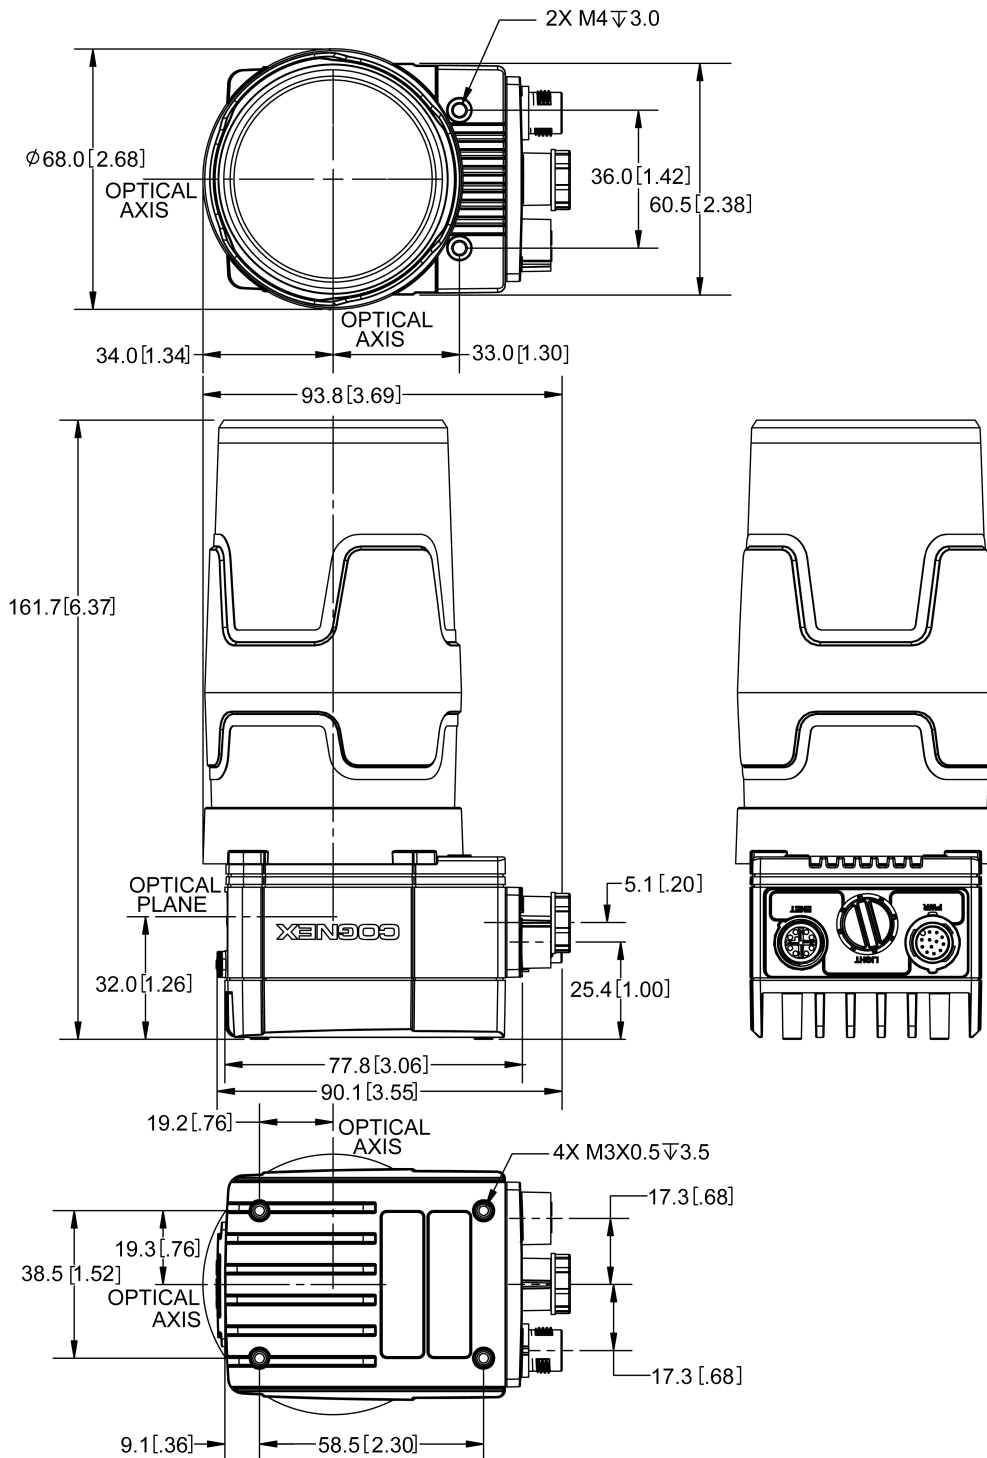

7802P/7902P/7905 Vision System with Illumination (ISLM-7000-xxx)

Note:


- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

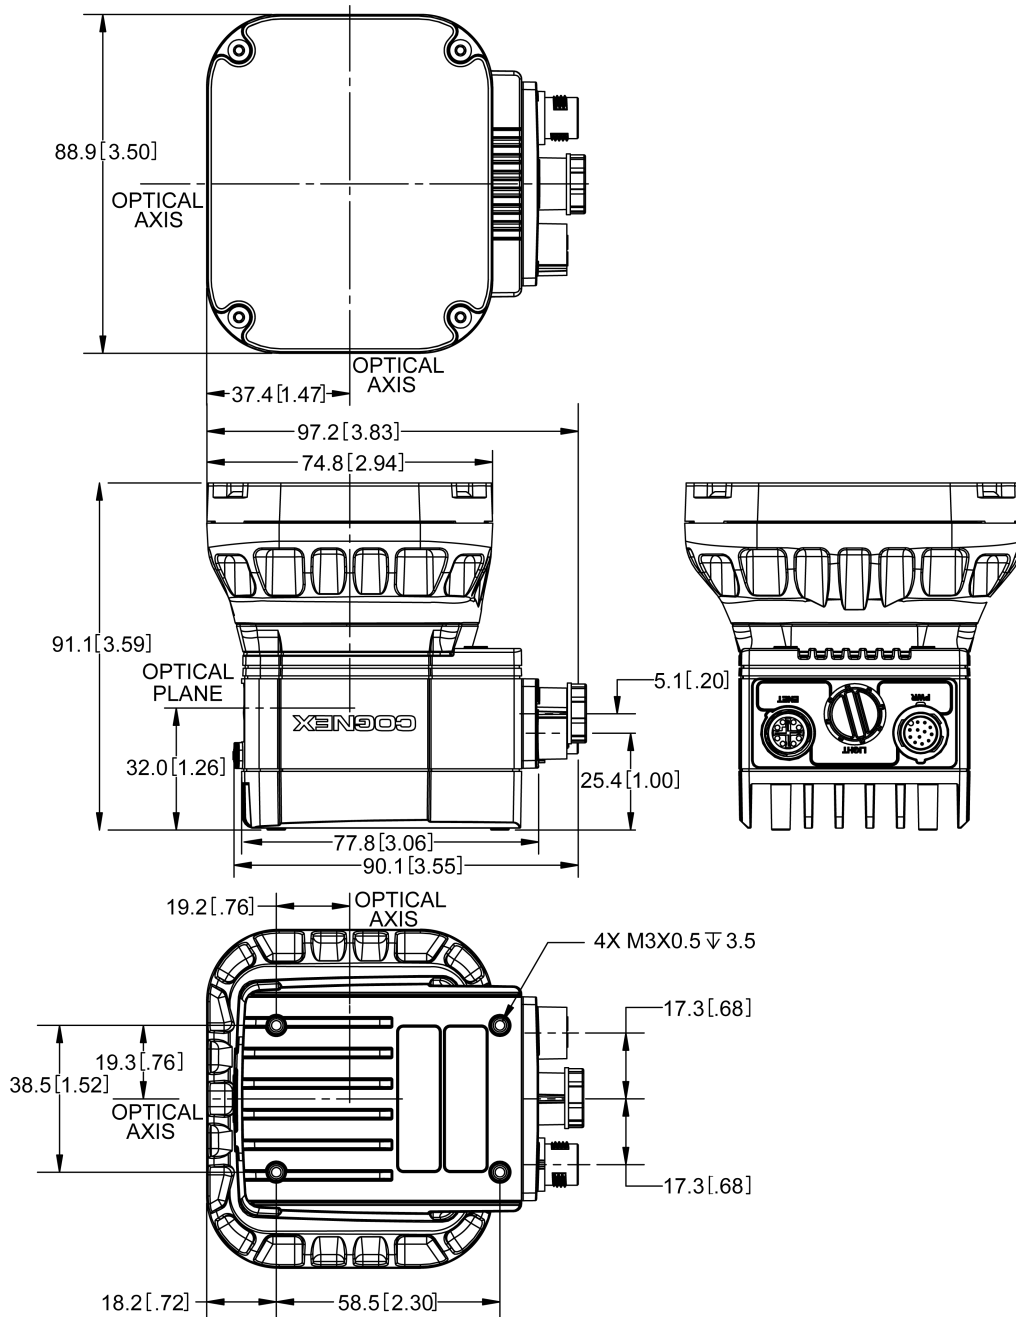


Mounting Bracket (BKT-INS-01)

Note:



- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

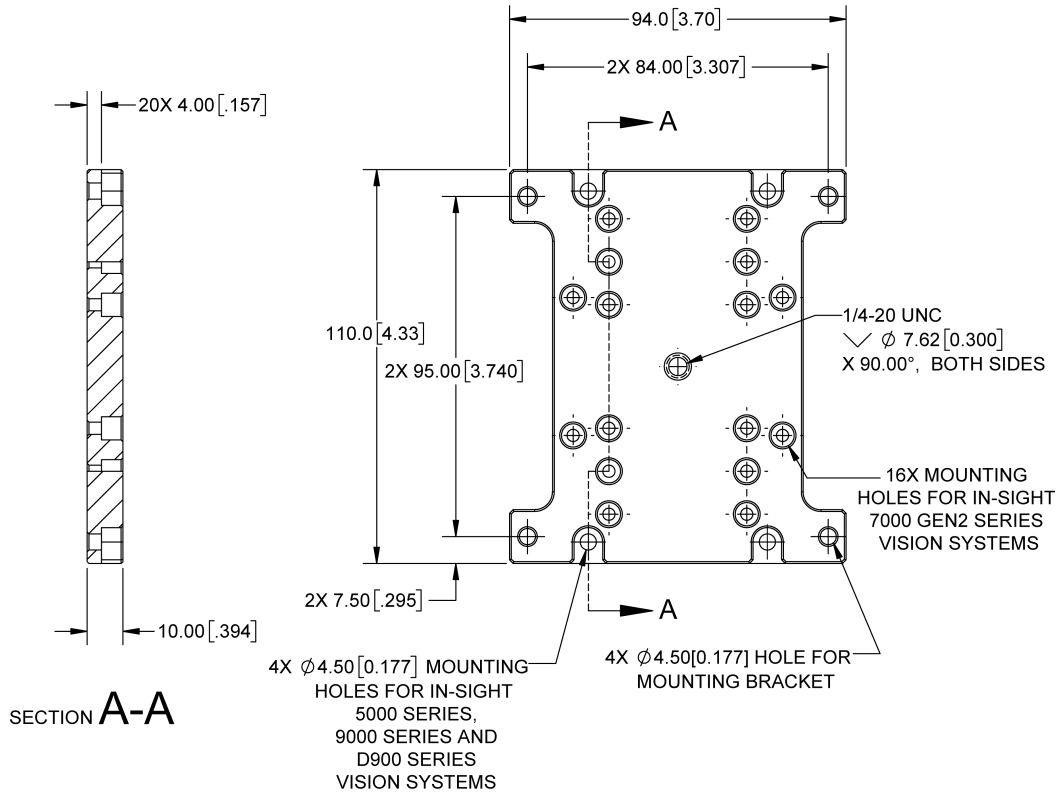




Converter Mounting Bracket (ISB-7000-5K)

Note:


- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

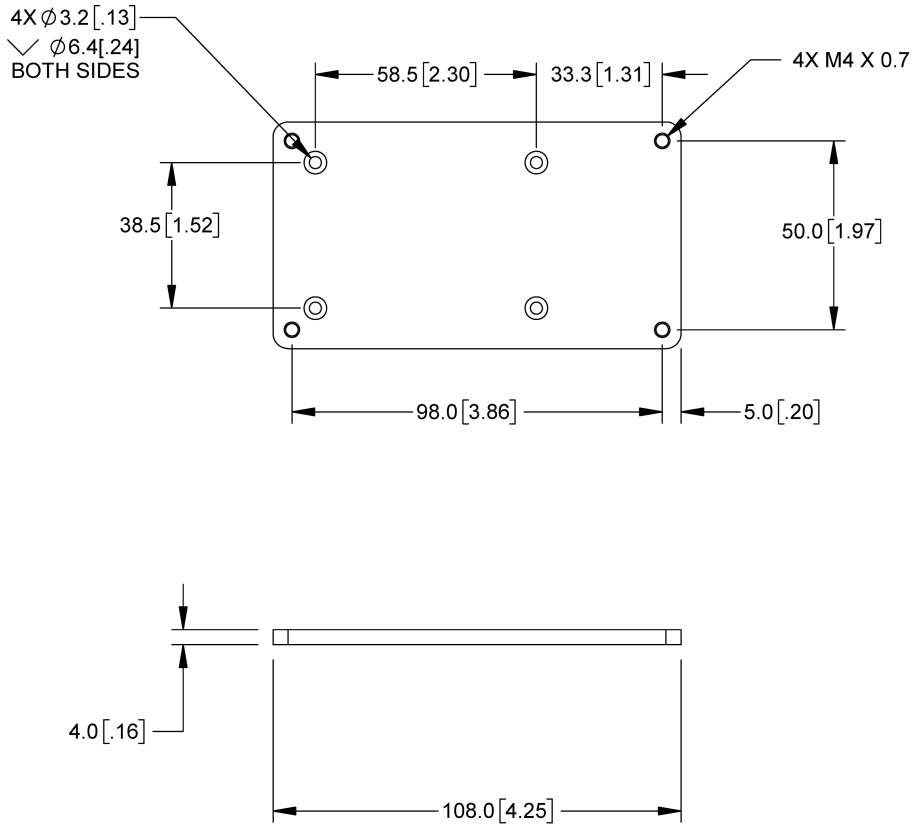

C-Mount Lens Clearance Dimensions

Note:

- When using a C-Mount lens, the following restrictions apply:
 - Maximum thread length is 5.25mm.
 - The C-Mount lens threads and body cannot protrude more than 6.5mm in length into the vision system when screwed in unless the diameter of the back lens is smaller than 14.75mm. If the C-Mount lens threads and body protrude more than 6.5mm, you can add a spacer between the lens and vision system. However, the spacer decreases the working distance.
- Dimensions are in millimeters [inches] and are for reference purposes only.
- All specifications are for reference purposes only and can change without notice.

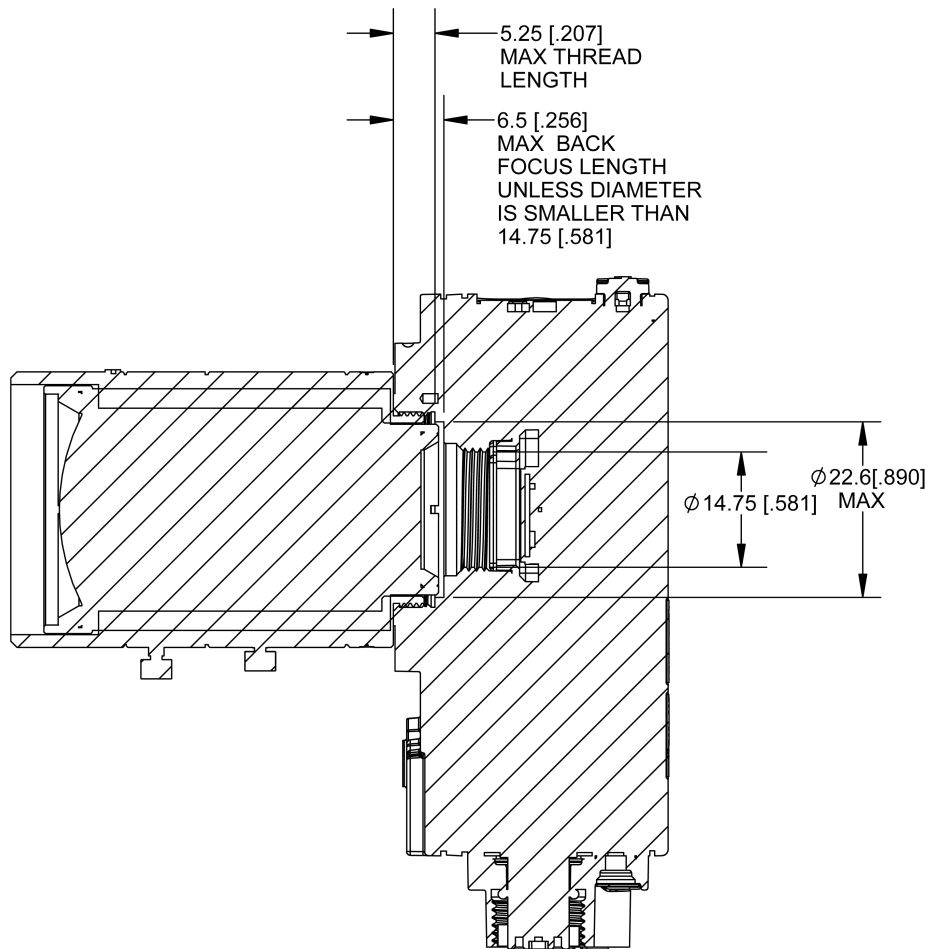

Cleaning/Maintenance

Clean the Housing

To clean the outside of the vision system housing, use a small amount of mild detergent cleaner or isopropyl alcohol on a cleaning cloth. Do not pour the cleaner on the vision system housing.



CAUTION: Do not attempt to clean any DataMan product with harsh or corrosive solvents, including lye, methyl ethyl ketone (MEK) or gasoline.

Clean the Image Sensor Window

To remove dust from the outside of the image sensor window, use a pressurized air duster. The air must be free of oil, moisture or other contaminants that could remain on the glass and possibly degrade the image. Do not touch the glass window. If oil or smudges remain, use a cotton bud and alcohol (ethyl, methyl, or isopropyl) to clean the window. Do not pour the alcohol on the window.


Clean the Cover

To remove dust from the lens cover, use a pressurized air duster. The air must be free of oil, moisture or other contaminants that could remain on the lens cover. To clean the plastic window of the lens cover, use a small amount of isopropyl alcohol on a cleaning cloth. Do not scratch the plastic window. Do not pour the alcohol on the plastic window.


Appendix

Mechanical Vignetting

All lenses are designed to cover a certain “image circle” size, which can be found in the lens manufacturer’s specification. The image circle size is the diameter of the optical image the lens can produce. If a vision system has 2/3” image sensor, you must use a lens that produces at least a 2/3” image circle.

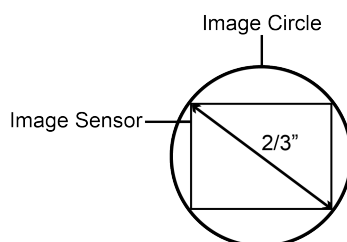


Otherwise, the lens optics will not cover the image sensor, resulting in dark corners. The mismatch of image circle to image sensor size is one cause of mechanical vignetting.

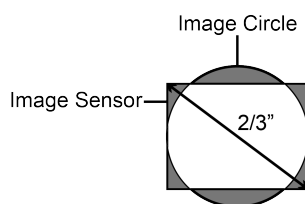

The In-Sight 7905 vision system has a 2/3” image sensor. The S-Mount/M12 lenses used in the autofocus module (ISAF-7000-8mm) and the S-Mount/M12 adapter kit (ISLN-7000-SMNT) have a smaller image circle. Therefore, these S-Mount lenses will cause mechanical vignetting when used with the In-Sight 7905 vision system, and the corners of the image will be cropped to the size of the lens.

Here is an example of mechanical vignetting when using the In-Sight 7905 vision system with an 8mm S-Mount/M12 lens at a 100mm working distance:

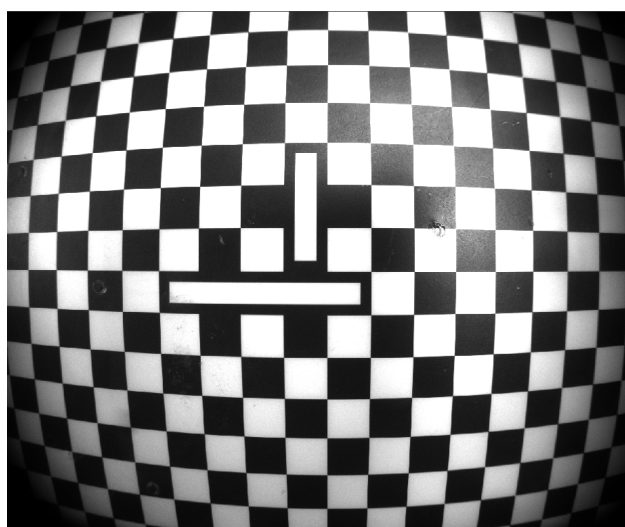


Remove the Illumination Accessory PCB


If the illumination accessory (ISLM-7000-WHI) must be uninstalled from the vision system, complete the following steps to safely remove the PCB and avoid damage to the vision system.

CAUTION: Do not hot-plug the illumination accessory. Verify the vision system is not receiving power when connecting or disconnecting the illumination accessory. Failure to remove power during this procedure may result in damage to the vision system and/or the illumination accessory.

1. Remove power from the vision system.
2. Use a 2mm hex wrench to remove the four spacer screws. Remove the spacer.

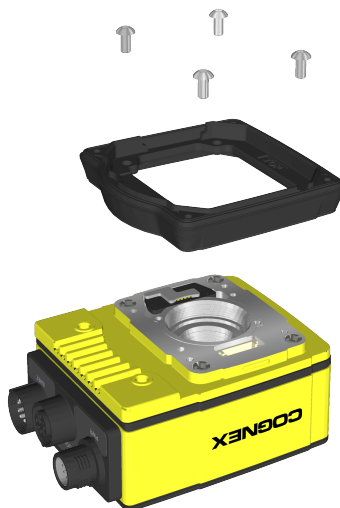

3. The vision system faceplate includes two lift points on either side of the PCB. Position an insulated extractor tool (for example, Jonard Tools S-340 DIP/IC Extractor) under the edges of the PCB.

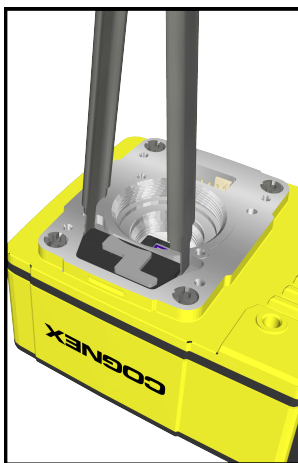

4. Once the extractor is engaged under the edges of the PCB, gently pull upward to disengage the PCB from the internal connector and remove the PCB.



5. Verify the removal process did not damage mating components.

